



Lochinvar®

HIGH EFFICIENCY BOILERS & WATER HEATERS

PARTS & SERVICE DEPARTMENT

Nashville, Tennessee

 
877-554-5544 • Fax: 615-882-2918

parts_team@lochinvar.com


www.Lochinvar.com

Replacement Parts List


FTXL®
Heating Boilers
FTX1000(N/L)

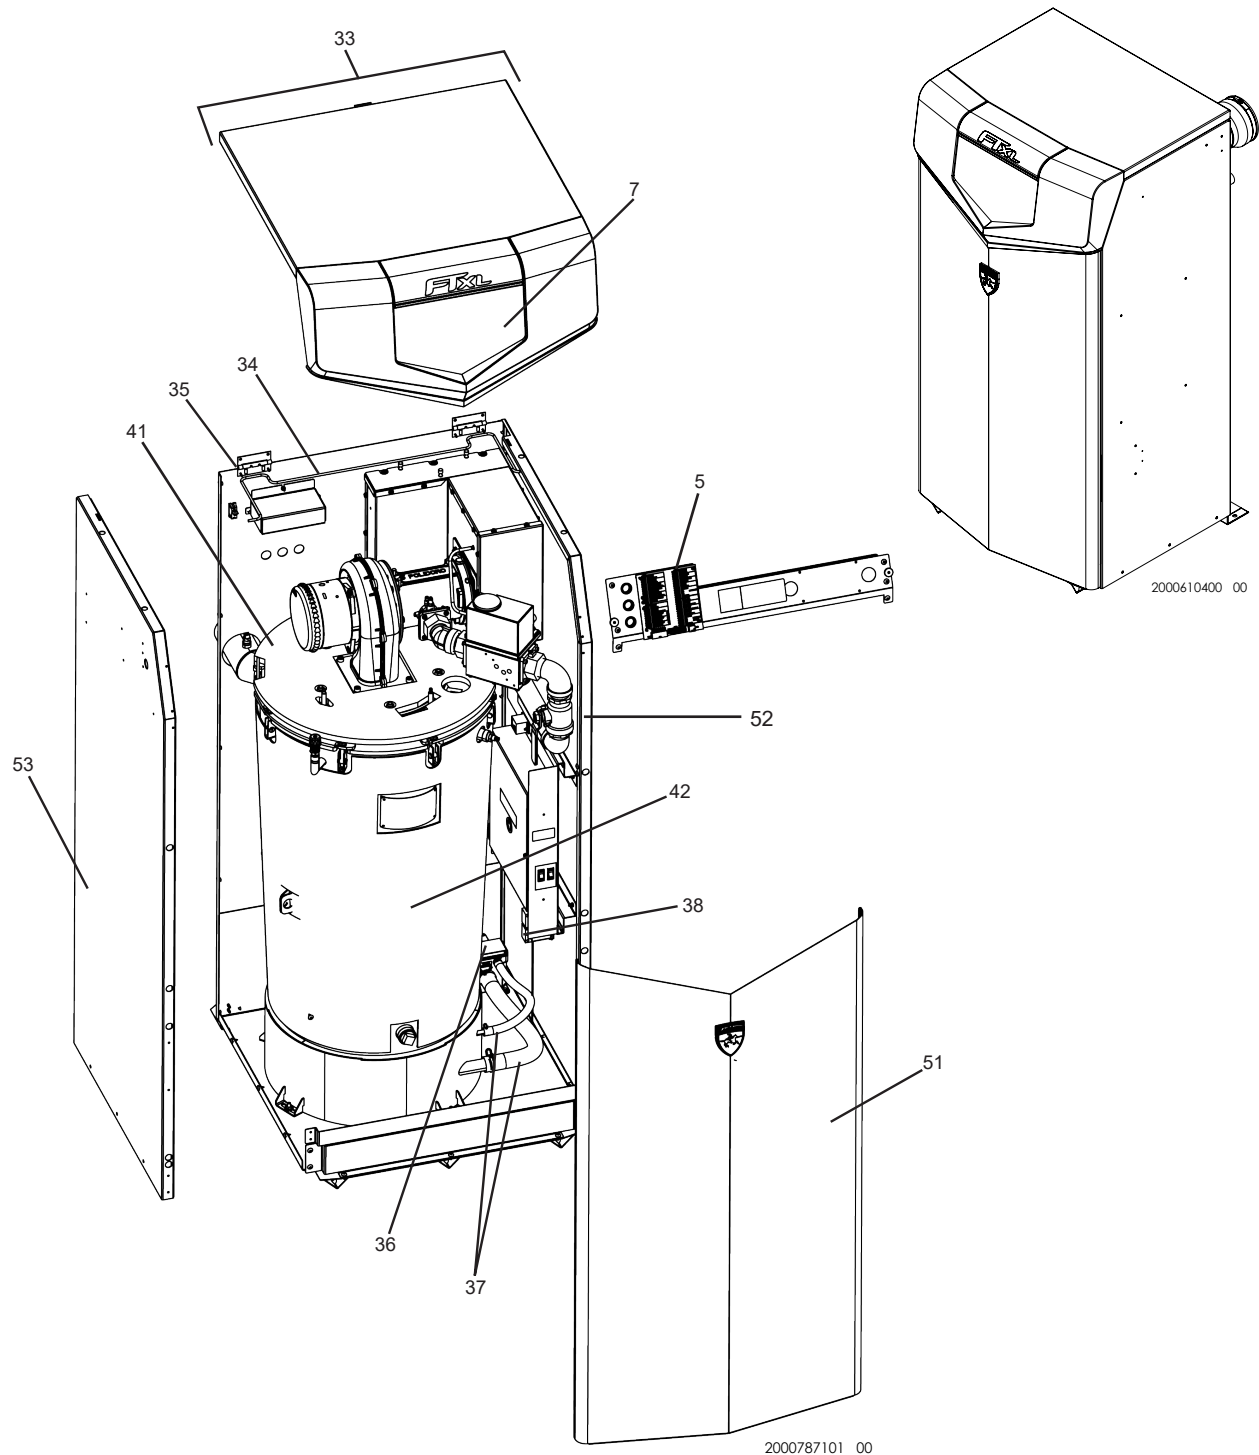


CONTROL PANEL

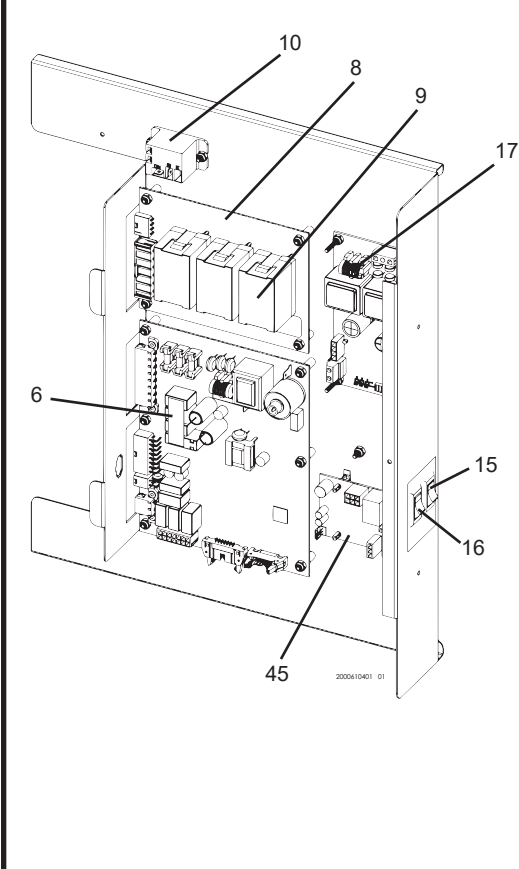 

HEAT EXCHANGER

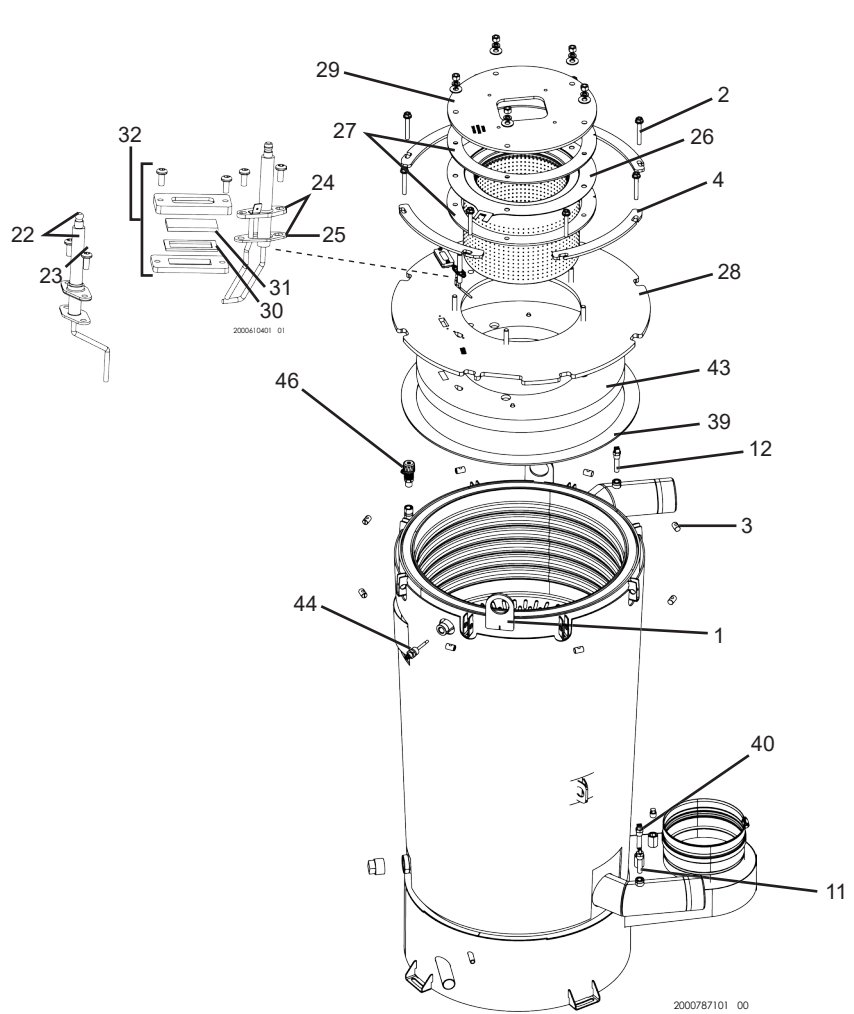 

GAS TRAIN

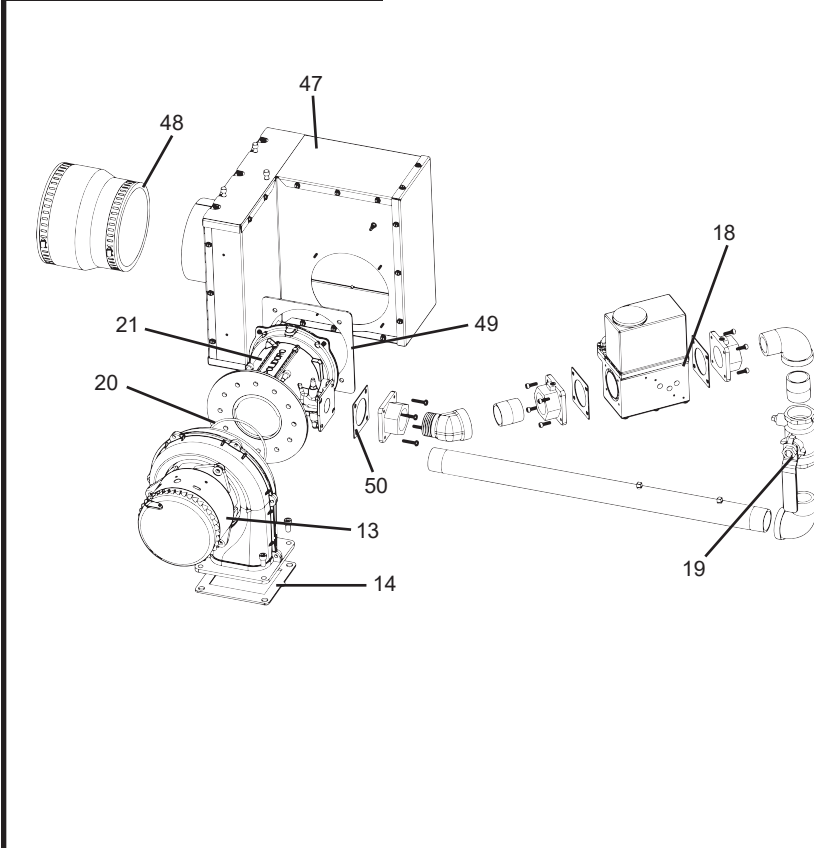 

ITEM NO.	PART NO.	DESCRIPTION	MODEL
HEAT EXCHANGER ASSEMBLY			
1	100341241	HEAT EXCHANGER COMPLETE	FTX1000
2	100288875	BOLT, HEX	FTX1000
3	100288876	NUT, HEX	FTX1000
4	100341242	WASHER, HEX	FTX1000
-	100301832	FLUE GASKET, 6" MODELS	FTX1000
CONTROLS			
5	100277838*	LOW VOLTAGE CONNECTION BOARD	FTX1000
6	100346582	INTEGRATED CONTROL BOARD	FTX1000
6	100346588	INTEGRATED CONTROL BOARD - HIGH ALTITUDE	FTX1000
7	100372220	USER INTERFACE CONTROL	FTX1000
8	100208493*	PUMP RELAY BOARD, 1.5 HP	FTX1000
9	100208502*	RELAY, 1.5 HP PUMP	FTX1000
10	100208509*	RELAY, 120VAC, 60HZ, 10.8 AMP	FTX1000
11	100208549*	INLET SENSOR	FTX1000
12	100208544*	OUTLET SENSOR/ HIGH LIMIT	FTX1000
13	100341245	FAN ASSEMBLY	FTX1000
14	100288878	GASKET, FAN	FTX1000
15	100277798	MOMENTARY SWITCH, BLACK - 20 AMP, 125 VOLT	FTX1000
16	100277797	MOMENTARY SWITCH, RED - 20 AMP, 125 VOLT	FTX1000
17	100277771	MODBUS INTERFACE BOARD-MTR-01	FTX1000
GAS VALVES (CONTINUED)			
18	100341246	GAS VALVE ASSEMBLY NAT	FTX1000
18	100341248	GAS VALVE ASSEMBLY LP	FTX1000
19	100294593	GAS CUT OFF VALVE 1.25"	FTX1000
20	100233705*	GASKET, FAN / VENTURI	FTX1000
21	100359326	VENTURI ASSEMBLY - NATURAL	FTX1000
21	100359328	VENTURI ASSEMBLY - LP	FTX1000
PILOT & BURNER ASSEMBLIES			
22	100165923*	FLAME SENSOR W/ GASKET	FTX1000
23	100233664	GASKET, FLAME SENSOR	FTX1000
24	100165924*	IGNITOR W/ GASKET	FTX1000
25	100233662	GASKET, IGNITOR	FTX1000
26	100341244	BURNER W/ GASKET	FTX1000
27	100288893*	GASKET, BURNER	FTX1000
28	100341258	HEAT EXCHANGER DOOR ASSEMBLY	FTX1000
29	100341259	PLATE, FAN HEAT EXCHANGER ASSEMBLY	FTX1000
MISCELLANEOUS			
30	100274750	SIGHT GLASS	FTX1000
31	100274752	GASKET, SIGHT GLASS - WHITE	FTX1000
32	100189215	KIT, SIGHT GLASS W/ GASKETS	FTX1000
33	100367813	DISPLAY BEZEL ASSEMBLY	FTX1000
34	100288909	BEZEL PROP ROD	FTX1000
35	100288910	HINGE SPRING	FTX1000
36	100277718	CONDENSATE TRAP (PRIOR TO SERIAL #1741)	FTX1000
36	100284709	CONDENSATE TRAP (BEGINNING SERIAL #1741)	FTX1000
37	100288163	HOSE, CONDENSATE	FTX1000
38	100208246	TRANSFORMER, 24V, 60VA	FTX1000
39	100341260*	HEAT EXCHANGER GASKET SET	FTX1000
40	100208561*	SENSOR, FLUE TEMP	FTX1000
41	100341262	TOP INSULATION	FTX1000
42	100341263	BLANKET INSULATION	FTX1000
43	100341264	BURNER FIBERBOARD	FTX1000
44	100309672	PROBE, LOW WATER CUT-OFF	FTX1000
45	100276822*	LOW WATER CUT-OFF - AUTO / MANUAL RESET	FTX1000
46	100167445	AIR VENT VALVE	FTX1000
47	100341266	AIR INLET KIT	FTX1000
48	100375765	COUPLING, AIR INLET, 5"X6"	FTX1000
49	100341267	GASKET, VENTURI INLET	FTX1000
50	100208105	GASKET, GAS VALVE	FTX1000
PLEASE HAVE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS *ITEMS DENOTE SUGGESTED INVENTORY PARTS			

ITEM NO.	PART NO.	DESCRIPTION	MODEL
MISCELLANEOUS (CONTINUED)			
-	100208242	ON / OFF SWITCH W/ I-O SYMBOL	FTX1000
-	100208442	PRESSURE RELIEF VALVE, 3/4", 50 PSI	FTX1000
-	100208834	OUTDOOR AIR SENSOR	FTX1000
-	100208152	GAUGE TRIOMETER, 75 PSI	FTX1000
-	100208552	SENSOR, SYSTEM / INLET	FTX1000
-	100346594	WIRE HARNESS, UNIT	FTX1000
-	100346592	WIRE HARNESS, POWER	FTX1000
-	100346596	HARNESS, COMMUNICATION CABLE	FTX1000
-	100278061	WIRE HARNESS, FLAME SENSOR ELECTRODE	FTX1000
-	100208620	WIRE HARNESS, SPARK ELECTRODE	FTX1000
-	100299111	WIRE HARNESS, GAS VALVE	FTX1000
-	100170645	SYSTEM SENSOR KIT W/ BULBWELL	FTX1000
-	100341351	INSTALLATION KIT	FTX1000
-	100341272	LP CONVERSION KIT	FTX1000
-	100289703	PRESSURE SWITCH	FTX1000
JACKET ASSEMBLY			
51	100341269	JACKET, OUTER FRONT	FTX1000
52	100341270	JACKET, OUTER RIGHT	FTX1000
53	100341271	JACKET, OUTER LEFT	FTX1000

PLEASE HAVE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS
***ITEMS DENOTE SUGGESTED INVENTORY PARTS**