

REGENT

COMMERCIAL TANKLESS WATER HEATER

Installation & Operation Manual

 
Models: 500 - 1000

⚠ WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

-- This water heater **MUST NOT** be installed in any location where gasoline or flammable vapors are likely to be present.

-- WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a near by phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

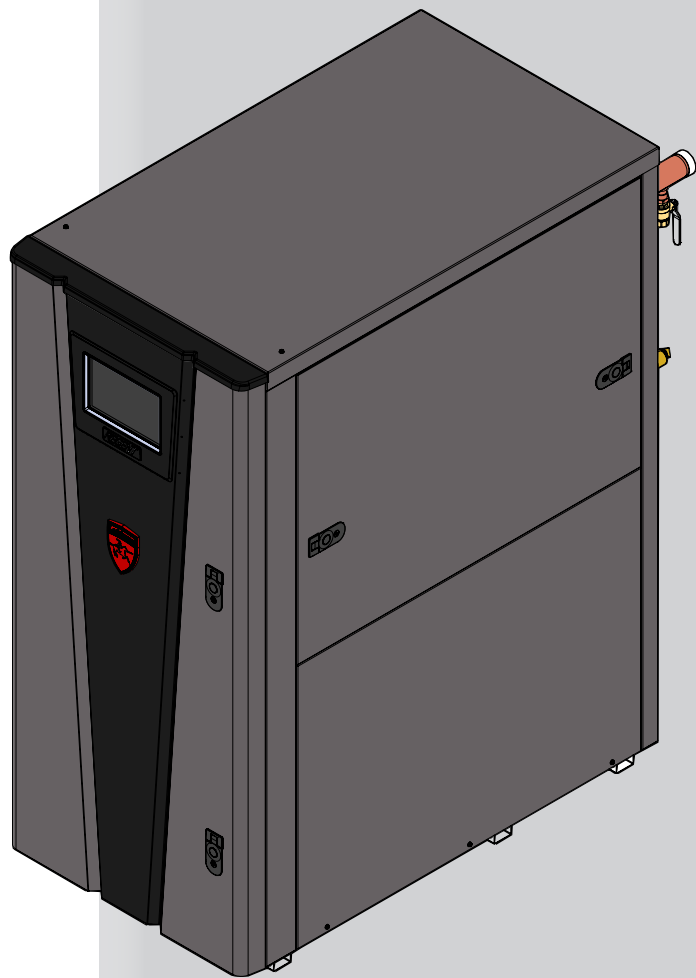

⚠ WARNING This manual must only be used by a qualified heating installer / service technician. Read all instructions, including this manual and the Regent Water Heater Service Manual, before installing. Perform steps in the order given. Failure to comply could result in severe personal injury, death, or substantial property damage.

Save this manual for future reference.



Lochinvar[®]
HIGH EFFICIENCY BOILERS & WATER HEATERS

Contents

| | | | |
|--|-------|--|------------|
| HAZARD DEFINITIONS | 2 | 6. OUTDOOR INSTALLATIONS | |
| PLEASE READ BEFORE PROCEEDING | 3 | Outdoor Venting | 40-41 |
| THE REGENT WATER HEATER-- HOW IT WORKS | 4-5 | Outdoor Vent / Air Inlet Location | 40-41 |
| PRODUCT SUMMARY | 6-7 | Location of Unit | 40 |
| RATINGS | 8 | 7. SYSTEM PIPING | |
| 1. DETERMINE WATER HEATER LOCATION | | System Water Piping Methods | 42 |
| Provide Clearances | 9 | Scalding | 42 |
| Provide Air Openings to Room | 11 | Water Chemistry | 43 |
| Flooring and Foundation | 11 | Piping Components | 43 |
| Residential Garage Installation | 11 | Piping Diagrams | 44-45 |
| Vent and Air Piping | 11 | 8. GAS CONNECTIONS | |
| Prevent Combustion Air Contamination | 11 | Connecting Gas Supply Piping | 46 |
| Corrosive Contaminants and Sources | 12 | Natural Gas | 47 |
| Using an Existing Vent System to Install a New Water Heater | 12 | Pipe Sizing for Natural Gas | 47 |
| Removing a Water Heater from Existing Common Vent .. | 13 | Natural Gas Supply Pressure Requirements | 47 |
| 2. PREPARE WATER HEATER | | Propane Gas | 47 |
| Remove Water Heater from Wood Pallet | 14 | Pipe Sizing for Propane Gas | 47 |
| Combustion Air Filter | 14 | Propane Supply Pressure Requirements | 47 |
| 3. GENERAL VENTING | | Check Inlet Gas Supply | 49 |
| Direct Venting Options | 15 | Gas Pressure | 50 |
| Install Vent and Combustion Air Piping | 16 | Gas Valve Replacement | 50 |
| Requirements for Installation in Canada | 17 | 9. FIELD WIRING | |
| Sizing | 17 | Line Voltage Connections | 51-52 |
| Min./Max. Combustion Air & Vent Piping Lengths | 17 | Low Voltage Connections | 52 |
| Materials | 18 | Wiring of the Cascade | 54 |
| Optional Room Air | 19 | 10. CONDENSATE DISPOSAL | |
| PVC/CPVC | 20 | Condensate Drain | 55 |
| Polypropylene | 21 | 11. START-UP | 56-64 |
| Stainless Steel Vent | 22 | 12. OPERATING INFORMATION | |
| 4. SIDEWALL DIRECT VENTING | | General | 65 |
| Vent/Air Termination - Sidewall | 24-33 | Cascade | 67 |
| Determine Location | 24-28 | Sequence of Operation | 68 |
| Prepare Wall Penetrations | 29 | Regent Water Heater Control Module | 69 |
| Multiple Vent/Air Terminations | 30 | 13. MAINTENANCE | |
| Sidewall Termination - Optional Concentric Vent | 31-33 | Maintenance & Annual Startup | 70-74 |
| 5. VERTICAL DIRECT VENTING | | 14. DIAGRAMS | |
| Vent/Air Termination - Vertical | 34-39 | Ladder Diagram | 75 |
| Determine Location | 34 | Wiring Diagram | 76 |
| Prepare Roof Penetrations | 35 | Revision Notes | Back Cover |
| Multiple Vent/Air Terminations | 35 | | |
| Vertical Termination - Optional Concentric Vent ... | 36-37 | | |
| Alternate Vertical Concentric Venting | 38-39 | | |

Hazard definitions

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels or to important information concerning the life of the product.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTICE

NOTICE indicates special instructions on installation, operation, or maintenance that are important but not related to personal injury or property damage.

Please read before proceeding

⚠ WARNING **Installer** – Read all instructions, including this manual and the Regent Water Heater Service Manual, before installing. Perform steps in the order given.

Have this water heater serviced/inspected by a qualified service technician, at least annually.

Failure to comply with the above could result in severe personal injury, death, or substantial property damage.

NOTICE

When calling or writing about the water heater – Please have the water heater model and serial number from the water heater rating plate.

Consider piping and installation when determining water heater location.

Any claims for damage or shortage in shipment must be filed immediately against the transportation company by the consignee.

Factory warranty (shipped with unit) does not apply to units improperly installed or improperly operated.

⚠ WARNING Failure to adhere to the guidelines on this page can result in severe personal injury, death, or substantial property damage.

⚠ WARNING If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

-- This water heater **MUST NOT** be installed in any location where gasoline or flammable vapors are likely to be present.

-- WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING DO NOT install units in rooms or environments that contain corrosive contaminants (see Table 1A). Failure to comply could result in severe personal injury, death, or substantial property damage.

⚠ WARNING The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the State of California to cause cancer, birth defects, or other reproductive harm, and requires businesses to warn of potential exposure to such substances.

This product contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm. This water heater can cause low level exposure to some of the substances listed in the Act.

DO NOT install the water heater in a location likely to freeze.

⚠ DANGER Freezing Conditions: If this appliance may have been exposed to freezing conditions, you **MUST** prevent from firing. Shut off power and gas to the appliance immediately and contact the factory for further instructions. Allowing the appliance to fire when the heat exchanger or near water heater piping is frozen will result in death or serious injury, and significant property damage.

When servicing the water heater –

- To avoid electric shock, disconnect electrical supply before performing maintenance.
- To avoid severe burns, allow the water heater to cool before performing maintenance.

Water heater operation –

- Do not block flow of combustion or ventilation air to the water heater.
- Should overheating occur or gas supply fail to shut off, do not turn off or disconnect electrical supply to circulator. Instead, shut off the gas supply at a location external to the appliance.
- Do not use this water heater if any part has been under water. The possible damage to a flooded appliance can be extensive and present numerous safety hazards. Any appliance that has been under water must be replaced.
- The installer must verify that at least one carbon monoxide alarm has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable local codes before putting the appliance into operation.

The Regent Water Heater - How it works...

- 1. Stainless steel heat exchanger**
Allows water to flow through specially designed coils for maximum heat transfer, while providing protection against flue gas corrosion. The coils are encased in a jacket that contains the combustion process.
- 2. Combustion chamber access cover**
Allows access to the combustion side of the heat exchanger coils.
- 3. Blower**
The blower pulls in air and gas through the venturi (item 5). Air and gas mix inside the blower and are pushed into the burner, where they burn inside the combustion chamber.
- 4. Gas valve**
The gas valve controls the flow of gas into the venturi. It allows gas to flow only if the gas regulator is powered and combustion air is flowing.
- 5. Venturi (not shown)**
The venturi controls air and gas flow into the burner.
- 6. Flue gas sensor (limit rated, not shown)**
This sensor monitors the flue gas exit temperature. The control module will modulate and shut down the water heater if the flue gas temperature gets too hot. This protects the flue pipe from overheating.
- 7. Water heater outlet temperature sensor (housed with the high limit sensor)**
This sensor monitors water heater outlet water temperature (system supply). The control adjusts firing rate so the outlet temperature meets the setpoint.
- 8. Water heater inlet temperature sensor**
This sensor monitors the inlet water temperature (system return) to the water heater.
- 9. Flow Switch**
The flow switch is a safety device that ensures flow through the heat exchanger primary coils during operation. The flow switch makes contact when flow is detected and allows the unit to operate. If primary coil flow is discontinued during operation for any reason the flow switch will break the control circuit and the unit will shut down.
- 10. Electronic display**
Digital controls with SMART TOUCH screen technology, full color display, and an 10" user interface screen.
- 11. Flue pipe adapter**
Allows for the connection of the PVC vent pipe system to the water heater.
- 12. Burner (not shown)**
Made with metal fiber and stainless steel construction, the burner uses pre-mixed air and gas and provides a wide range of firing rates.
- 13. Water outlet**
Water connection that supplies hot water to the system.
- 14. Water inlet**
Water connection that supplies water to the water heater.
- 15. Gas connection pipe**
Threaded pipe connection. This pipe should be connected to the incoming gas supply for the purpose of delivering gas to the water heater.
- 16. Boiler Integrated Control (BIC) Board**
The BIC responds to internal and external signals and controls the blower, gas valve, and pumps to meet the demand.
- 17. Air intake adapter**
Allows for the connection of the PVC air intake pipe to the water heater.
- 18. High voltage junction box**
The junction box contains the connection points for the line voltage power. It also houses the relay for the internal pump.
- 19. Water heater drain port**
Location from which the heat exchanger can be drained.
- 20. Low voltage junction box**
The junction box contains the connection points for external low voltage devices.
- 21. Low voltage wiring connections (knockouts)**
Conduit connection points for the low voltage connection board.
- 22. Condensate drain connection**
Connects the heat exchanger condensate drain to the supplied condensate trap
- 23. Access door - front (not shown)**
Provides access to the gas train and the heat exchanger.
- 24. Ignition electrode**
Provides direct spark for igniting the burner.
- 25. Flame inspection window**
The quartz glass window provides a view of the burner surface and flame.
- 26. Gas shutoff valve (not shown)**
Manual valve used to isolate the gas valve from the gas supply.
- 27. High limit sensor (housed with the outlet temperature sensor)**
Device that monitors the outlet water temperature. If the temperature exceeds its setting, the integrated control will break the control circuit, shutting the water heater down.
- 28. Relief valve**
Protects the heat exchanger from over pressure conditions. The relief valve is set at 150 PSI.
- 29. Flame sensor**
Used by the control module to detect the presence of burner flame.
- 30. Line voltage wiring connections (knockouts)**
Conduit connection points for the high voltage junction box.
- 31. Top panel**
Removable panel to gain access to the internal components.
- 32. Power switch**
Turns 120VAC ON/OFF to components outside the high voltage junction box.
- 33. Air box**
The air box houses the combustion air filter.
- 34. Combustion Feedback Board**
The Combustion Feedback board responds to internal and external signals and controls the fan, and gas and air dampers to meet the demand.
- 35. Blower relay**
The blower relay is used to control the blower.
- 36. Transformers**
There are three (3) transformers located on the main control panel. Each transformer provides 24VAC to specific components within the control circuit.
- 37. Air filter**
The air filter prevents dirt and debris from entering the burner.
- 38. Damper actuator motors (2)**
The damper actuator motors move both the air and gas dampers independently. The damper actuator motors are part of the air intake assembly.
- 39. O2 Sensor**
The O2 (Oxygen) Sensor senses the amount of oxygen in the flue products within the combustion chamber and sends the information to the control system.

The Regent Water Heater - How it works...

40. Safety shutoff regulating actuator with POC

The safety shutoff actuator senses the negative pressure created by the blower, allowing gas to flow only if the valves are powered and combustion air is flowing.

41. Internal circulation pump

The internal circulation pump circulates water through the primary coils of the heat exchanger. This pump is powered at all times.

42. Water flow sensor

The water flow sensor measures the water flow rate into the water heater through the inlet pipe.


43. Commissioning drain valve

The commissioning drain valve is used to generate a hot water demand during the water heater commissioning process when a demand cannot be created using the hot water system.


44. Air pressure switches

The air pressure switches detect blocked flue/vent conditions.

 Models 500 - 1000

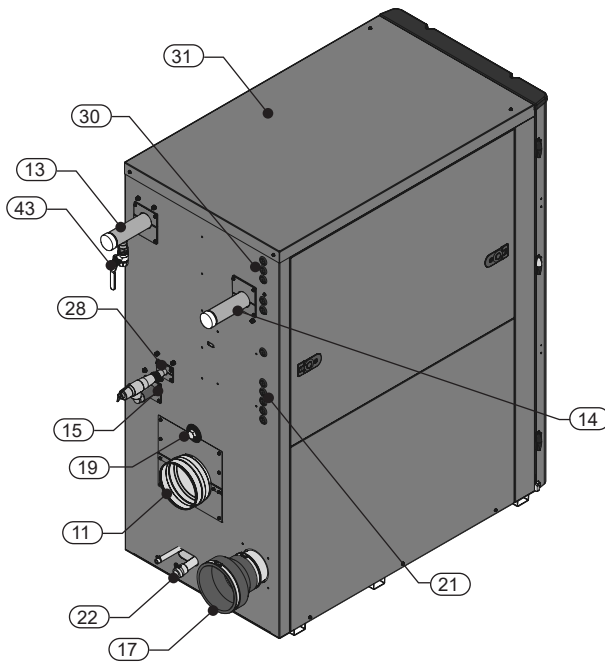

Rear View - Models 500 - 1000

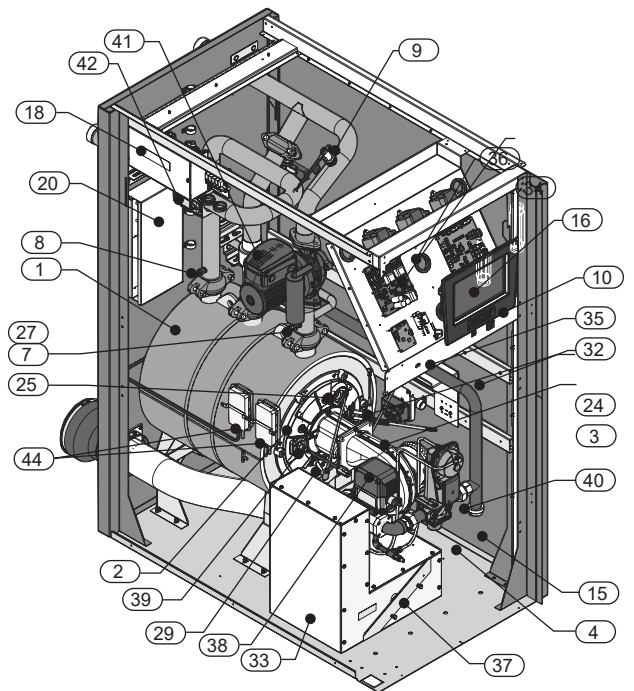 

Left Side (inside unit) - Models 500 - 1000

The Regent Water Heater - How it works...

PRODUCT SUMMARY

| | IWH0500 | IWH0750 | IWH1000 |
|------------------------------------|--------------|--------------|--------------|
| WATER | | | |
| GALLON CAPACITY | 6.0 | 7.1 | 9.6 |
| HEATING SURFACE (SQ. FT.) | 39.10 | 60.90 | 75.40 |
| WATER CONNECTION SIZE | 2" | 2" | 2" |
| WATER CONNECTION TYPE | SWEAT/GROOVE | SWEAT/GROOVE | SWEAT/GROOVE |
| DRAIN | 3/4" | 3/4" | 3/4" |
| MAXIMUM WATER FLOW RATE (GPM) | 50 | 70 | 75 |
| GPM @ 70F Rise | 14 | 21 | 27 |
| HEAD LOSS (FT. OF HD.) | 0 | 0 | 0 |
| GPM @ 100F Rise | 10 | 14 | 19 |
| HEAD LOSS (FT. OF HD.) | 0 | 0 | 0 |
| GPM @ 140F Rise | 7 | 10 | 14 |
| HEAD LOSS (FT. OF HD.) | 0 | 0 | 0 |
| MAX. WORKING PRESSURE (PSI) | 160 | 160 | 160 |
| MIN. WORKING PRESSURE (PSI) | 30 | 30 | 30 |
| MAX. WATER HARDNESS (GRAINS) | 15 | 15 | 15 |
| GPH @ 70°F RISE | 822 | 1236 | 1644 |
| GPH @ 100°F RISE | 576 | 864 | 1152 |
| GPH @ 140°F RISE | 408 | 612 | 822 |
| # OF RELIEF VALVES | 1 | 1 | 1 |
| RELIEF VALVE SIZE | 3/4 NPT | 3/4 NPT | 3/4 NPT |
| RELIEF VALVE RATING (MBH) | 2,703 | 2,703 | 2,703 |
| RELIEF VALVE PRESSURE RATING (PSI) | 150 | 150 | 150 |
| GAS | | | |
| INLET CONNECTION | 1" | 1" | 1-1/4" |
| MAX. INLET PRESSURE, NAT | 14.0" w.c. | 14.0" w.c. | 14.0" w.c. |
| MIN. INLET PRESSURE, NAT | 2.5" w.c. | 2.5" w.c. | 2.5" w.c. |
| MAX. INLET PRESSURE, LP | 14.0" w.c. | 14.0" w.c. | 14.0" w.c. |
| MIN. INLET PRESSURE, LP | 8.0" w.c. | 8.0" w.c. | 8.0" w.c. |
| BTU/HR INPUT | 500,000 | 750,000 | 1,000,000 |
| ELECTRICAL | | | |
| VOLTAGE & PHASE / HEATER | 120V / 1ø | 120V / 1ø | 120V / 1ø |
| TOTAL AMPS (FLA) | <12.5 | 17.5 | 17.5 |
| VOLTAGE / CONTROL | 24V | 24V | 24V |
| DIMENSIONS | | | |
| HEIGHT | 64" | 64" | 64" |
| WIDTH | 30" | 30" | 30" |
| DEPTH | 41" | 51" | 58" |

The Regent Water Heater - How it works...

PRODUCT SUMMARY continued

| | IWH0500 | IWH0750 | IWH1000 |
|----------------------------|--|---------|---------|
| SERVICE CLEARANCES | | | |
| FRONT | 36" | 36" | 36" |
| BACK | 24" | 24" | 24" |
| RIGHT SIDE | 0" | 0" | 0" |
| LEFT SIDE | 24" | 24" | 24" |
| TOP | 0" | 0" | 0" |
| DIRECT VENTING | | | |
| VENT CONNECTION SIZE | 4" | 6" | 6" |
| AIR INTAKE CONNECTION SIZE | 4" | 6" | 6" |
| VENT CATEGORY | IV | IV | IV |
| VENT MATERIAL (all models) | PVC / CPVC / Polypropylene / Stainless Steel | | |

Ratings



HLW



| Model Number Note: Change "N" to "L" for L.P. gas models. | CSA Input Modulation MBtu/hr | | Water Content Gallons | Water Connection | Gas Connection | Vent/Air Size |
|--|---------------------------------|-------|--------------------------|---------------------|----------------|---------------|
| | Min | Max | | | | |
| IWH0500(N) | 40 | 500 | 6.0 | 2" | 1" | 4"/4" |
| IWH0750(N) | 40 | 750 | 7.1 | 2" | 1" | 6"/6" |
| IWH1000(N) | 40 | 1,000 | 9.6 | 2" | 1-1/4" | 6"/6" |
| IWH0500(L) | 40 | 500 | 6.0 | 2" | 1" | 4"/4" |
| IWH0750(L) | 40 | 750 | 7.1 | 2" | 1" | 6"/6" |
| IWH1000(L) | 40 | 1000 | 9.6 | 2" | 1-1/4" | 6"/6" |

NOTICE

Maximum allowed working pressure is located on the rating plate.

Notes:

1. Regent water heaters require special gas venting. Use only the vent materials and methods specified in the IWH Installation and Operation Manual.
2. Standard Regent water heaters are equipped to operate from sea level to 4,500 feet only with no adjustments. For United States installations above 2,000 feet elevation, reference NFPA 54 for derate information. De-rate values are based on proper combustion calibration and CO₂ adjusted to the recommended levels.
3. High altitude Regent water heaters are equipped to operate above 2,000 feet elevation. See the chart for derate values for each model. Reference NFPA 54 for derate calculations for installations above 5,200 feet elevation.

| Model | Derate per 1,000 feet | |
|---------|-------------------------|-------------------------|
| | Derate up to 5,200 feet | Derate above 5,200 feet |
| IWH0500 | 0.2% | Reference NFPA 54 |
| IWH0750 | 0.3% | |
| IWH1000 | 0.4% | |

1 Determine water heater location

Installation must comply with:

- Local, state, provincial, and national codes, laws, regulations, and ordinances.
- National Fuel Gas Code, ANSI Z223.1 – latest edition.
- National Electrical Code.
- For Canada only: B149.1 Installation Code, CSA C22.1 Canadian Electrical Code Part 1 and any local codes.

NOTICE

The Regent water heater gas manifold and controls met safe lighting and other performance under tests specified in ANSI Z21.10.3 – latest edition.

Before locating the water heater, check:

1. Check for nearby connection to:
 - Water piping
 - Venting connections
 - Gas supply piping
 - Electrical power
2. Locate the appliance so that if water connections should leak, water damage will not occur. When such locations cannot be avoided, it is recommended that a suitable drain pan, adequately drained, be installed under the appliance. The pan must not restrict combustion air flow. Under no circumstances is the manufacturer to be held responsible for water damage in connection with this appliance, or any of its components.
3. Check area around the water heater. Remove any combustible materials, gasoline, and other flammable liquids.

WARNING

Failure to keep water heater area clear and free of combustible materials, gasoline, and other flammable liquids and vapors can result in severe personal injury, death, or substantial property damage.

4. The Regent water heater must be installed so that gas control system components are protected from dripping or spraying water or rain during operation or service.
5. If a new water heater will replace an existing water heater, check for and correct system problems, such as system leaks causing oxygen corrosion or heat exchanger cracks from hard water deposits.
6. Check around the water heater for any potential air contaminants that could risk corrosion to the water heater or the water heater combustion air supply (see Table 1A). Prevent combustion air contamination. Remove any of these contaminants from the water heater area.

WARNING

DO NOT install units in rooms or environments that contain corrosive contaminants (see Table 1A). Failure to comply could result in severe personal injury, death, or substantial property damage. DO NOT install the appliance in a location likely to freeze.

WARNING

Unless equipped with the outdoor conversion kit listed in this manual, this product is certified as an indoor appliance (See Section 6). Do not install the appliance outdoors or locate where the appliance will be exposed to freezing temperatures.

Do not install the appliance where condensation may form on the inside or outside of the appliance, or where condensation may fall onto the appliance.

Failure to install the appliance indoors could result in severe personal injury, death, or substantial property damage.

WARNING

This appliance requires a special venting system. If using PVC the vent connection to the appliance must be made with a CPVC pipe section. The field provided vent fittings must be cemented to the CPVC pipe section. Use only the vent materials, primer and cement specified in this manual to make the vent connections. Failure to follow this warning could result in fire, personal injury, or death.

Closet and alcove installations

Regent water heaters may be installed in a closet or alcove as shown in FIG. 1-1 and 1-2.

WARNING

For closet and alcove installations as shown in FIG. 1-1 and 1-2, CPVC vent material must be used inside the structure. The ventilating air openings shown in FIG. 1-1 and 1-2 are required for this arrangement. Failure to follow this warning could result in fire, personal injury, or death.

Provide clearances:

Clearances from combustible materials

1. Hot water pipes—at least 1/4" (6 mm) from combustible materials.
2. Vent pipe – Follow special vent system manufacturer's instructions.
3. See FIG. 1-1 and 1-2 for other clearance minimums.

Recommended clearances for service access

- Front 36"
- Top 0"
- Rear 24"
- Left 24"
- Right 0"

NOTICE

If you do not provide the recommended service clearances shown, it may not be possible to service the appliance without removing it from the space.

1 Determine water heater location

Figure 1-1 Closet Installation - Minimum Required Clearances

WARNING For closet installations, CPVC, polypropylene or stainless steel vent material **MUST BE** used in a closet structure due to elevated temperatures. Failure to follow this warning could result in fire, personal injury, or death.


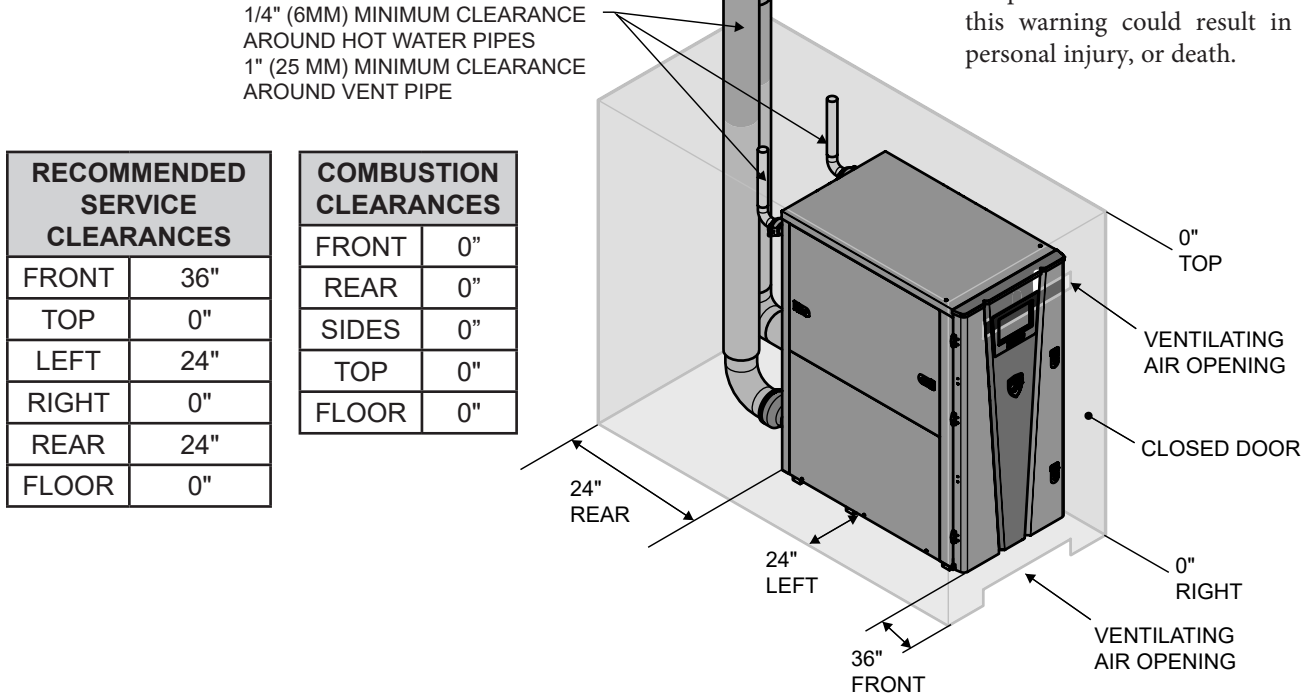 


Figure 1-2 Alcove Installation - Minimum Required Clearances

 WARNING For alcove installations, CPVC, polypropylene or stainless-steel vent material **MUST BE** used in an alcove structure due to elevated temperatures. Failure to follow this warning could result in fire, personal injury, or death.

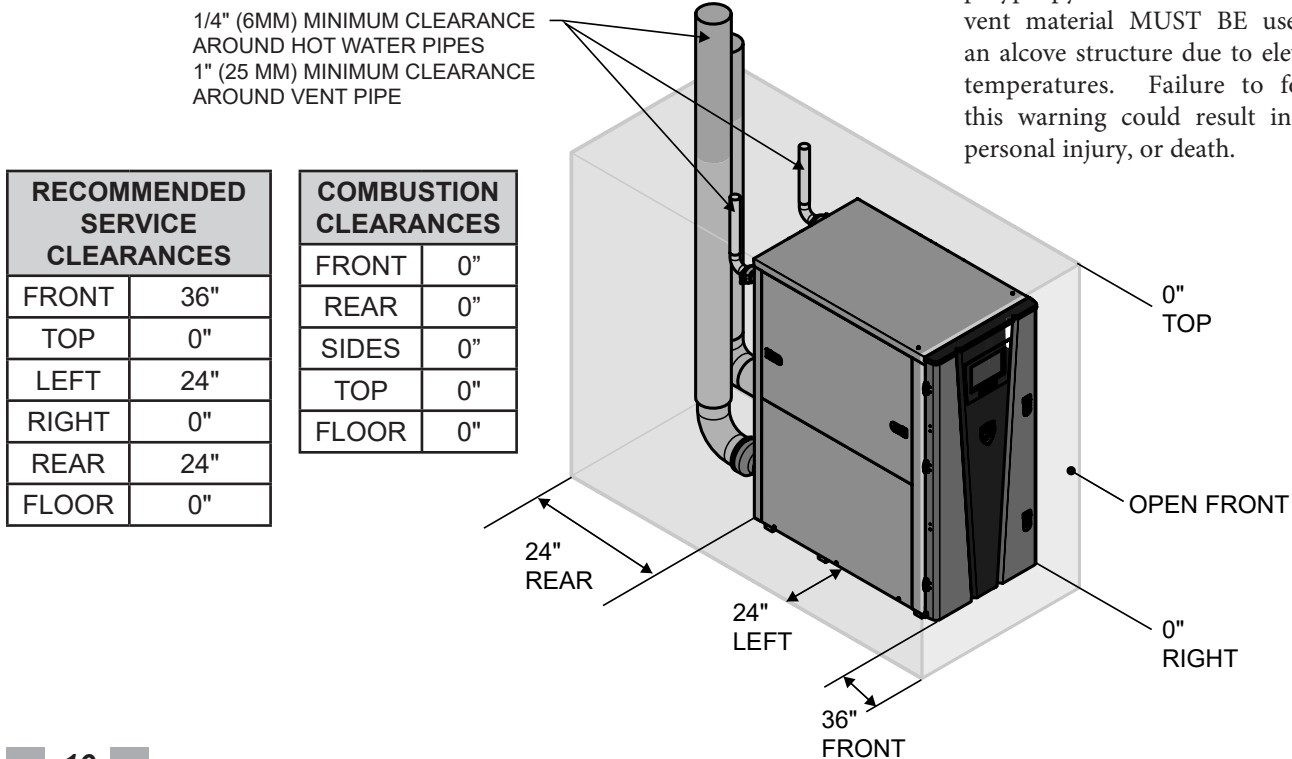

1 Determine water heater location *(continued)*

Provide air openings to room:

Regent water heater alone in equipment room

1. No air ventilation openings into the equipment room are needed when clearances around the Regent water heater are at least equal to the SERVICE clearances shown in this manual. For spaces that do NOT supply this clearance, provide two openings as shown in FIG. 1-1. Each opening must provide one square inch free area per 1,000 Btu/hr of water heater input.
2. Combustion air openings are required when using the Room Air Option listed on page 19 of this manual.

Regent water heater in same space with other gas or oil-fired appliances

1. Follow the National Fuel Gas Code (U.S.) or CSA B149.1 (Canada) to size/verify size of the combustion/ventilation air openings into the space.



WARNING

The space must be provided with combustion/ventilation air openings correctly sized for all other appliances located in the same space as the Regent water heater.

Do not install the water heater in an attic.

Failure to comply with the above warnings could result in severe personal injury, death, or substantial property damage.

2. Size openings only on the basis of the other appliances in the space. No additional air opening free area is needed for the Regent water heater when it takes its combustion air from outside (direct vent installation).

Flooring and foundation

Flooring

The Regent water heater is approved for installation on combustible flooring but must never be installed on carpeting.



WARNING

Do not install the water heater on carpeting even if foundation is used. Fire can result, causing severe personal injury, death, or substantial property damage.

If flooding is possible, elevate the water heater sufficiently to prevent water from reaching the water heater.

Seismic bracing

For installations requiring seismic bracing, the base legs of the appliance are designed to allow for the use of unistrut channel to meet seismic requirements.

Residential garage installation

Precautions

Take the following precautions when installing the appliance in a residential garage. If the appliance is located in a residential garage, it should be installed in compliance with the latest edition of the National Fuel Gas Code, ANSI Z223.1 and/or CAN/CGA-B149 Installation Code.

- Appliances located in residential garages and in adjacent spaces that open to the garage and are not part of the living space of a dwelling shall be installed so that all burners and burner ignition devices are located not less than 18 inches (46 cm) above the floor.
- The appliance shall be located or protected so that it is not subject to physical damage by a moving vehicle.

Vent and air piping

The Regent water heater requires a special vent system, designed for pressurized venting.

The water heater is to be used for either direct vent installation or for installation using indoor combustion air. When room air is considered, see the General Venting Section. Note prevention of combustion air contamination below when considering vent/air termination.

Vent and air must terminate near one another and may be vented vertically through the roof or out a side wall, unless otherwise specified. You may use any of the vent/air piping methods covered in this manual. Do not attempt to install the Regent water heater using any other means.

Be sure to locate the water heater such that the vent and air piping can be routed through the building and properly terminated. The vent/air piping lengths, routing and termination method must all comply with the methods and limits given in this manual.

Prevent combustion air contamination

Install air inlet piping for the Regent water heater as described in this manual. Do not terminate vent/air in locations that can allow contamination of combustion air. Refer to Table 1A, for products and areas which may cause contaminated combustion air.



WARNING

You must pipe combustion air to the water heater air intake. Ensure that the combustion air will not contain any of the contaminants in Table 1A. Contaminated combustion air will damage the water heater, resulting in possible severe personal injury, death, or substantial property damage. Do not pipe combustion air near a swimming pool, for example. Also avoid areas subject to exhaust fumes from laundry facilities. These areas will always contain contaminants.

1 Determine water heater location

Table 1A Corrosive Contaminants and Sources

| Products to avoid: |
|--|
| Spray cans containing chloro/fluorocarbons |
| Permanent wave solutions |
| Chlorinated waxes/cleaners |
| Chlorine-based swimming pool chemicals |
| Calcium chloride used for thawing |
| Sodium chloride used for water softening |
| Refrigerant leaks |
| Paint or varnish removers |
| Hydrochloric acid/muriatic acid |
| Cements and glues |
| Antistatic fabric softeners used in clothes dryers |
| Chlorine-type bleaches, detergents, and cleaning solvents found in household laundry rooms |
| Adhesives used to fasten building products and other similar products |
| Areas likely to have contaminants |
| Dry cleaning/laundry areas and establishments |
| Swimming pools |
| Metal fabrication plants |
| Beauty shops |
| Refrigeration repair shops |
| Photo processing plants |
| Auto body shops |
| Plastic manufacturing plants |
| Furniture refinishing areas and establishments |
| New building construction |
| Remodeling areas |
| Garages with workshops |

When using an existing vent system to install a new water heater:

⚠ WARNING Failure to follow all instructions can result in flue gas spillage and carbon monoxide emissions, causing severe personal injury or death.

Check the following venting components before installing:

- **Material** - For materials listed for use with this appliance, see Section 3 - General Venting. For polypropylene or stainless-steel venting, an adapter of the same manufacturer must be used at the flue collar connection.
- **Size** - To ensure proper pipe size is in place, see Table 3A. Check to see that this size is used throughout the vent system.
- **Manufacturer** - For a stainless steel or polypropylene application, you must use only the listed manufacturers and their type product listed in Tables 3I and 3K for CAT IV positive pressure venting with flue producing condensate.
- **Supports** - Non-combustible supports must be in place allowing a minimum 1/4" rise per foot. The supports should adequately prevent sagging and vertical slippage, by distributing the vent system weight. For additional information, consult the vent manufacturer's instructions for installation.
- **Terminations** - Carefully review Sections 3 through 5 to ensure requirements for the location of the vent and air terminations are met and orientation of these fit the appropriate image from the Horizontal or Vertical options listed in the General Venting Section. For stainless steel vent, only use terminations listed in Table 3L for the manufacturer of the installed vent.
- **Seal** - With prior requirements met, the system should be tested to the procedure listed in parts (c) through (f) of the Removal of an Existing Water Heater Section.

With polypropylene and stainless-steel vent, seal and connect all pipe and components as specified by the vent manufacturer used; with PVC/CPVC vent, see the Installing Vent or Air Piping Section.

⚠ WARNING If any of these conditions are not met, the existing system must be updated or replaced for that concern. Failure to follow all instructions can result in flue gas spillage and carbon monoxide emissions, causing severe personal injury or death.

1 Determine water heater location *(continued)*

When removing a water heater from existing common vent system:

⚠ DANGER

Do not install the Regent water heater into a common vent with any other appliance. This will cause flue gas spillage or appliance malfunction, resulting in possible severe personal injury, death, or substantial property damage.

⚠ WARNING

Failure to follow all instructions can result in flue gas spillage and carbon monoxide emissions, causing severe personal injury or death.

At the time of removal of an existing water heater, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- a. Seal any unused openings in the common venting system.
- b. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion, or other deficiencies, which could cause an unsafe condition.
- c. Test vent system – Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
- d. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so appliance will operate continuously.
- e. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar, or pipe.
- f. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined herein, return doors, windows, exhaust fans, fireplace dampers, and any other gas-burning appliance to their previous conditions of use.
- g. Any improper operation of the common venting system should be corrected so the installation conforms with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CAN/CSA B149.1, Natural Gas and Propane Installation Code. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in Part 11 of the National Fuel Gas Code, ANSI Z223.1/NFPA and/or CAN/CSA B149.1, Natural Gas and Propane Installation Code.

Combustion and ventilation air requirements for appliances drawing air from the equipment room

Provisions for combustion and ventilation air must be in accordance with Air for combustion and Ventilation, of the latest edition of the National Fuel Gas Code, NFPA 54 / ANSI Z223.1, in Canada, the latest edition of CGA Standard B149 Installation Code for Gas Burning Appliances and Equipment, or applicable provisions of the local building codes.

The equipment room **MUST** be provided with properly sized openings and/or be of sufficient volume to assure adequate combustion air and proper ventilation for all gas fired appliances in the equipment room to assure adequate combustion air proper ventilation.

The requirements shown are for the **appliance only**; additional gas fired appliances in the equipment room will require an increase in the net free area and/or volume to supply adequate combustion air for all appliances.

No combustion air openings are needed when the appliance is installed in a space with a volume **NO LESS** than 50 cubic feet per 1,000 Btu/hr of all installed gas fired appliances and the building **MUST NOT be of “Tight Construction”³**.

A combination of indoor and outdoor combustion air may be utilized by applying a ratio of available volume to required volume times the required outdoor air opening(s) size(s). This must be done in accordance with the National Fuel Gas Code, NFPA 54 / ANSI Z223.1.

2 Prepare water heater


Remove water heater from wood pallet

1. After removing the outer shipping carton from the water heater, remove the parts box.
2. To remove the water heater from the pallet, remove the four (4) lag bolts located at the front and rear of the unit (FIG 2-1).

NOTICE

Do not drop the water heater or bump the jacket on the floor or pallet. Damage to the water heater can result.

 Figure 2-1 Water Heater Mounted on Shipping Pallet

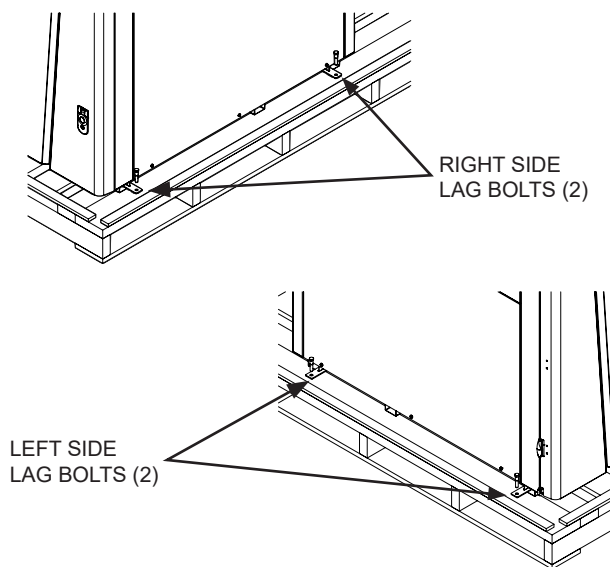

Combustion air filter

This unit has a standard air filter located at the combustion air inlet. This air filter is provided to help ensure clean air is used for the combustion process. Check this filter every month and replace when it becomes dirty. You can find these commercially available filters at any home center or HVAC supply store.

Filters by model sizes:

IWH0500-1000 / 14 x 14 x 1 filter

Note: Replacement filter should have a MERV rating no greater than 4.

Follow the steps below when replacing the combustion air filter:

1. Locate the combustion air filter box.
2. Remove the front cover from the air filter box to gain access to the air filter.
3. Slide the air filter out the front of the air filter box.
4. Inspect the air filter for dirt and debris, replace if necessary.
5. Replace the air filter and the air filter box cover.

3 General venting

Direct venting options - Sidewall Vent

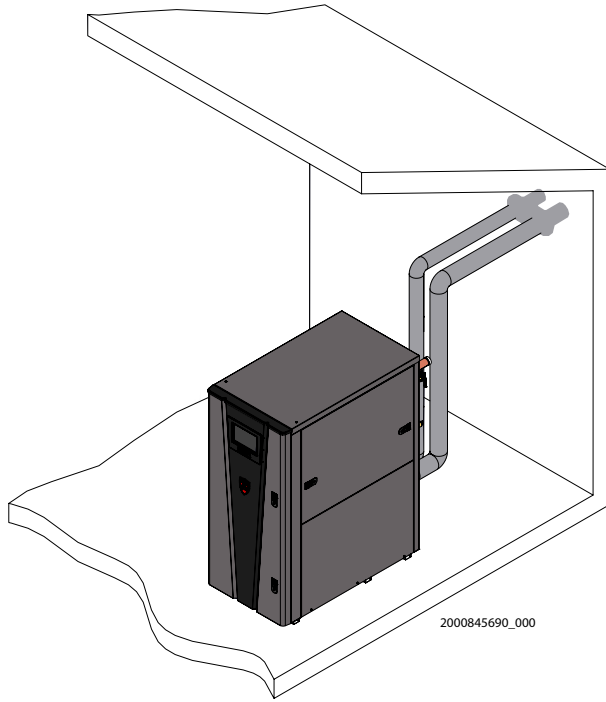 


Figure 3-1 Two-Pipe Sidewall Termination

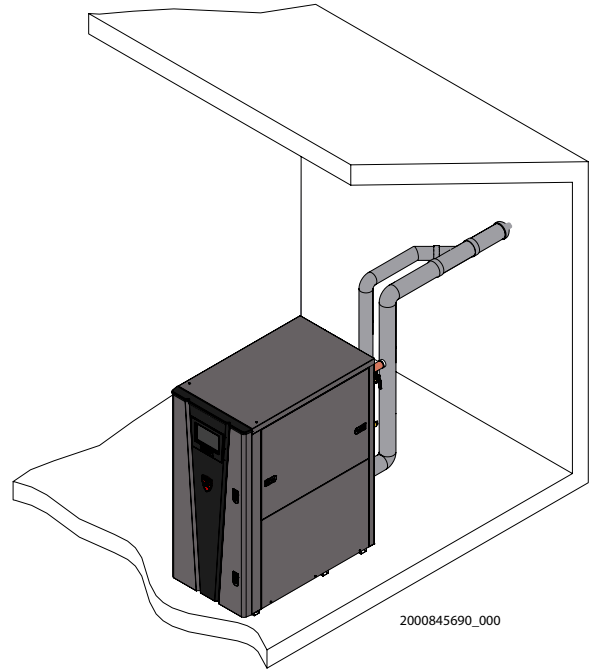 


Figure 3-2 PVC/CPVC Concentric Sidewall Termination

Direct venting options - Vertical Vent

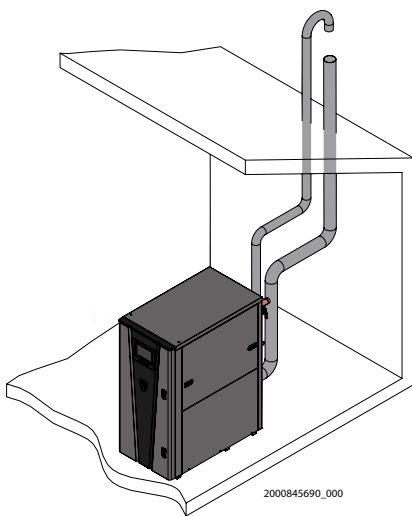 


Figure 3-3 Two-Pipe Vertical Termination

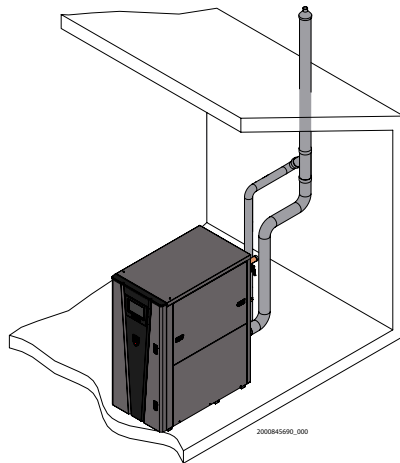 


Figure 3-4 PVC/CPVC Concentric Vertical Termination

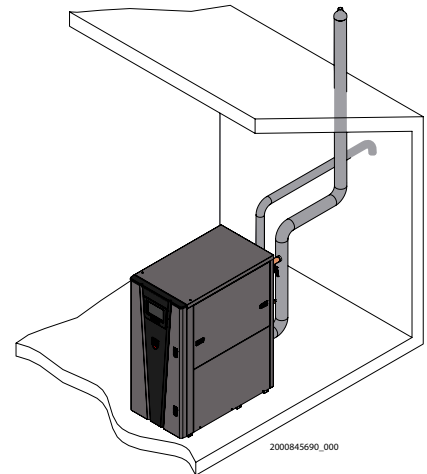 


Figure 3-5 Vertical Vent, Sidewall Air Intake

3 General venting *(continued)*

Install vent and combustion air piping

⚠ DANGER

The Regent water heater must be vented and supplied with combustion and ventilation air as described in this section. Ensure the vent and air piping and the combustion air supply comply with these instructions regarding vent system, air system, and combustion air quality. See also Section 1 of this manual.

Inspect finished vent and air piping thoroughly to ensure all are airtight and comply with the instructions provided and with all requirements of applicable codes.

Failure to provide a properly installed vent and air system will cause severe personal injury or death.

⚠ WARNING

This appliance requires a special venting system. Use only approved stainless steel, PVC, CPVC or polypropylene pipe and fittings listed in Tables 3H, 3I, and 3K for vent pipe, and fittings. Failure to comply could result in severe personal injury, death, or substantial property damage.

⚠ WARNING

DO NOT mix components from different systems. The vent system could fail, causing leakage of flue products into the living space. Mixing of venting materials will void the warranty and certification of the appliance.

NOTICE

Installation must comply with local requirements and with the National Fuel Gas Code, ANSI Z223.1 for U.S. installations or CSA B149.1 for Canadian installations.

⚠ WARNING

For closet and alcove installations, CPVC, polypropylene or stainless-steel material **MUST BE** used in a closet/alcove structure. Failure to follow this warning could result in fire, personal injury, or death.

⚠ CAUTION

Improper installation of venting systems may result in injury or death.

NOTICE

Follow the instructions in Section 1 of this manual when removing a water heater from an existing vent system.

⚠ WARNING

Do not connect any other appliance to the vent pipe or multiple water heaters to a common vent pipe. Failure to comply could result in severe personal injury, death, or substantial property damage.

NOTICE

Vent system must be pitched 1/4" minimum per foot back to the appliance to allow drainage of condensate.

The Regent water heater vent and air piping can be installed through the roof or through a sidewall. Follow the procedures in this manual for the method chosen. Refer to the information in this manual to determine acceptable vent and air piping length.


You may use any of the vent/air piping methods covered in this manual. Do not attempt to install the Regent water heater using any other means.

You must also install air piping from outside to the water heater air intake adapter unless following the Optional Room Air instructions in this manual. The resultant installation is direct vent (sealed combustion).

Air intake/vent connections

1. **Combustion Air Intake Connector** (FIG. 3-6) - Used to provide combustion air directly to the unit from outdoors. A fitting is provided on the unit for final connection. Combustion air piping must be supported per guidelines listed in the National Mechanical Code, Section 305, Table 305.4 or as local codes dictate.
2. **Vent Connector** (FIG. 3-7 thru 3-10) - Used to provide a passageway for conveying combustion gases to the outside. A transition fitting is provided on the unit for final connection. Vent piping must be supported per the National Building Code, Section 305, Table 305.4 or as local codes dictate.

 Figure 3-6 Near Water Heater Air Piping Model 500

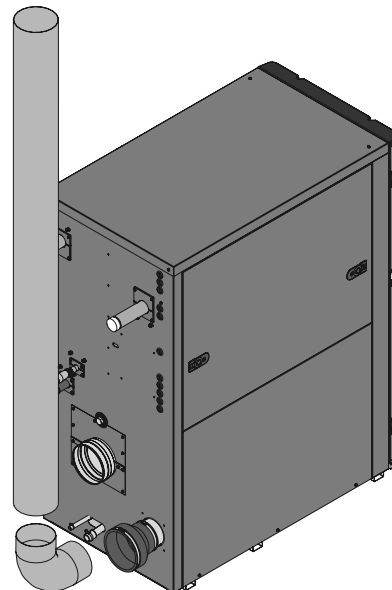

3 General venting

Requirements for installation in Canada

- Installations must be made with a vent pipe system certified to ULC-S636.
IPEX is an approved vent manufacturer in Canada supplying vent material listed to ULC-S636.
- The first three (3) feet of plastic vent pipe from the appliance flue outlet must be readily accessible for visual inspection.
- The components of the certified vent system must not be interchanged with other vent systems or unlisted pipe/fittings. For concentric vent installations, the inner vent tube must be replaced with field supplied certified vent material to comply with this requirement.
- The 4" Concentric Vent Kit available from Lochinvar (see Section 4 – *Sidewall Termination – Optional Concentric Vent*) and the 4" Concentric Vent Kit available from IPEX is approved for use on the Regent water heater. The kit is listed to the ULC-S636 standard for use in Canada.

Sizing

The Regent water heater uses model specific combustion air intake and vent piping sizes as detailed in Table 3A below.

Table 3A Air Intake/Vent Piping Sizes

| Model | Air Intake | Vent |
|-------|-------------------|-------------------|
| 500 | 4 inches (102 mm) | 4 inches (102 mm) |
| 750 | 6 inches (152 mm) | 6 inches (152 mm) |
| 1000 | 6 inches (152 mm) | 6 inches (152 mm) |

NOTICE

Increasing or decreasing combustion air or vent piping sizes is not authorized, unless referenced in manual.

Table 3B Concentric Vent Kit Equivalent Vent Lengths

| Model | Kit Number | Equivalent Vent Length |
|-------|------------|------------------------|
| 500 | 100140484 | 30 feet |

Minimum / Maximum allowable combustion air and vent piping lengths are shown in Table 3D below:

When determining equivalent combustion air and vent length, add 5 feet for each 90° elbow and 3 feet for each 45° elbow.

EXAMPLE: 20 feet of PVC pipe + (4) 90° elbows + (2) 45° elbows + (1) concentric vent kit (100140484) = 76 equivalent feet of piping.

Supports

Vent system must be supported horizontally to prevent sagging. Methods and intervals for support vary by vent manufacturer and vent material. Vent support methods and intervals shall adhere to vent manufacturer’s instructions, where applicable.

Table 3C Room Air Minimum/Maximum Allowable Vent Lengths

| Model | Vent | | | Input De-Rate per 25 Feet of Vent |
|----------|---------------|------------------|------------------|-----------------------------------|
| | Vent Diameter | Vent Min. Length | Vent Max. Length | |
| 500(N)* | 4" | 12' | 100' | 0% |
| 500(L)* | 4" | 12' | 100' | 0% |
| 750(N)* | 6" | 12' | 200' | 0% |
| 750(L)* | 6" | 12' | 150' | 0% |
| 1000(N)* | 6" | 12' | 200' | 0% |
| 1000(L)* | 6" | 12' | 200' | 0% |

*High altitude models are limited to maximum 100' vent.

Table 3D Direct Vent Minimum/Maximum Allowable Air/Vent Lengths

| Model | Air Inlet | | | Vent | | | Input De-Rate per 25 Feet of Vent |
|----------|---------------------|------------------------|------------------------|---------------|------------------|------------------|-----------------------------------|
| | Air Intake Diameter | Air Intake Min. Length | Air Intake Max. Length | Vent Diameter | Vent Min. Length | Vent Max. Length | |
| 500(N)* | 4" | 12' | 100' | 4" | 12' | 100' | 0% |
| 500(L)* | 4" | 12' | 100' | 4" | 12' | 100' | 0% |
| 750(N)* | 6" | 12' | 200' | 6" | 12' | 200' | 0% |
| 750(L)* | 6" | 12' | 150' | 6" | 12' | 150' | 0% |
| 1000(N)* | 6" | 12' | 200' | 6" | 12' | 200' | 0% |
| 1000(L)* | 6" | 12' | 200' | 6" | 12' | 200' | 0% |

*High altitude models are limited to maximum 100' vent and 100' air intake.

3 General venting *(continued)*

Air inlet pipe materials:

The air inlet pipe(s) must be sealed. Choose acceptable combustion air inlet pipe materials from the following list:

- PVC, CPVC, Polypropylene or ABS
- Dryer Vent or Sealed Flexible Duct (not recommended for rooftop air inlet)
- Galvanized steel vent pipe with joints and seams sealed as specified in this section.
- Type “B” double-wall vent with joints and seams sealed as specified in this section.
- AL29-4C, stainless steel material to be sealed to specification of its manufacturer.

*Plastic pipe may require an adapter (not provided) to transition between the air inlet connection on the appliance and the plastic air inlet pipe.

WARNING Using air intake materials other than those specified can result in personal injury, death, or property damage.

NOTICE The use of double-wall vent or insulated material for the combustion air inlet pipe is recommended in cold climates to prevent the condensation of airborne moisture in the incoming combustion air.

Sealing of Type “B” double-wall vent material or galvanized vent pipe material used for air inlet piping on a sidewall or vertical rooftop Combustion Air Supply System:

- a. Seal all joints and seams of the air inlet pipe using either Aluminum Foil Duct Tape meeting UL Standard 723 or 181A-P or a high-quality UL Listed silicone sealant such as those manufactured by Dow Corning or General Electric.
- b. Do not install seams of vent pipe on the bottom of horizontal runs.
- c. Secure all joints with a minimum of three (3) sheet metal screws or pop rivets. Apply Aluminum Foil Duct Tape or silicone sealant to all screws or rivets installed in the vent pipe.
- d. Ensure that the air inlet pipes are properly supported.

The PVC, CPVC, or ABS air inlet pipe should be cleaned and sealed with the pipe manufacturer’s recommended solvents and standard commercial pipe cement for the material used. The PVC, CPVC, ABS, Dryer Vent or Flex Duct air inlet pipe should use a silicone sealant to ensure a proper seal at the appliance connection and the air inlet cap connection. Dryer vent or flex duct should use a screw type clamp to seal the vent to the appliance air inlet and the air inlet cap. Proper sealing of the air inlet pipe ensures that combustion air will be free of contaminants and supplied in proper volume.

Follow the polypropylene manufacturer’s instructions when using polypropylene material as an inlet pipe.

When a sidewall or vertical rooftop combustion air supply system is disconnected for any reason, the air inlet pipe must be resealed to ensure that combustion air will be free of contaminants and supplied in proper volume.

WARNING Failure to properly seal all joints and seams as required in the air inlet piping may result in flue gas recirculation, spillage of flue products and carbon monoxide emissions causing severe personal injury or death.

Vent, air piping, and termination:

The Regent water heater vent and air piping can be installed through the roof or through a sidewall. Follow the procedures in this manual for the method chosen. This unit requires Category IV venting. Refer to the information in this manual to determine acceptable vent and air piping length.

Common venting

Regent water heaters may be common vented; however, the following criteria **MUST** be followed:

1. Only Regent water heaters may be connected to the common vent. **DO NOT** mix other manufacturers’ appliances or other Lochinvar models.
2. Regent water heaters connected to the common vent must all be of the same model size.
3. Each Regent water heater must have a Lochinvar supplied flue damper installed (see Table 3E).
4. A condensate drain must be installed above each flue damper.
5. Only vertical direct vent, positive pressure, Category IV may be used when common venting Regent water heaters. Sidewall common venting is not allowed.
6. Regent water heaters in a common vent must be connected and controlled with the integral Regent SMART TOUCH Cascade utilizing any of the following control methods:
 - a. Internally calculated setpoint
 - b. BMS (external 0-10V signal)
 - c. ModBus RTU
 - d. BACnet MSTP

For approved common vent sizing, contact the factory.

Regent water heaters must not be connected using a common air system.

WARNING When Regent water heaters are common vented, the criteria above **MUST** be followed. Failure to follow all these requirements will result in severe personal injury, death, or substantial property damage.

NOTICE A field supplied inline condensate collection section **MUST BE** installed directly above the backflow preventer.

3 General venting

Table 3E Flue Damper Kits

| Model | Kit Number | Description |
|------------|------------|-------------|
| 500 | 4" | 100056141 |
| 750 - 1000 | 6" | 100056142 |

Optional room air

NOTICE

Optional room air is intended for commercial applications. Combustion air piping to the outside is recommended for residential applications.

Commercial applications utilizing the Regent water heater may be installed with a single pipe carrying the flue products to the outside while using combustion air from the equipment room. In order to use the room air venting option, the following conditions and considerations must be followed:

- The unit **MUST** be installed with the appropriate room air kit (Table 3F).
- The equipment room **MUST** be provided with properly sized openings to assure adequate combustion air. Refer to the instructions provided with the room air kit.
- There will be a noticeable increase in the noise level during normal operation from the inlet air opening.
- Using the room air kit makes the unit vulnerable to combustion air contamination from within the building. Please review Section 1, Prevent Combustion Air Contamination, to ensure proper installation.
- Vent system and terminations must comply with the standard venting instructions set forth in this manual.

⚠ WARNING

When utilizing the single pipe method, provisions for combustion and ventilation air must be in accordance with Air for Combustion and Ventilation, of the latest edition of the National Fuel Gas Code, ANSI Z223.1, in Canada, the latest edition of CGA Standard B149 Installation Code for Gas Burning Appliances and Equipment, or applicable provisions of the local building codes.

Air contamination

Pool and laundry products and common household and hobby products often contain fluorine or chlorine compounds. When these chemicals pass through the water heater, they can form strong acids. The acid can eat through the water heater wall, causing serious damage and presenting a possible threat of flue gas spillage or appliance water leakage into the building.

Please read the information given in Table 1A listing contaminants and areas likely to contain them. If contaminating chemicals will be present near the location of the water heater combustion air inlet, have your installer pipe the water heater combustion air and vent to another location, per this manual.

Table 3F Optional Room Air Kit

| Model | Kit Number | Description |
|------------|------------|--------------|
| 500 | 100157616 | Room Air Kit |
| 750 - 1000 | 100344020 | Room Air Kit |

3 General venting *(continued)*

WARNING

If the water heater combustion air inlet is located in a laundry room or pool facility, for example, these areas will always contain hazardous contaminants.

WARNING

To prevent the potential of severe personal injury or death, check for areas and products listed in Table 1A before installing the water heater or air inlet piping.

If contaminants are found, you **MUST**:

- Remove contaminants permanently.
—OR—
- Relocate air inlet and vent terminations to other areas.

PVC/CPVC

This product has been approved for use with the PVC/CPVC vent materials listed in Table 3G.

Installing vent and air piping

WARNING

The vent connection to the appliance must be made with CPVC pipe section if PVC/CPVC vent is to be used. The field provided vent fittings must be cemented to the CPVC pipe section using an “All Purpose Cement” suitable for PVC and CPVC pipe. Use only the vent materials, primer, and cement specified in Table 3G to make the vent connections. Failure to follow this warning could result in fire, personal injury, or death.

NOTICE

Use only cleaners, primers, and solvents that are approved for the materials which are joined together.

NOTICE

All CPVC and PVC vent pipes must be glued, properly supported, and the exhaust must be pitched a minimum of a 1/4 inch per foot back to the water heater (to allow drainage of condensate). Horizontal runs shall have supports suitable for non-metallic vent piping that do not clamp tightly onto vent, allowing for vent expansion or contraction. Supports shall be as close to the joints and fittings as practical and no more than 5 feet apart.

NOTICE

When available, follow all vent manufacturer’s installation instructions.

WARNING

Insulation shall not be used on PVC or CPVC venting materials. The use of insulation will cause increased vent wall temperatures, which could result in vent pipe failure.

Table 3G PVC/CPVC Vent Pipe, and Fittings

| Approved PVC/CPVC Vent Pipe and Fittings | | |
|---|----------------------|-----------------|
| Item | Material | Standard |
| Vent pipe | PVC Schedule 40, 80 | ANSI/ASTM D1785 |
| | PVC - DWV | ANSI/ASTM D2665 |
| | CPVC Schedule 40, 80 | ANSI/ASTM F441 |
| Vent fittings | PVC Schedule 40 | ANSI/ASTM D2466 |
| | PVC Schedule 80 | ANSI/ASTM D2467 |
| | CPVC Schedule 40 | ANSI/ASTM F438 |
| | CPVC Schedule 80 | ANSI/ASTM F439 |
| | PVC - DWV | ANSI/ASTM D2665 |
| Pipe Cement / Primer | PVC | ANSI/ASTM D2564 |
| | CPVC | ANSI/ASTM F493 |
| NOTICE: Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenylsulfone) in non-metallic venting systems is prohibited. | | |


NOTE: In Canada, CPVC and PVC vent pipe, fittings and cement/primer must be ULC-S636 certified.

1. Work from the water heater to vent or air termination. Do not exceed the lengths given in this manual for the air or vent piping.
2. Cut pipe to the required lengths and deburr the inside and outside of the pipe ends.
3. Chamfer outside of each pipe end to ensure even cement distribution when joining.
4. Clean all pipe ends and fittings using a clean dry rag. (Moisture will retard curing and dirt or grease will prevent adhesion.)
5. Dry fit vent or air piping to ensure proper fit up before assembling any joint. The pipe should go a third to two-thirds into the fitting to ensure proper sealing after cement is applied.
6. Priming and Cementing:
 - a. Handle fittings and pipes carefully to prevent contamination of surfaces.
 - b. Apply a liberal even coat of primer to the fitting socket and to the pipe end to approximately 1/2" beyond the socket depth.
 - c. Apply a second primer coat to the fitting socket.
 - d. While primer is still wet, apply an even coat of approved cement to the pipe equal to the depth of the fitting socket along with an even coat of approved cement to the fitting socket.
 - e. Apply a second coat of cement to the pipe.

3 General venting

- f. While the cement is still wet, insert the pipe into the fitting. If possible, twist the pipe a 1/4 turn as you insert it. **NOTE:** If voids are present, sufficient cement was not applied and joint could be defective.
- g. Wipe excess cement from the joint removing ring or beads as it will needlessly soften the pipe.

 Figure 3-7 Near Water Heater PVC/CPVC Venting - Models 500 - 1000

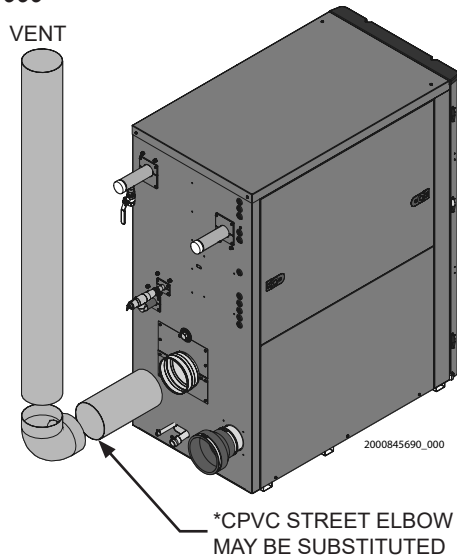

NOTE: WHEN USING A PVC/CPVC VENT SYSTEM, THE FIRST CONNECTION TO THE APPLIANCE MUST BE MADE WITH CPVC.

Polypropylene

This product has been approved for use with polypropylene vent with the manufacturers listed in Table 3H.

All terminations must comply with listed options in this manual and be a single-wall vent offering.

For support and special connections required, see the manufacturer's instructions. All vent is to conform to standard diameter and equivalent length requirements established.

When determining equivalent combustion air and vent length for polypropylene single-wall piping:

- 1 foot of Duravent 4 inch single-wall pipe is equivalent to 1.6 feet of piping

Flexible polypropylene

For use of flex pipe, it is recommended to have the vent material in 32°F or higher ambient space before bending at installation. No bends should be made to greater than 45° and ONLY installed in vertical or near vertical installations (FIG. 3-8).

NOTICE The installer must use a specific vent starter adapter at the flue collar connection. This adapter is supplied by the vent manufacturer to adapt to its vent system. See Table 3J for approved vent adapters. Discard CPVC starter piece.

NOTICE All vent connections MUST be secured by the vent manufacturer's joint connector (FIG. 3-9).

WARNING Insulation should not be used on polypropylene venting materials. The use of insulation will cause increased vent wall temperatures, which could result in vent pipe failure.

WARNING Use only the adapters and vent system listed in Tables 3H and 3I. DO NOT mix vent systems of different types or manufacturers. Failure to comply could result in severe personal injury, death, or substantial property damage.

Table 3H Polypropylene Vent Pipe and Fittings

| Approved Polypropylene Vent Manufacturers | | |
|---|------------------------------------|------------------|
| Make | Model | Standard |
| Centrotherm Eco Systems | InnoFlue SW/Flex | UL-1738/ULC-S636 |
| Duravent (M & G Group) | PolyPro Single-Wall / PolyPro Flex | ULC-S636 |

NOTICE Installations must comply with applicable national, state, and local codes. For Canadian installation, polypropylene vent must be listed as a ULC-S636 approved system.

NOTICE Installation of a polypropylene vent system should adhere to the vent manufacturer's installation instructions supplied with the vent system.

3 General venting *(continued)*

Figure 3-8 Near Water Heater Flexible Polypropylene Venting

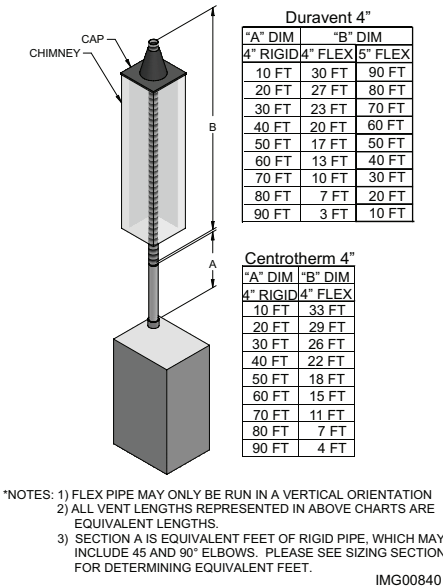 


Figure 3-9 Near Water Heater Polypropylene Venting

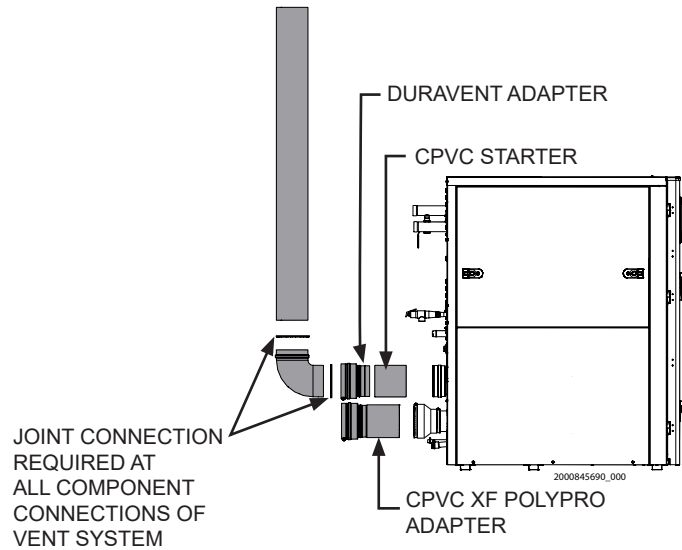 


Table 3I Approved Polypropylene Terminations

| Model | Centrotherm InnoFlue SW | | | | | |
|----------|-------------------------|-----------------|-----------------------------|---|------------------------------|-----------------------------|
| | Polypropylene Adapter | Joint Connector | Sidewall Retaining Bracket* | Sidewall Adapter* | Low Profile Wall Termination | Concentric Wall Termination |
| 500 | ISAAL0404 | IANS04 | IATP0404 | ISTAGL0404 | ISLPT0404 | ICWT462 & ICT0446 |
| 750-1000 | ISAAL0606 | Not Required | IATP0606 | ISTAGL0606 | ISLPT0606 | ICWT610 & ICTC06610 |
| Model | DuraVent Polypro | | | * These parts are only needed if the sidewall termination assembly is used (see FIG. 4-5B). | | |
| | Polypropylene Adapter | Joint Connector | Sidewall Kit* | | | |
| 500 | 4PPS-AD-M | 4PPS-LB | 4PPS-HLK | | | |
| 750-1000 | 6PPS-06PVCM-6PPF | Not Required | 6PPS-HLK | | | |

Stainless steel vent

This product has been approved for use with stainless steel using the manufacturers listed in Table 3J.


WARNING Use only the materials, vent systems, and terminations listed in Tables 3J and 3K. DO NOT mix vent systems of different types or manufacturers. Failure to comply could result in severe personal injury, death, or substantial property damage.

NOTICE The installer must use a specific vent starter adapter at the flue collar connection, supplied by the vent manufacturer to adapt to its vent system. See Table 3J for approved vent adapters. Discard CPVC starter piece.

NOTICE Installations must comply with applicable national, state, and local codes. Stainless steel vent systems must be listed as a UL-1738 approved system for the United States and a ULC-S636 approved system for Canada.

NOTICE Installation of a stainless-steel vent system should adhere to the stainless steel vent manufacturer’s installation instructions supplied with the vent system.

 Figure 3-10 Near Water Heater Stainless Steel Venting Models 500-1000

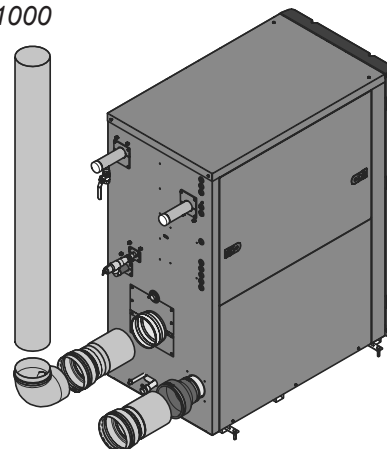

3 General venting *(continued)*

Table 3J Stainless Steel Vent Pipe and Fittings

| Approved Stainless Steel Vent Manufacturers | |
|---|---------------------|
| Make | Model |
| Dura Vent (M & G Group) | FasNSeal |
| Dura Vent (M & G Group) | FasNSeal Flex* Vent |
| Z-Flex (Nova Flex Group) | Z-Vent |
| Heat Fab (Selkirk Corporation) | Saf-T Vent |
| Metal Fab | Corr/Guard |
| Security Chimney | Secure Seal |
| ICC | VIC |
| Van Packer | -- |
| Enervex | Powervent |
| Jeremias | -- |

*Use of FasNSeal Flex smooth inner wall vent is to be used in vertical or near vertical sections only, taking precaution to ensure no sagging occurs of the vent system. Connect to the FasNSeal rigid vent using specially designed adapters and sealing method, see manufacturer's instructions.

Table 3K Approved Stainless Steel (S.S.) Terminations and Adapters

| Model | DuraVent | | | Heat Fab | | | Z Flex | | | |
|-------|----------------------|------------------|------------------------|----------------------------|------------------|------------------------|-------------------|-------------------------|------------------------|------------------------|
| | FasNSeal | | | Saf-T Vent | | | Z-Vent | | | |
| | S.S. Adapter | Flue Termination | Intake Air Termination | S.S. Adapter | Flue Termination | Intake Air Termination | S.S. Adapter | Flue Termination | Intake Air Termination | |
| 500 | FSA-4PVC-4FNS | FSBS4 FSRC4 | FSAIH04 | 9401PVC | 9492 5400CI | 9414TERM | 2SVSLA04 | 2SVSTP(F,X)04 2SVSRCX04 | 2SVSTEX0490 | |
| 750 | FSA-6PVC-6FNS | FSBS6 FSRC6 | FSAIH06 | 9601PVC | 9690 9692 | 9614TERM | 2SVSTTA06 | 2SVSTPX06 2SVSRCX06 | 2SVSEE0690 & 2SVSTPX06 | |
| 1000 | FSA-6PVC-6FNS | FSBS6 FSRC6 | FSAIH06 | 9601PVC | 9690 9692 | 9614TERM | 2SVSTTA06 | 2SVSTPX06 2SVSRCX06 | 2SVSEE0690 & 2SVSTPX06 | |
| Model | Metal Fab | | | Security Chimney | | | ICC | | | |
| | Corr/Guard | | | Secure Seal | | | VIC | | | |
| | S.S. Adapter | Flue Termination | Intake Air Termination | S.S. Adapter | Flue Termination | Intake Air Termination | S.S. Adapter | Flue Termination | Intake Air Termination | |
| 500 | 4CGPVCA | 4CGSWHT 4CGSWC | 4CGSW90LT | SS4PVCU | SS4STU SS4RCBU | SS4ST90AU | HO-04PA | HM-04MC HM-04SR | HE-04E90 HM-04SR | |
| 750 | 6FCGPVCA | 6FCGSWMC 6FCGSWC | 6FCGSW90L | SS6PVCU | SS6STU SS6RCBU | SS6ST90AU | HO-06PA | HM-06MC HM-06SR | HE-06E90 HM-06SR | |
| 1000 | 6FCGPVCA | 6FCGSWMC 6FCGSWC | 6FCGSW90L | SS6PVCU | SS6STU SS6RCBU | SS6ST90AU | HO-06PA | HM-06MC HM-06SR | HE-06E90 HM-06SR | |
| Model | Enervex | | | Van Packer | | | | | | |
| | Powervent | | | Water Heater Adapter | | | Flue Termination | | | Intake Air Termination |
| | Water Heater Adapter | Flue Termination | Intake Air Termination | Water Heater Adapter | | | Flue Termination | | | Intake Air Termination |
| 500 | 801.0676.4604 | 801.0679.1004 | 801.0676.4604 | C04PVC04.38B/ C04PVC04.38B | | | M0490EB & M04SCTB | | | M0490EB & M04SCTB |
| 750 | 801.0676.4606 | 801.0679.1006 | 801.0676.4606 | C06PVC06.50B/ C06PVC06.50B | | | M0690EB & M06SCTB | | | M0690EB & M06SCTB |
| 1000 | 801.0676.4606 | 801.0679.1006 | 801.0676.4606 | C06PVC06.50B/ C06PVC06.50B | | | M0690EB & M06SCTB | | | M0690EB & M06SCTB |
| Model | Jeremias | | | | | | | | | |
| | Water Heater Adapter | Flue Termination | Intake Air Termination | | | | | | | |
| 500 | SWKL4-KLC | SWKL4-WRC | SWKL4-90ET | | | | | | | |
| 750 | SWKL6-KLC | SWKL6-WRC | SWKL6-90ET | | | | | | | |
| 1000 | SWKL6-KLC | SWKL6-WRC | SWKL6-90ET | | | | | | | |

4 Sidewall direct venting

Vent/air termination – sidewall

WARNING Follow instructions below when determining vent location to avoid possibility of severe personal injury, death, or substantial property damage.

WARNING A gas vent extending through an exterior wall shall not terminate adjacent to a wall or below building extensions such as eaves, parapets, balconies, or decks. Failure to comply could result in severe personal injury, death, or substantial property damage.

Determine location

Locate the vent/air terminations using the following guidelines:

1. The total length of piping for vent or air must not exceed the limits given in the General Venting Section of this manual.
2. You must consider the surroundings when terminating the vent and air:
 - a. Position the vent termination where vapors will not damage nearby shrubs, plants, or air conditioning equipment or be objectionable.
 - b. The flue products will form a noticeable plume as they condense in cold air. Avoid areas where the plume could obstruct window views.
 - c. Prevailing winds could cause freezing of condensate and water/ice buildup where flue products impinge on building surfaces or plants.
 - d. Avoid possibility of accidental contact of flue products with people or pets.
 - e. Do not locate the terminations where wind eddies could affect performance or cause recirculation, such as inside building corners, near adjacent buildings or surfaces, window wells, stairwells, alcoves, courtyards, or other recessed areas.

WARNING Sidewall vent and air inlet terminations must terminate in the same pressure zone.

- f. Do not terminate above any door or window. Condensate can freeze, causing ice formations.
- g. Locate or guard vent to prevent condensate damage to exterior finishes.
- h. Do not locate the terminations over public walkways.
- i. Do not locate the terminations near soffit vents, crawl space vents, or other areas where condensate or vapor could create a nuisance, hazard, or cause property damage.
- j. Do not locate the terminations where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.
- k. Terminations must be located a minimum of 12" above grade or maximum snow line.

Figure 4-1A PVC/CPVC/Polypropylene Sidewall Termination of Air and Vent

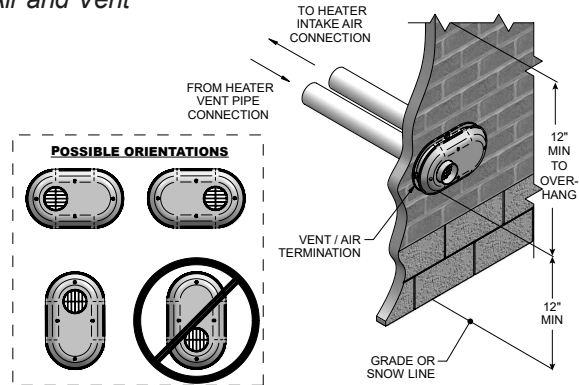 


Table 4A Sidewall Vent Kits


| Model | Kit Number | Air Intake | Vent Size |
|------------|------------|------------|-----------|
| 500 | 100157611 | 4" | 4" vent |
| 750 - 1000 | 100157612 | 6" | 6" vent |

If using the alternate sidewall termination:

3. The air piping must terminate in a down-turned elbow as shown in FIG. 4-1B. This arrangement avoids recirculation of flue products into the combustion air stream.
4. The vent piping must terminate in an elbow pointed outward or away from the air inlet, as shown in FIG. 4-1B.

WARNING Do not exceed the maximum lengths of the outside vent piping shown in FIG. 4-1B. Excessive length exposed to the outside could cause freezing of condensate in the vent pipe, resulting in potential water heater shutdown.

 
Figure 4-1B Alternate PVC/CPVC Sidewall Termination of Air and Vent w/Field Supplied Fittings

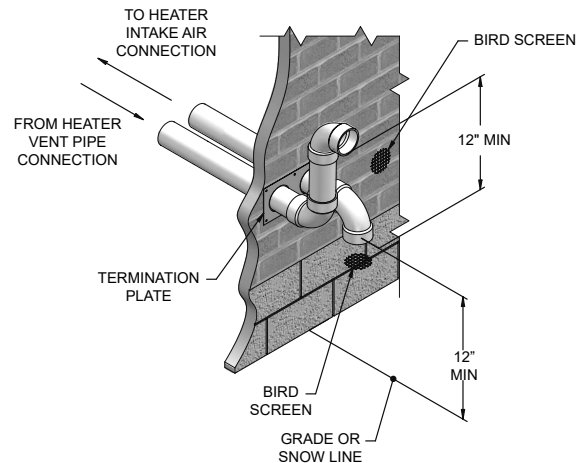

4 Sidewall direct venting *(continued)*


Vent/air termination – sidewall

 Figure 4-1C Alternate PVC/CPVC/SS Vent Termination - Typical Stainless Steel Sidewall Termination of Air and Vent w/Field Supplied Fittings

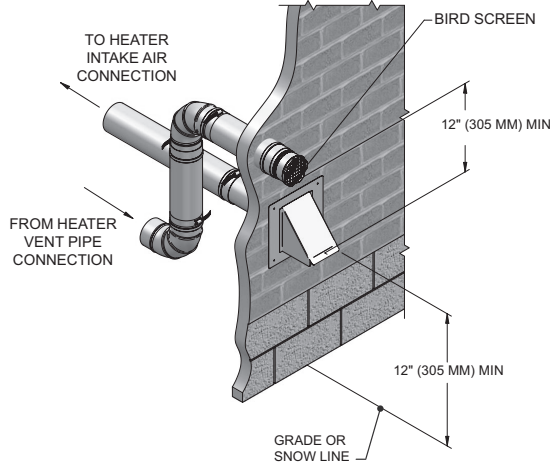

NOTICE PVC/CPVC or ABS is acceptable air inlet pipe material.

 Figure 4-2 Alternate PVC/CPVC/SS/ Polypropylene Sidewall Termination w/Field Supplied Fittings

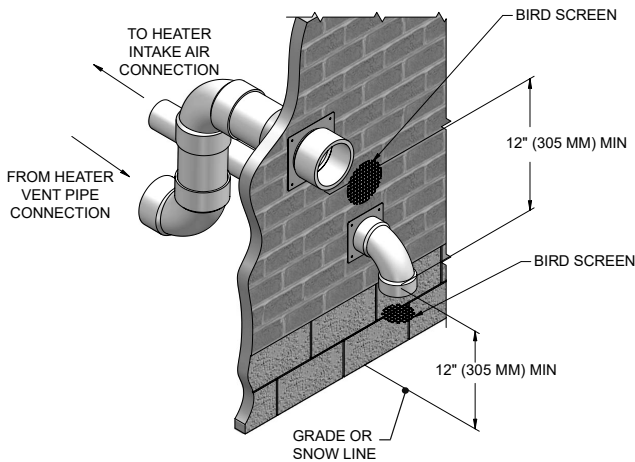

5. Maintain clearances as shown in FIG. 4-1A thru 4-5B. Also maintain the following:
 - a. Vent must terminate:
 - At least 6 feet from adjacent walls.
 - No closer than 12 inches below roof overhang.
 - b. Air inlet must terminate at least 12 inches above grade or snow line; at least 12 inches below the vent termination; and the vent pipe must not extend more than 24 inches vertically outside the building as shown in FIG. 4-1B.
 - c. Do not terminate closer than 4 feet horizontally from any electric meter, gas meter, regulator, relief valve, or other equipment. Never terminate above or below any of these within 4 feet horizontally.
6. Locate terminations so they are not likely to be damaged by foreign objects, such as stones or balls, or subject to buildup of leaves or sediment.

Figure 4-3A Clearance to Gravity Air Inlets


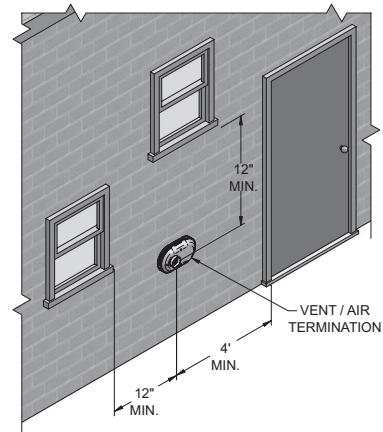 


Figure 4-3B Alternate Clearance to Gravity Air Inlets w/ Field Supplied Fittings

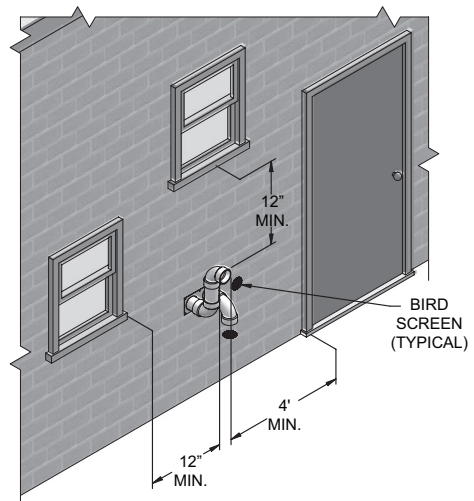 

4 Sidewall direct venting

Figure 4-4A Direct Vent Terminal Clearances

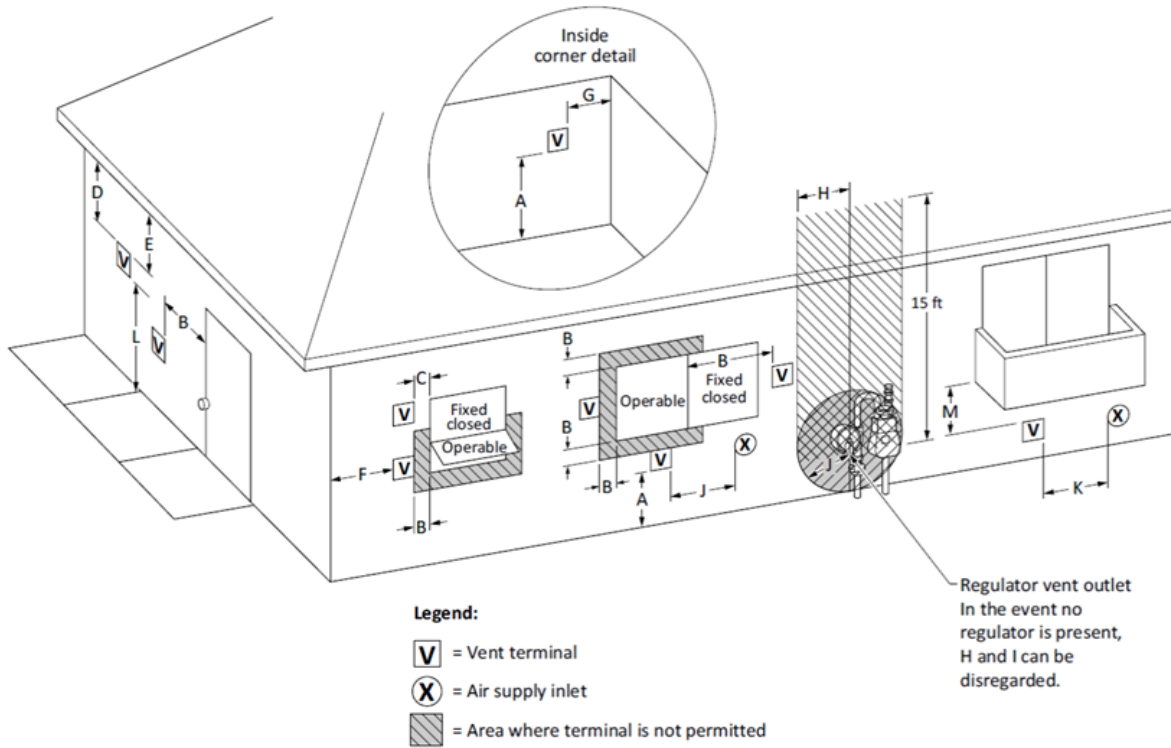 


Table 4B Direct Vent Terminal Clearances

| | | Canadian Installations ¹ | US Installations ² |
|-----|---|---|---|
| A = | Clearance above grade, veranda, porch, deck, or balcony | 12 in (30 cm) | 12 in (30 cm) |
| B = | Clearance to window or door that may be opened | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 in (30 cm) for appliances > 50,000 Btuh (15 kW) and not exceeding > 150,000 Btuh (30 kW) |
| C = | Clearance to permanently closed window | * | * |
| D = | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal. | * | * |
| E = | Clearance to unventilated soffit | * | * |
| F = | Clearance to outside corner | * | * |
| G = | Clearance to inside corner | * | * |
| H = | Clearance to each side of center line extended above meter / regulator assembly | * | * |
| I = | Clearance to service regulator vent outlet | Above a regulator within 3 ft (91 cm) horizontally of the vertical center line of the regulator vent outlet to a maximum vertical distance of 15 ft (4.5 m) | * |

4 Sidewall direct venting *(continued)*


Table 4B Direct Vent Terminal Clearances *(continued)*

| | | | |
|-----|--|--|---|
| J = | Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3kW), 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 in (30 cm) for appliances > 50,000 Btuh (15 kW) and not exceeding > 150,000 Btuh (30 kW) |
| K = | Clearance to a mechanical air supply inlet | 6 ft (1.83 m) | 3 ft (91 cm) above if within 10 ft (3 m) horizontally |
| L = | Clearance above paved sidewalk or paved driveway located on public property | 7 ft (2.13 m)† | 7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard.* |
| M = | Clearance under veranda, porch, deck, or balcony | 12 in (30 cm)‡ | * |

* Clearance in accordance with local installation codes and the requirements of the gas supplier.
 † A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.
 ‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

NOTES:
 1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code
 2) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

 Figure 4-4B Other than Direct Vent Terminal Clearances

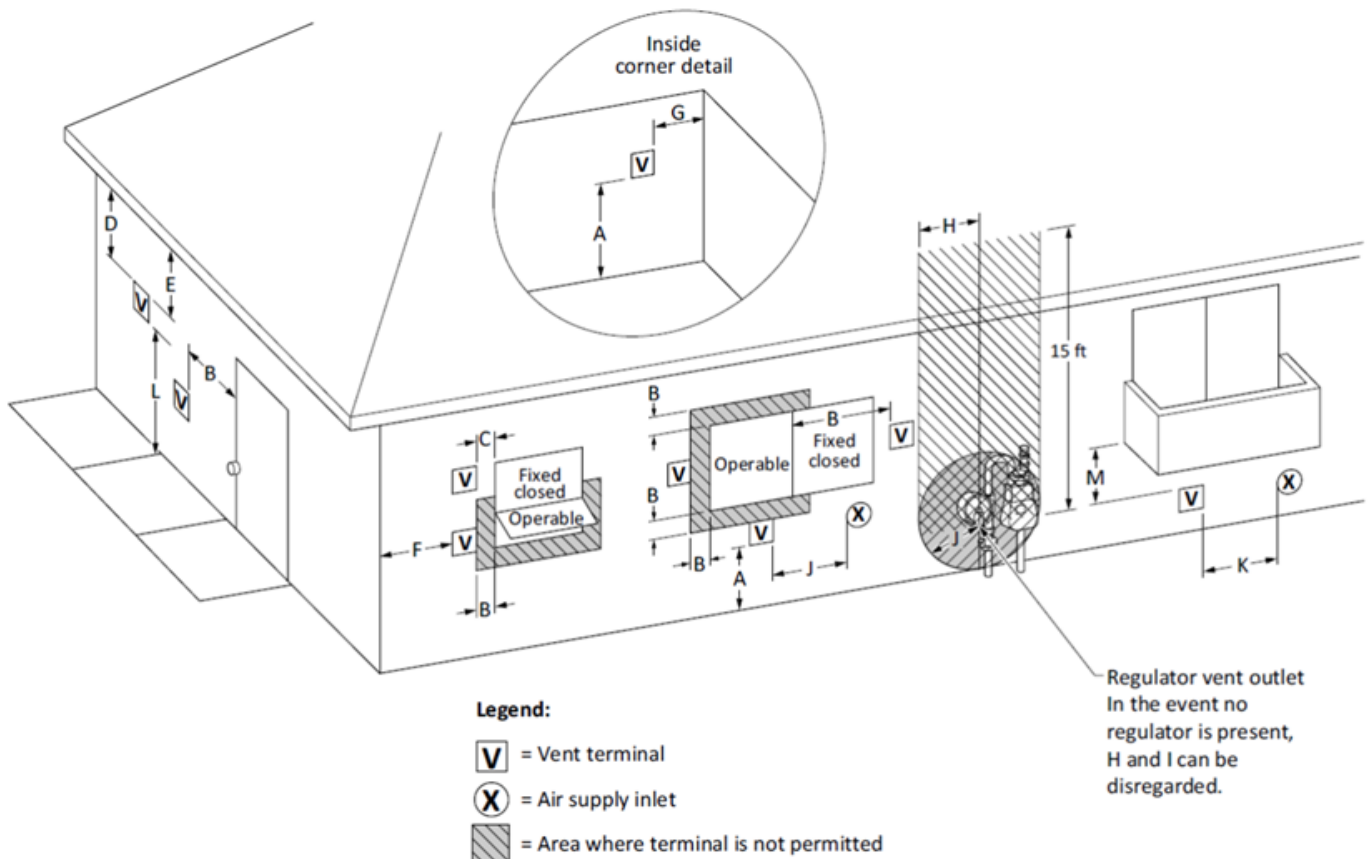

4 Sidewall direct venting

Table 4C Other than Direct Vent Terminal Clearances

| | | Canadian Installations ¹ | US Installations ² |
|-----|---|---|--|
| A = | Clearance above grade, veranda, porch, deck, or balcony | 12 in (30 cm) | 12 in (30 cm) |
| B = | Clearance to window or door that may be opened | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) | 4 ft (1.2 m) below or to side of opening; 1 ft (300 mm) above opening |
| C = | Clearance to permanently closed window | * | * |
| D = | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal. | * | * |
| E = | Clearance to unventilated soffit | * | * |
| F = | Clearance to outside corner | * | * |
| G = | Clearance to inside corner | * | * |
| H = | Clearance to each side of center line extended above meter / regulator assembly | * | * |
| I = | Clearance to service regulator vent outlet | Above a regulator within 3 ft (91 cm) horizontally of the vertical center line of the regulator vent outlet to a maximum vertical distance of 15 ft (4.5 m) | * |
| J = | Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances > 100,000 Btuh (30 kW) | 4 ft (1.2 m) below or to side of opening; 1 ft (300 mm) above opening |
| K = | Clearance to a mechanical air supply inlet | 6 ft (1.83 m) | 3 ft (91 cm) above if within 10 ft (3 m) horizontally |
| L = | Clearance above paved sidewalk or paved driveway located on public property | 7 ft (2.13 m)† | 7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard. |
| M = | Clearance under veranda, porch, deck, or balcony | 12 in (30 cm)‡ | * |

* Clearance in accordance with local installation codes and the requirements of the gas supplier.
 † A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.
 ‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

NOTES:

- 1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code
- 2) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

4 Sidewall direct venting *(continued)*

Prepare wall penetrations

1. Use the factory supplied wall plate as a template to locate the vent and air intake holes and mounting holes.

Air pipe penetration:

- a. Cut a hole for the air pipe. Size the air pipe hole as close as desired to the air pipe outside diameter.

Vent pipe penetration:

- a. Cut a hole for the vent pipe. For either combustible or noncombustible construction, size the vent pipe hole with at least a 1/2 inch clearance around the vent pipe outer diameter:
 - 5½ inch hole for 4 inch vent pipe
 - 7½ inch (191 mm) hole for 6 inch (152 mm) vent pipe

Drill 3/16" diameter holes for inserting the plastic anchors into the wall.

2. For Polypropylene Only: Install the vent and air intake sidewall adapters from Table 3J into the vent plate. Slide the sidewall retaining bracket down the sidewall adapters flush to the vent plate.
3. For PVC/CPVC Only: Install the vent and air intake piping through the wall into the vent plate openings. Use RTV silicone sealant to seal the air pipe. Use the cement/primer listed in Table 3H to seal the vent pipe.
4. Mount and secure the vent plate to the wall using stainless steel screws. Seal around the plate to the wall assuring no air gaps.
5. Seal all gaps between the pipes and wall. Seal around the plate to the wall assuring no air gaps.
6. Assemble the vent cap to the vent plate. Insert the stainless-steel screws into the vent cap screw hole openings and securely attach the vent cap to the vent plate.
7. Seal all wall cavities.
8. PVC/CPVC terminations are designed to accommodate any wall thickness of standard constructions per the directions found in this manual.
9. Stainless steel terminations are designed to penetrate walls with a thickness up to 9.25 inches of standard construction.

Figure 4-5A Sidewall Termination Assembly


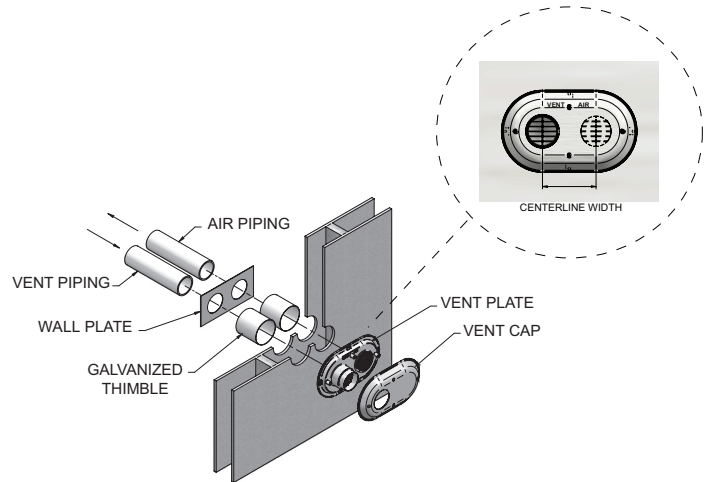 


Table 4D Sidewall Vent Centerline Dimensions

| Model | Air | Vent | Centerline Width |
|------------|-----|------|------------------|
| 500 | 4" | 4" | 5 5/8" |
| 750 - 1000 | 6" | 6" | 7 3/4" |

 Figure 4-5B Polypropylene Sidewall Termination Assembly

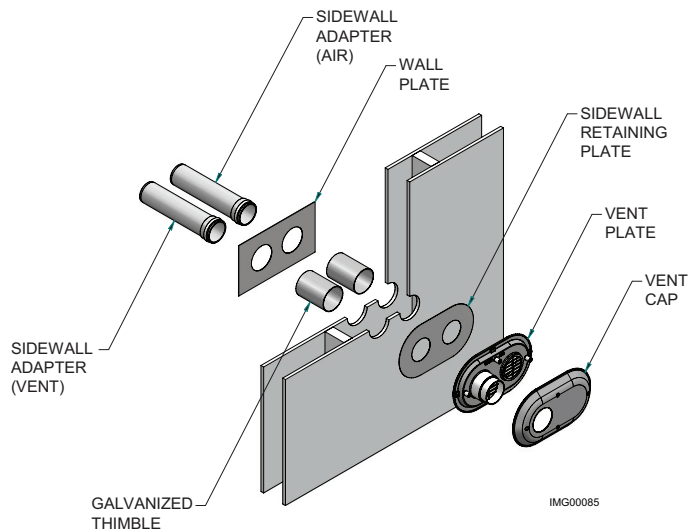


4 Sidewall direct venting

Prepare wall penetrations (Alternate - Field Supplied Option)

1. Air pipe penetration:
 - a. Cut a hole for the air pipe. Size the air pipe hole as close as desired to the air pipe outside diameter.
2. Vent pipe penetration:
 - a. Cut a hole for the vent pipe. For either combustible or noncombustible construction, size the vent pipe hole with at least a 1/2 inch clearance around the vent pipe outer diameter:
 - 5½ inch hole (140 mm) for 4 inch (102 mm) vent pipe
 - 7½ inch hole (191 mm) for 6 inch (152 mm) vent pipe
 - b. Insert a galvanized metal thimble in the vent pipe hole as shown in FIG. 4-5C.
3. Use a sidewall termination plate as a template for correct location of hole centers.
4. Follow all local codes for isolation of vent pipe when passing through floors or walls.
5. Seal exterior openings thoroughly with exterior caulk.

 Figure 4-5C A Typical Sidewall Termination Assembly - PVC/CPVC or Stainless Steel

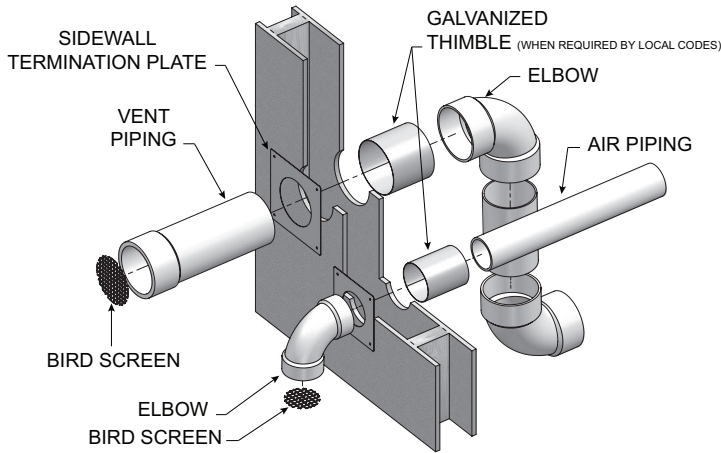

Multiple vent/air terminations

1. When terminating multiple Regent water heaters terminate each vent/air connection as described in this manual (FIG. 4-6A).

⚠ WARNING All vent pipes and air inlets must terminate at the same height to avoid possibility of severe personal injury, death, or substantial property damage.

2. Place wall penetrations to obtain minimum clearance of 12 inches between edge of air inlet and adjacent vent outlet, as shown in FIG. 4-6A for U.S. installations. For Canadian installations, provide clearances required by CSA B149.1 Installation Code.
3. The air inlet of a Regent water heater is part of a direct vent connection. It is not classified as a forced air intake with regard to spacing from adjacent water heater vents.

Figure 4-6A Multiple Vent Terminations (must also comply with Figure 4-1A)


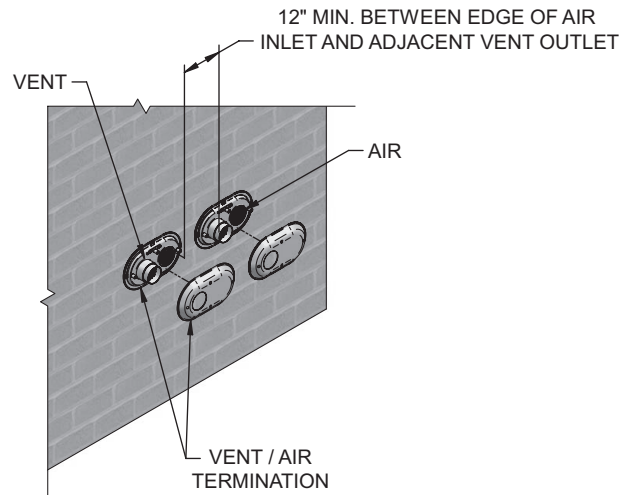 


Figure 4-6B Alternate Multiple Vent Terminations w/Field Supplied Fittings (must also comply with Figure 4-1B)

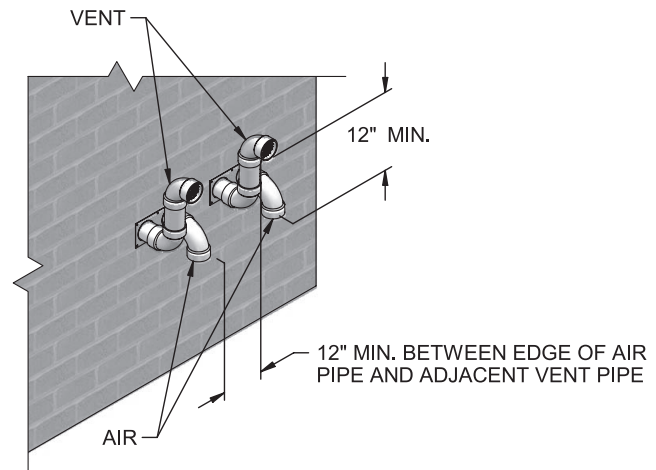 

4 Sidewall direct venting *(continued)*


Sidewall termination – optional concentric vent: Model 500

Description and usage

Lochinvar offers optional concentric combustion air and vent pipe termination kits (Factory Kit #100140484 for 4" diameter - Model 500). Both combustion air and vent pipes must attach to the termination kit. The termination kits must terminate outside the structure and must be installed as shown below in FIG. 4-7.

The required combustion vent pipe materials are listed in Table 3H of this manual.

 Figure 4-7 Concentric Sidewall Termination

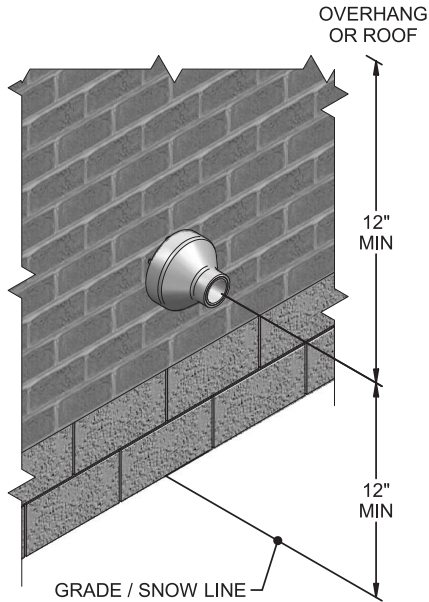

Sidewall termination installation

1. Determine the best location for the termination kit (see FIG. 4-7).
2. Reference the *Determine Location Section* of this manual for general termination considerations.
3. Cut one (1) hole 7 inch diameter into the structure to install the termination kit.
4. Partially assemble the concentric vent termination kit. Clean and cement using the procedures found in these instructions.
 - a. Cement the Y concentric fitting to the larger kit pipe (FIG. 4-9).
 - b. Cement the rain cap to the smaller diameter kit pipe (FIG. 4-9).

Figure 4-8 Kit Contents_100140484 - Model 500


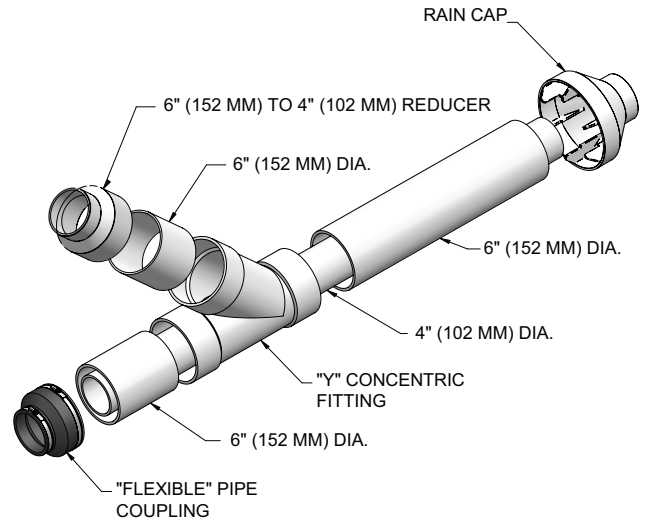 


Figure 4-9 Concentric Vent Dimensional Drawing - Model 500

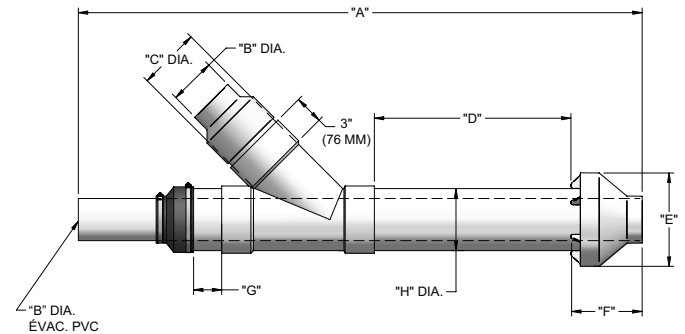 

| A | B | C | D | E | F | G | H |
|-----|----|----|---------|-----|--------|----|--------|
| 60" | 4" | 6" | 21 1/8" | 10" | 7 5/8" | 3" | 6 5/8" |

NOTICE Instead of cementing the smaller pipe to the rain cap, a field-supplied stainless-steel screw may be used to secure the two (2) components together when field disassembly is desired for cleaning (see FIG. 4-11).

WARNING When using the alternate screw assembly method, drill a clearance hole in the rain cap and a pilot hole in the vent pipe for the screw size being used. Failure to drill adequate holes may cause cracking of PVC components, allowing combustion products to be recirculated. Failure to follow this warning could result in personal injury or death.

4 Sidewall direct venting

Sidewall termination – optional concentric vent: Model 500

WARNING Do not operate the appliance with the rain cap removed or recirculation of combustion products may occur. Water may also collect inside the larger combustion air pipe and flow to the burner enclosure. Failure to follow this warning could result in product damage or improper operation, personal injury, or death.


NOTICE Ensure termination location clearance dimensions are as shown in FIG. 4-7.

NOTICE If assembly needs to be extended to allow sidewall thickness requirement, the two (2) pipes supplied in the kit may be replaced by using the same diameter, field-supplied SDR-26 PVC (D2241) pipe and standard schedule 40 PVC. Do not extend dimension D* more than 60 inches (see FIG. 4-9 thru 4-11).

NOTICE If assembly depth needs to be reduced, dimension D can be as short as possible.

CAUTION DO NOT use field-supplied couplings to extend pipes. Airflow restriction will occur and may cause intermittent operation.

 Figure 4-10 Rain Cap to Vent Pipe Alternate Assembly

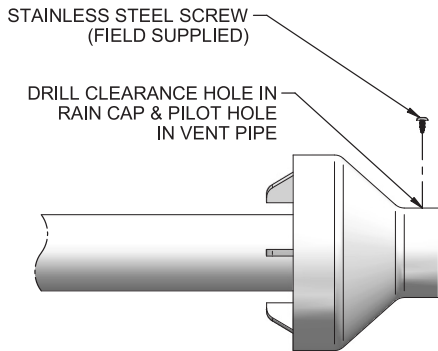

6. Install the Y concentric fitting and pipe assembly through the structure's hole.

9. Cement appliance combustion air and vent pipes to the concentric vent termination assembly. See FIG. 4-11 for proper pipe attachment.

NOTICE Do not allow insulation or other materials to accumulate inside the pipe assembly when installing through the hole.

10. Operate the appliance one (1) heat cycle to ensure combustion air and vent pipes are properly connected to the concentric vent termination connections.


7. Install the rain cap and small diameter pipe assembly into the Y concentric fitting and large pipe assembly. Ensure small diameter pipe is fastened tightly into the rubber adapter.

Multi-venting sidewall terminations

8. Secure the assembly to the structure as shown in FIG. 4-11 using field-supplied metal strapping or equivalent support material.

When two (2) or more direct vent appliances are vented near each other, each appliance must be individually vented (see FIG. 4-12). NEVER common vent or breach vent this appliance. When two (2) or more direct vent appliances are vented near each other, two (2) vent terminations may be installed as shown in FIG. 4-12. It is important that vent terminations be made as shown to avoid recirculation of flue gases.

 Figure 4-11 Concentric Vent Sidewall Attachment

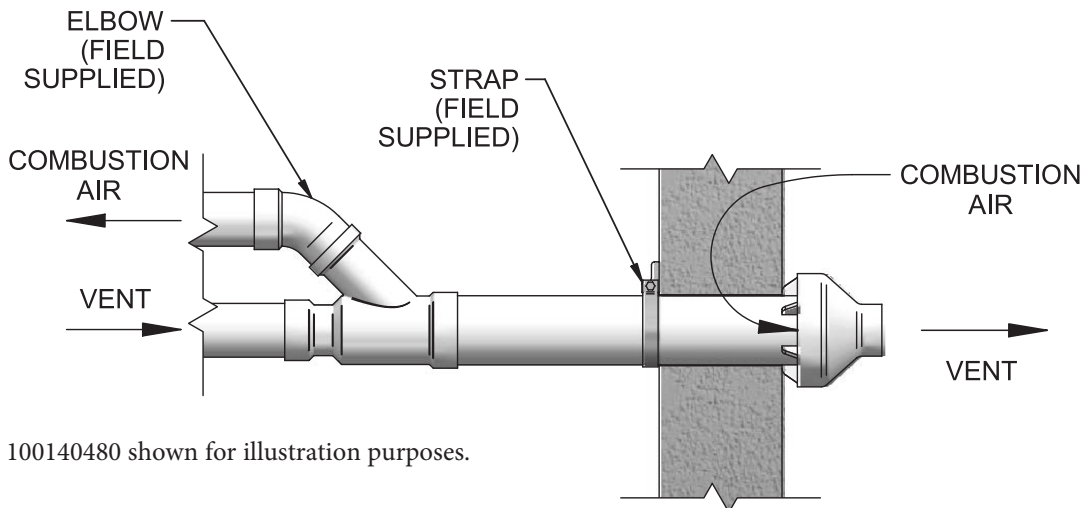


Note: 100140480 shown for illustration purposes.

4 Sidewall direct venting *(continued)*

Sidewall termination – optional concentric vent: Model 500

 Figure 4-12 Concentric Vent and Combustion Air Termination

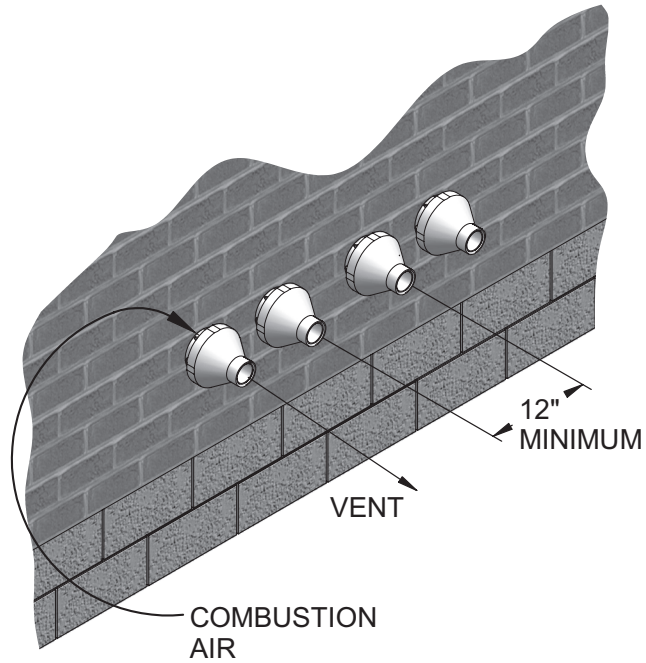

5 Vertical direct venting

Vent/air termination – vertical

WARNING Follow instructions below when determining vent location to avoid possibility of severe personal injury, death, or substantial property damage.

Determine location

Locate the vent/air terminations using the following guidelines:

1. The total length of piping for vent or air must not exceed the limits given in the General Venting Section of this manual.
2. Prepare the vent termination and the air termination elbow (FIG. 5-1A) by inserting bird screens. Bird screens should be obtained locally.
3. The vent must terminate at least 3 feet above the highest place in which the vent penetrates the roof and at least 2 feet above any part of a building within 10 horizontal feet.
4. The air piping must terminate in a down-turned 180° return pipe no further than 2 feet from the center of the vent pipe. This placement avoids recirculation of flue products into the combustion air stream.
5. The vent piping must terminate in an up-turned coupling as shown in FIG. 5-1A. The top of the coupling must be at least 1 foot above the air intake. When the vent termination uses a rain cap as illustrated in FIG. 5-1B maintain at least 36" (914 mm) above the air inlet. The air inlet pipe and vent pipe can be located in any desired position on the roof, but must always be no further than 2 feet (.6 m) apart and with the vent termination at least 1 foot for PVC and 3 feet for stainless steel, above the air intake.
6. Maintain the required dimensions of the finished termination piping as shown in FIG. 5-1A.
7. Do not extend exposed vent pipe outside of building more than shown in this document. Condensate could freeze and block vent pipe.

WARNING Rooftop vent and air inlet terminations must terminate in the same pressure zone, unless vertical vent sidewall air is set up as shown in the General Venting - Vertical Vent, Sidewall Air Section.

Figure 5-1A PVC/CPVC Vertical Termination of Air and Vent


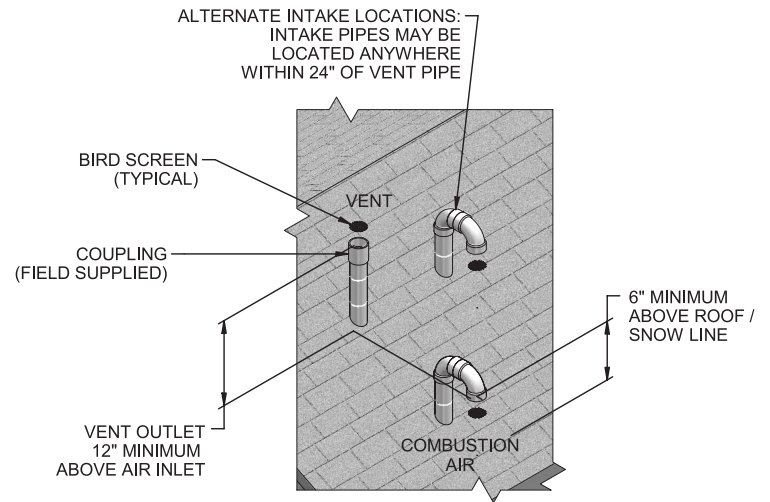 


Figure 5-1B Stainless Steel Vertical Termination of Air and Vent

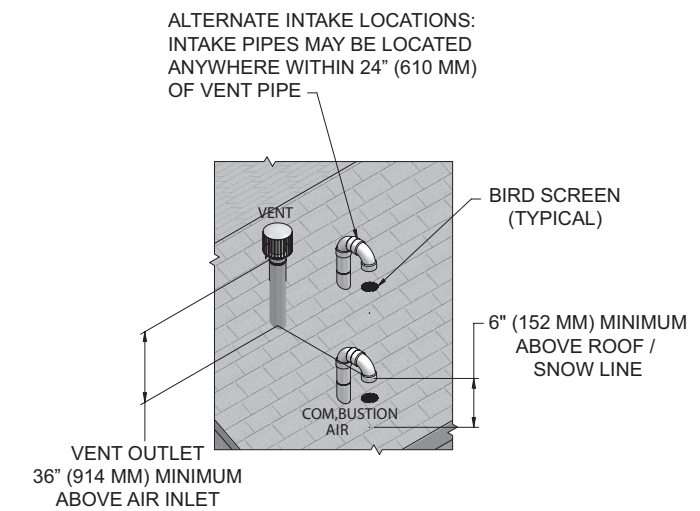 

8. Locate terminations so they are not likely to be damaged by foreign objects, such as stones or balls, or subject to buildup of leaves or sediment.

5 Vertical direct venting *(continued)*

Vent/air termination – vertical

Prepare roof penetrations

1. Air pipe penetration:
 - a. Cut a hole for the air pipe. Size the air pipe hole as close as desired to the air pipe outside diameter.
2. Vent pipe penetration:
 - a. Cut a hole for the vent pipe. For either combustible or noncombustible construction, size the vent pipe hole with at least a 1/2 inch clearance around the vent pipe outer diameter:
 - 5½ inch (140 mm) hole for 4 inch (102 mm) vent pipe
 - 7½ inch (191 mm) hole for 6 inch (152 mm) vent pipe
 - b. Insert a galvanized metal thimble in the vent pipe hole.
3. Space the air and vent holes to provide the minimum spacing shown in FIG. 5-1A.
4. Follow all local codes for isolation of vent pipe when passing through floors, ceilings, and roofs.

5. Provide flashing and sealing boots sized for the vent pipe and air pipe.

Multiple vent/air terminations

1. When terminating multiple Regent water heaters, terminate each vent/air connection as described in this manual (FIG. 5-2).

⚠ WARNING

Terminate all vent pipes at the same height and all air pipes at the same height to avoid possibility of severe personal injury, death, or substantial property damage.

2. Place roof penetrations to obtain minimum clearance of 12 inches between edge of air intake elbow and adjacent vent pipe of another water heater for U.S. installations (see FIG. 5-2). For Canadian installations, provide clearances required by CSA B149.1 Installation Code.
3. The air inlet of a Regent water heater is part of a direct vent connection. It is not classified as a forced air intake with regard to spacing from adjacent water heater vents.

Figure 5-2 Vertical Terminations with Multiple Water Heaters


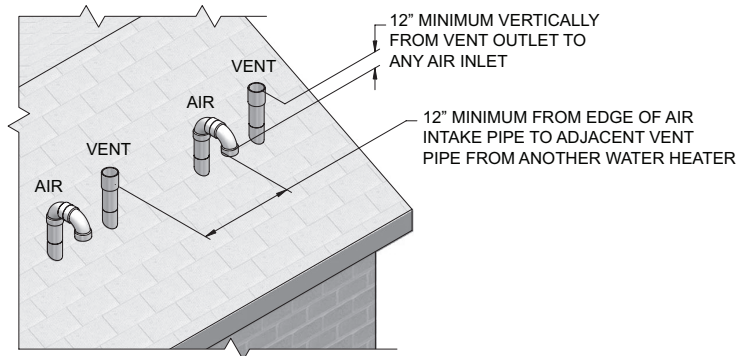 


Figure 5-3 Alternate Vertical Terminations with Multiple Water Heaters

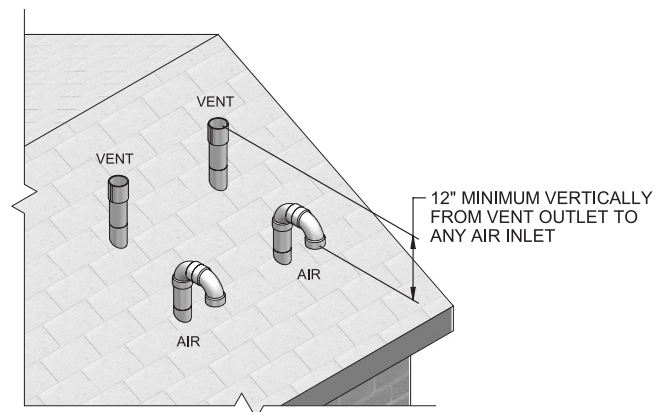 

5 Vertical direct venting

Vertical termination – optional concentric vent: Model 500

Description and usage

Lochinvar offers an optional concentric combustion air and vent pipe termination kit. Both combustion air and vent pipes must attach to the termination kit. The termination kit must terminate outside the structure and must be installed as shown in FIG. 5-4.


Field supplied pipe and fittings are required to complete the installation.

The required combustion vent pipe and fittings are listed in Table 3H of this manual.

Vertical termination installation

1. See Section 5, Vertical Direct Venting - Determine Location (where applicable).

 Figure 5-4 Concentric Vertical Termination

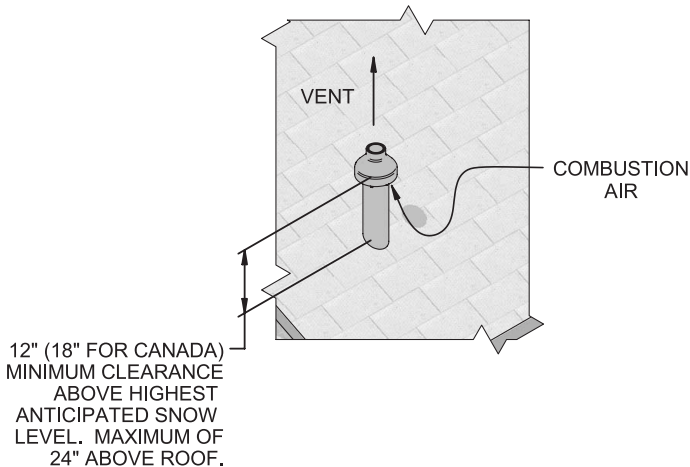

2. Cut one (1) hole (7 inch diameter for #100140484 installations) into the structure to install the termination kit.
3. Partially assemble the concentric vent termination kit. Clean and cement following the cleaning procedures in these instructions.
 - a. Cement the Y concentric fitting to the larger diameter kit pipe (see FIG. 4-8 and 4-9).
 - b. Cement rain cap to the smaller diameter kit pipe (see FIG. 4-8 and 4-9).
 - c. Do not attach a U-Bend to the rain cap. Doing so could cause recirculation (see FIG. 5-5).

NOTICE

Instead of cementing the smaller pipe to the rain cap, a field supplied stainless steel screw may be used to secure the two (2) components together when field disassembly is desired for cleaning (see FIG. 4-12).

WARNING

When using the alternate screw assembly method, drill a clearance hole in the rain cap and a pilot hole in the vent pipe for the screw size being used. Failure to drill adequate holes may cause cracking of PVC components, allowing combustion products to be recirculated. Failure to follow this warning could result in personal injury or death.

Figure 5-5 Do Not Install U-Bend to Rain Cap



5 Vertical direct venting *(continued)*

Vertical termination – optional concentric vent: Model 500


WARNING Do not operate the appliance with the rain cap removed or recirculation of combustion products may occur. Water may also collect inside the larger combustion air pipe and flow to the burner enclosure. Failure to follow this warning could result in product damage or improper operation, personal injury, or death.

4. Install the Y concentric fitting pipe assembly up through the structure's hole and field supplied roof boot/flashing.

NOTICE Do not allow insulation or other materials to accumulate inside the pipe assembly when installing through the hole.

5. Secure the assembly to the roof structure as shown below in FIG. 5-6 using field supplied metal strapping or equivalent support material.

 Figure 5-6 Concentric Vent Roof Installation

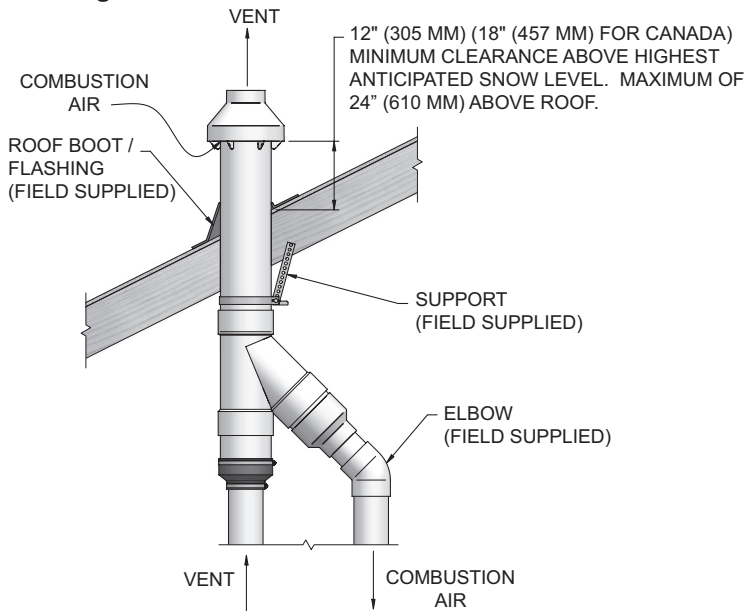

NOTICE Ensure termination height is above the roof surface or anticipated snow level (12 inches in U.S.A. or 18 inches in Canada) as shown in FIG. 5-4.

NOTICE If assembly is too short to meet height requirement, the two (2) pipes supplied in the kit may be replaced by using the same diameter, field supplied SDR-26 PVC (D2241) pipe and standard schedule 40 PV. Do not extend dimension D* more than 60 inches (see FIG. 4-10 and 4-11).


CAUTION DO NOT use field-supplied couplings to extend pipes. Airflow restriction will occur.

6. Install the rain cap and the small diameter pipe assembly into the roof penetration assembly. Ensure the small diameter pipe is fastened tightly into the rubber adapter for #100140484 installations.
7. Cement the appliance combustion air and vent pipes to the concentric vent termination assembly. See FIG. 5-6 for proper pipe attachment.
8. Operate the appliance through one (1) heat cycle to ensure combustion air and vent pipes are properly connected to the concentric vent termination connections.

Multi-venting vertical terminations

When two (2) or more direct vent appliances are vented near each other, each appliance must be individually vented (see FIG. 5-7). NEVER common vent or breach vent this appliance. When two (2) or more direct vent appliances are vented near each other, two (2) vent terminations may be installed as shown in FIG. 5-7. It is important that vent terminations be made as shown to avoid recirculation of flue gases.

 Figure 5-7 Concentric Vent and Combustion Air Vertical Termination

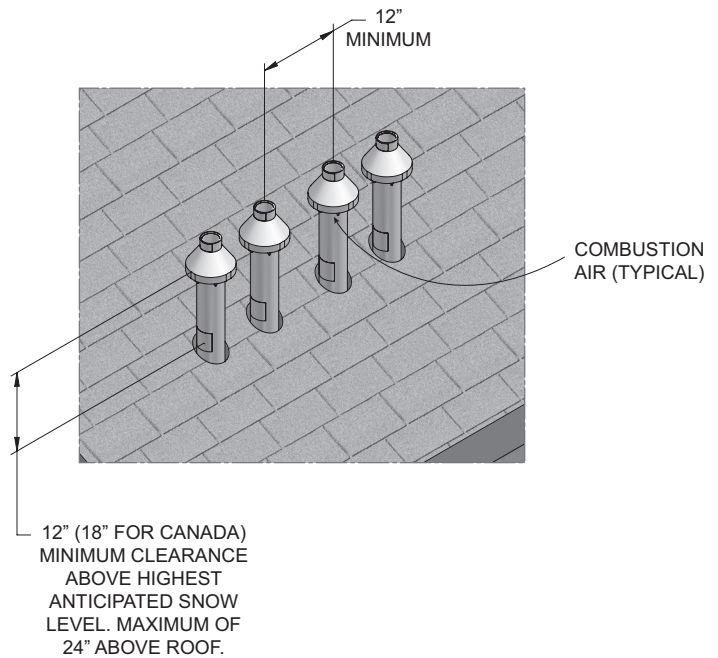

5 Vertical direct venting

Alternate vertical concentric venting

This appliance may be installed with a concentric vent arrangement where the vent pipe is routed through an existing unused venting system; or by using the existing unused venting system as a chase for vent and combustion air routing.

Concentric Venting Arrangement

The venting is to be vertical through the roof. The annular space between the O.D. of the vent pipe and the I.D. of the existing unused venting system is utilized for the combustion air source.

The minimum size of the existing vent system required to achieve enough annular space for combustion air can be found in Table 5A below.

The upper and lower termination as well as any other unsealed joints in the existing vent system **must be** sealed to ensure that all combustion air is drawn from under the vent cap as shown in FIG. 5-8 and 5-9.

Approved venting materials must be used as specified in Table 3H.

Follow all vent / air termination and clearance requirements per this section to the appropriate example. Installation must comply with local requirements and with the National Fuel Gas Code.

The maximum allowable equivalent vent and air intake lengths for this venting arrangement are to be determined from the General Venting Section.


If an existing unused venting system is converted for use with this method of concentric venting, the installer must ensure that the existing venting system is clean and free from debris contamination that will harm this appliance and cause increased nuisance calls or maintenance. See Table 1A for a list of corrosive contaminants and sources.

Two example scenarios of a concentric venting arrangement are shown for illustrative purposes in FIG. 5-8 and 5-9.

Table 5A Alternate Vertical Concentric Vent / Chase Sizes


| Model | Vent / Air Inlet Size | Minimum Existing Vent / Chase Size |
|------------|-----------------------|------------------------------------|
| 500 | 4" | 7" |
| 750 - 1000 | 6" | 10" |

 Figure 5-8 Concentric Vent Example 1

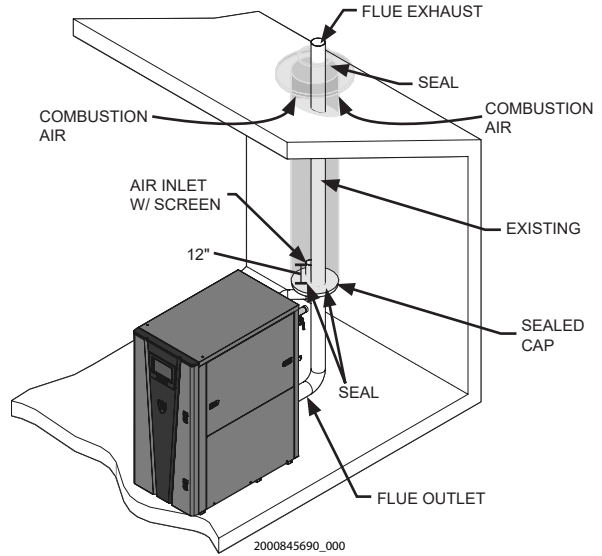

*For concept illustration only. Individual installations may vary due to job site specific equipment.

 Figure 5-9 Concentric Vent Example 2

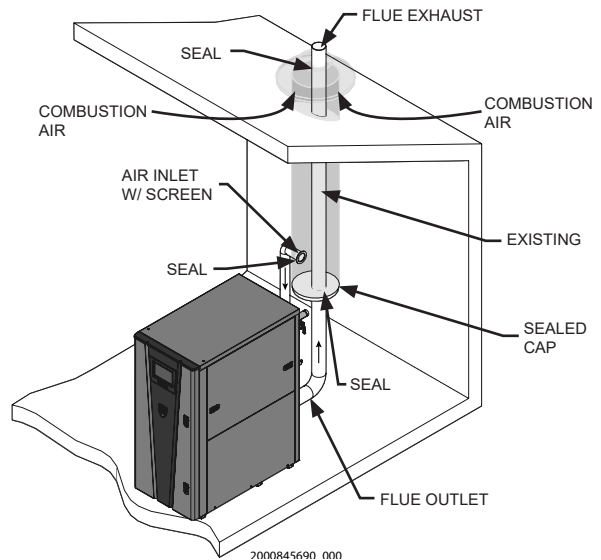


5 Vertical direct venting *(continued)*

Existing vent as a chase

Follow all existing termination and clearance requirements and allowable pipe lengths. Use only approved venting materials listed in the General Venting Section of this manual.

 Figure 5-10 Existing Vent as a Chase

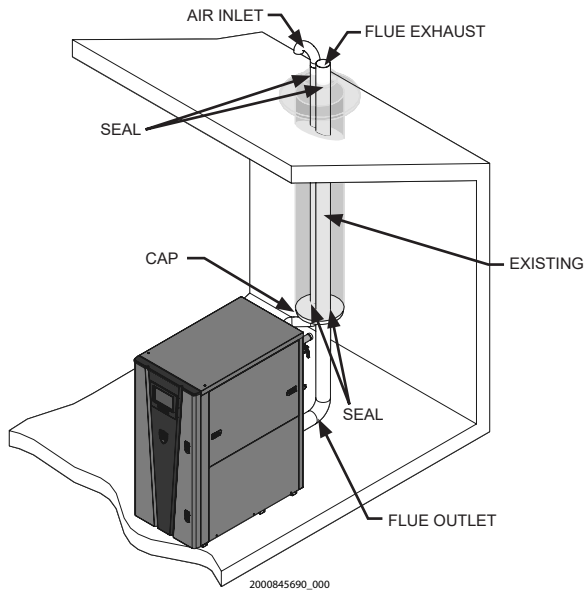

*For concept illustration only. Individual installations may vary due to job site specific equipment.

6 Outdoor installations

Outdoor venting

- In order to properly install the appliance in an outdoor configuration, the outdoor installation kit must be purchased from the factory.
- In order to properly install the appliance in an outdoor configuration the optional outdoor kit must be used (see Table 6A).
- Vent materials for outdoor venting are to be field supplied.
- Vent materials must be stainless steel.
- The vent must terminate at least 36 inches above the top of the unit.
- All vent materials must be supported as recommended by the vent manufacturer.
- The terminations in Table 6B must be used.

Table 6A Indoor to Outdoor Conversion Kit

| Model | Indoor to Outdoor Conversion Kit |
|----------|----------------------------------|
| 500 | 100400878 |
| 750-1000 | 100400879 |

NOTICE Before installing a venting system, follow all requirements found in the General Venting section of this manual.

Units are self-venting and can be used outdoors when installed with the optional outdoor kit. All vent materials must be field supplied and supported per the vent manufacturer's instructions.

WARNING Only use the vent caps specified in this manual. Personal injury or product damage may result if any other cap is used, or if an indoor model is used outdoors. Properly install all covers, doors, and jacket panels to ensure proper operation and prevent a hazardous condition.

Combustion air supply must be free of contaminants (see the Combustion and Ventilation Air Requirements section of this manual). To prevent recirculation of the flue products into the combustion air inlet, follow all instructions in this section.

Outdoor vent / air inlet location

Keep venting areas free of obstructions. Keep area clean and free of combustible and flammable materials. Maintain minimum clearances to combustibles as stated in this manual.

Location of unit

For outdoor models, you must install a flue termination. Instructions for mounting the flue termination are included in this manual. Do not install outdoor models directly on the ground. You must install the outdoor unit on a concrete, brick, block, or other non-combustible pad. See Outdoor Installation Venting.

CAUTION This unit shall not be installed in locations where temperatures may reach below 32°F (0°C). Exposure to freezing temperatures will cause the system and appliance to freeze and leak.

Figure 6-1 Outdoor installation

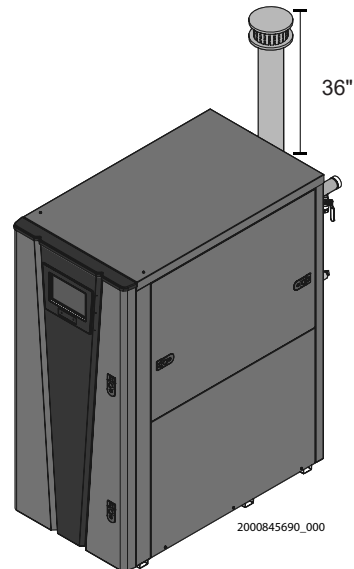 


Table 6B Approved Stainless Steel Adapters and Rain Caps

| Model | DuraVent | | Z-Flex | | Heat Fab | | Metal Fab | | Security Chimney | |
|------------|---------------|----------|----------|------------|----------|-----------|-----------|------------|------------------|----------|
| | Adapter | Rain Cap | Adapter | Rain Cap | Adapter | Rain Cap | Adapter | Rain Cap | Adapter | Rain Cap |
| 500 | FSA-4PVC-4FNS | FSRC4 | 2SVSLA04 | 2SVSXITC04 | 9401PVC | CCA04EX06 | 4CGPVCA | 4FCSEC-C60 | SS4PVCU | SS4ECU |
| 750 - 1000 | 810005231 | FSRC6 | - | - | 9601PVC | CCA06EX08 | 6CGPVCA | 6FCSEC-C60 | SS6PVCU | SS6ECU |

6 Outdoor installations *(continued)*

Outdoor venting

NOTICE

Before installing a venting system, follow all requirements found in the General Venting section.

Units are self-venting and can be used outdoors when installed with the optional outdoor kit.

Combustion air supply must be free of contaminants (see Combustion and Ventilation Air in this manual). To prevent recirculation of the flue products into the combustion air inlet, follow all instructions in this section.

Outdoor vent/air inlet location

Keep venting areas free of obstructions. Keep area clean and free of combustible and flammable materials. Maintain a minimum clearance of 3" (76 mm) to combustible surfaces and a minimum of 36" (915 mm) clearance to the air inlet. To avoid a blocked air inlet or blocked flue condition, keep the air inlet, flue outlet, and condensate trap clear of leaves, debris, etc.

Do not install outdoor models directly on the ground. You must install the outdoor unit on a concrete, brick, block, or other non-combustible pad.

Do not locate unit so that high winds can deflect off of adjacent walls, buildings, or shrubbery causing recirculation. Recirculation of flue products may cause operational problems, bad combustion, or damage to controls.

Multiple unit outdoor installations require 48" (1.22 m) clearance between each vent cap. Locate outdoor cap at least 48" (1.22m) below and 48" (1.22 m) horizontally from any window, door, walkway, or gravity air intake.


Locate unit at least 10 feet (3.05 m) away from any forced air inlet.

Locate unit at least 3 feet (0.91 m) outside any overhang.

Clearances around outdoor installations can change with time. Do not allow the growth of trees, shrubs, or other plants to obstruct the proper operation of the outdoor vent system.

Do not install in locations where rain from building runoff drains will spill onto the unit.

 Figure 6-2 Outdoor Venting - Stainless Steel

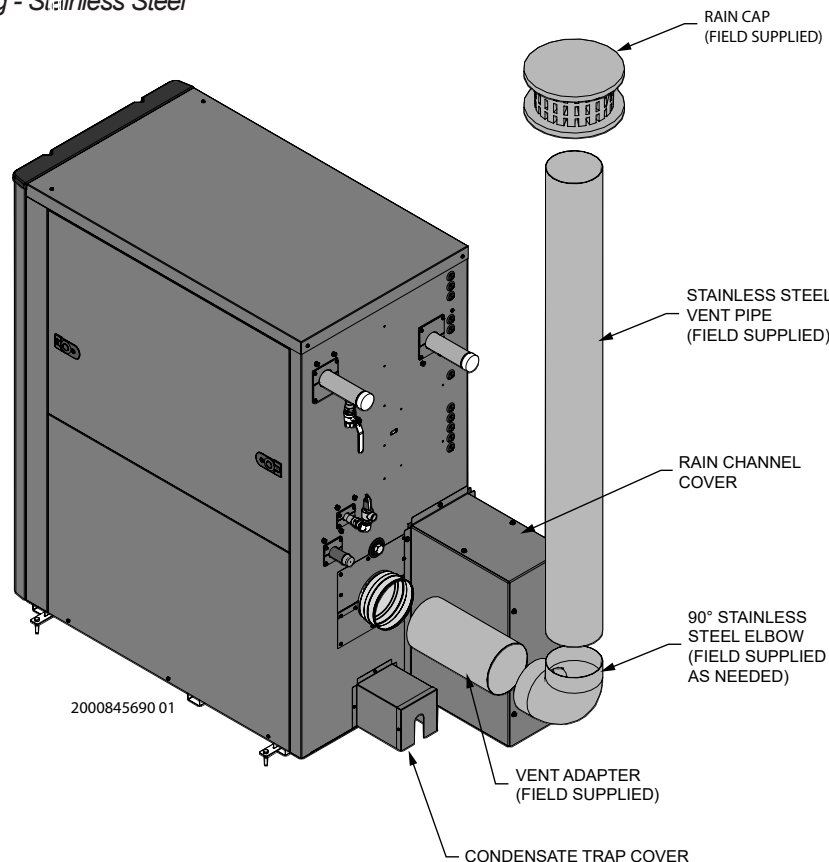

NOTE: See Table 6B for approved stainless-steel adapters and rain caps.

7 System piping

System water piping methods

Observe a minimum of 1/4 inch clearance around all un-insulated hot water pipes when openings around the pipes are not protected by non-combustible materials.

Water connections

The inlet and outlet water connections on the Regent water heaters are 2" copper sweat. The connections also have a groove in case a groove-lock fitting is preferred. For copper-to-copper connections, Victaulic style 607 QuikVic rigid couplings are recommended. For copper-to-stainless steel connections, Victaulic style 644 transition couplings are recommended. For other groove-lock connection styles contact your local plumbing supplier.

Internal Circulating Pump

The Regent water heater is factory equipped with a stainless-steel circulating pump. The internal circulating pump operates whenever the unit is powered and maintains water flow through the heat exchanger for optimal temperature delivery and performance.

NOTICE

The internal circulating pump in a Regent water heater operates whenever the unit is powered. The water heater must be filled with water prior to applying line voltage to the terminal strip to avoid damage to the circulating pump.

NOTICE

The Regent IWH0500 model includes a 3-speed circulating pump. The speed selector must be set to high speed (III) to protect the heat exchanger during operation.

Water Pressure Drop

The Regent water heater will not introduce pressure drop to the water heating system when operating below the maximum flow rate listed in Table 7B.

General piping information

Basic steps are listed below along with illustrations on the following pages (FIG. 7-2 thru 7-3), which will guide you through the installation of the Regent water heater.

1. Connect the cold water supply to the inlet side of the water heater.
2. Connect the hot water supply to the outlet side of the water heater.
3. Install a backflow preventer on the cold feed supply line.
4. Install an expansion tank on the system supply. Consult the tank manufacturer's instruction for specific information relating to tank installation. Size the expansion tank for the required system volume and capacity.
5. Install a drain valve at the lowest point of the system.

6. This appliance is supplied with a relief valve sized in accordance with ASME Boiler and Pressure Vessel Code, Section IV ("Heating Boilers"). Pipe the discharge of the safety relief valve to a suitable drain to prevent injury in the event of pressure relief. Provide piping that is the same size as the safety relief valve outlet. Never block the outlet of the safety relief valve.

See the piping illustrations included in this section, FIG. 7-2 thru 7-3 for suggested guidelines in piping the Regent water heater.


NOTICE

*Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment and detailing required by local codes.

Scalding

This water heater can deliver scalding temperature water to any fixture in the system. Be careful whenever using hot water to avoid scalding injury. Certain appliances such as dishwashers and automatic clothes washers may require increased temperature water. By setting the thermostat on this water heater to obtain the increased temperature water required by these appliances, you may create the potential for scald injury. To protect against injury, appropriate ASSE certified scald protecting devices must be installed in the water system. These devices will reduce points of discharge temperature by mixing cold and hot water in branch supply lines. Such valves are available from the local plumbing supplier. Mixing valves must be installed according to valve manufacturer instructions.

 Figure 7-1 Scald Warning Label Located on the Appliance

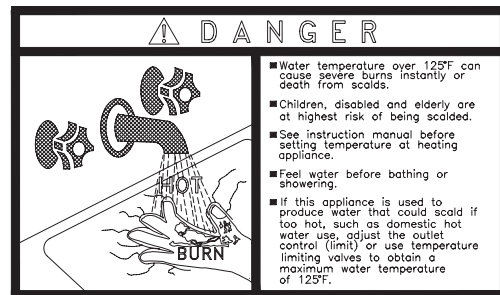

The following chart (Table 7A) details the relationship of water temperature and time with regard to scald injury and may be used as a guide in determining the safest water temperature for your applications.

Table 7A Approximate Time / Temperature Scald Chart

| APPROXIMATE TIME / TEMPERATURE RELATIONSHIPS IN SCALDS | |
|--|---------------------|
| 120°F | More than 5 minutes |
| 125°F | 1 1/2 to 2 minutes |
| 130°F | About 30 seconds |
| 135°F | About 10 seconds |
| 140°F | Less than 5 seconds |
| 145°F | Less than 3 seconds |
| 150°F | About 1 1/2 seconds |
| 155°F | About 1 second |

7 System piping *(continued)*

Water chemistry

Water with a hardness of less than 5 grains per gallon will usually have a pH which can be aggressive and corrosive causing non-warrantable damage to the pump, and associated piping. Corrosion due to water chemistry generally shows up first in the hot water system because heated water increases the rate of corrosive chemical reactions.

Piping components

Water heater system piping:

System piping should be sized based on the water heater application and hot water flow requirements. Reducing the pipe size will increase the system pressure drop and may reduce the water pressure and flow to fixtures in the system.

Maximum Flow rate:

Table 7B below for maximum flow rates for each model.

CAUTION Water flow rates greater than those listed in this manual may result in damage to components inside the water heater.

Table 7B Maximum Flow Rate

| Model | Maximum Flow Rate (GPM) |
|-------|-------------------------|
| 500 | 40 |
| 750 | 70 |
| 1000 | 75 |

Check valves:

Field supplied. Check valves are recommended for installation as shown in FIG. 7-2 thru 7-3. For multi-unit installations, check valves are required on the inlet of each unit.

Water heater isolation valves:

Field supplied. Full port valves are recommended to minimize the pressure losses in the water heating system.

Commissioning valve:

Factory installed. A 3/4" ball valve is located on the water heater outlet. Connect rigid piping rated for at least 200°F to the ball valve and route to a suitable drain. Flow rate of the commissioning valve may exceed 25 gallons per minute and temperatures up to 200°F.

Scald Protecting Devices:

Field supplied. Scald protecting devices to be installed as required by local or state codes and best design practices.

Point of Distribution Mixing Valve:

Field supplied. Point-of-distribution mixing valves are recommended for hot water circuits where point-of-use scald protecting devices are required by local codes.

Unions:

Field supplied. Recommended for unit serviceability.

Temperature and Pressure Relief Valve:

Factory supplied on water heaters. The temperature and pressure relief valve is sized to ASME specifications.

Strainer:

Field supplied. Required to help eliminate debris from causing damage to the heat exchanger. When installing in a pre-existing system, it is recommended to install a filter in the recirculation line capable of removing debris left in the system.

Building Recirculation Filter:

Field supplied as required. When required, helps to eliminate debris from causing damage to the heat exchanger.

System piping for multiple units (including Cascade):

Reverse-return piping is required when installing multiple Regent water heaters in a single system. Consult the system piping diagrams in this manual for recommended system piping configurations for multiple units. It is important that the system piping pressure drop is balanced across multiple units. When system balance is not possible, balancing valves may be required.

NOTICE When installing multiple Regent water heaters in the same water heating system, all units must be of the same size.

NOTICE Reduced system performance is possible when system piping is not balanced.

NOTICE Check recirculation pump size to verify it is sized for filter addition and upsize if necessary.

Cascade valve:

Required on the outlet of each water heater in multi-unit installations utilizing cascade as shown in FIG 7-3. The cascade valve is controlled by the water heater to which it is installed and connected. Cascade valves must be purchased from the factory (Kit # 100400856).

Fail-open system bypass valve:


Field supplied. A fail-open bypass valve is recommended when installing multiple Regent water heaters in a single system. The fail-open bypass will open upon a loss of power and prevent system run-dry.

7 System piping

Table 7B Water Heater Flow Rate / Typical Temperature Rise

| Water Heater Flow Rate Capacity (GPM) | | | |
|---------------------------------------|---------|---------|---------|
| Temp. Rise (°F) | IWH0500 | IWH0750 | IWH1000 |
| 50 | 19.2 | 28.8 | 38.4 |
| 70 | 13.7 | 20.5 | 27.4 |
| 90 | 10.7 | 16.0 | 21.4 |
| 120 | 8.0 | 12.0 | 16.0 |

 Figure 7-2 Single Heater - Single Temperature - DHW Recirculation

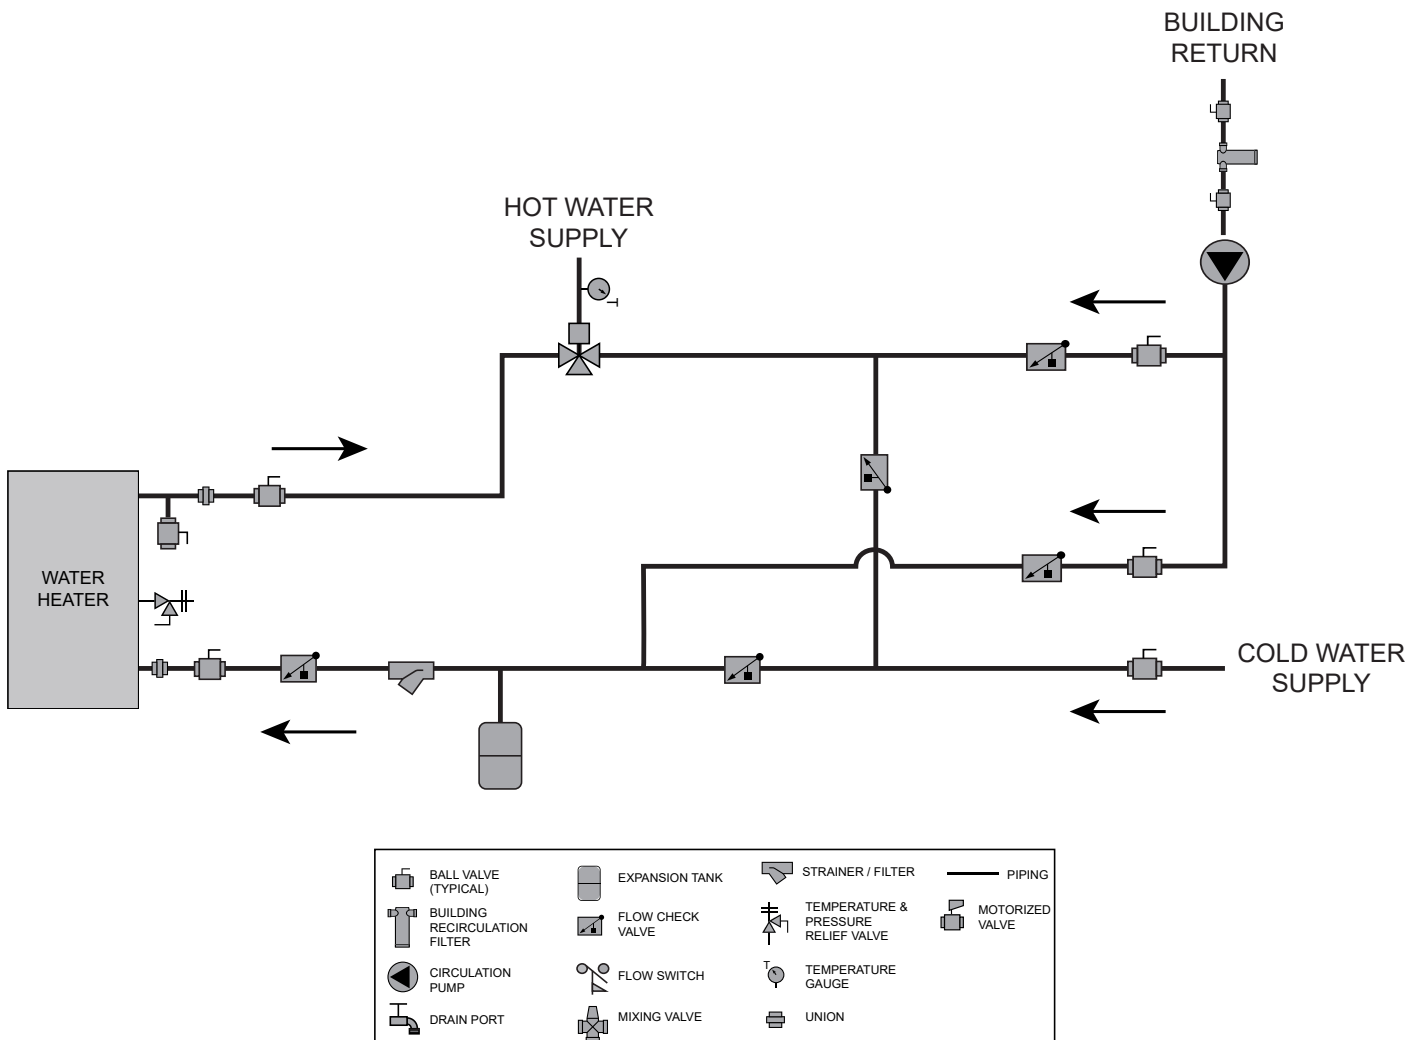


2000853527 00

NOTICE

Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment. The installer must follow all manufacturer's instructions for each system component. The installer is responsible for compliance with local codes.

7 System piping *(continued)*

 Figure 7-3 Triple Heater in Cascade - Single Temperature DHW Recirculation

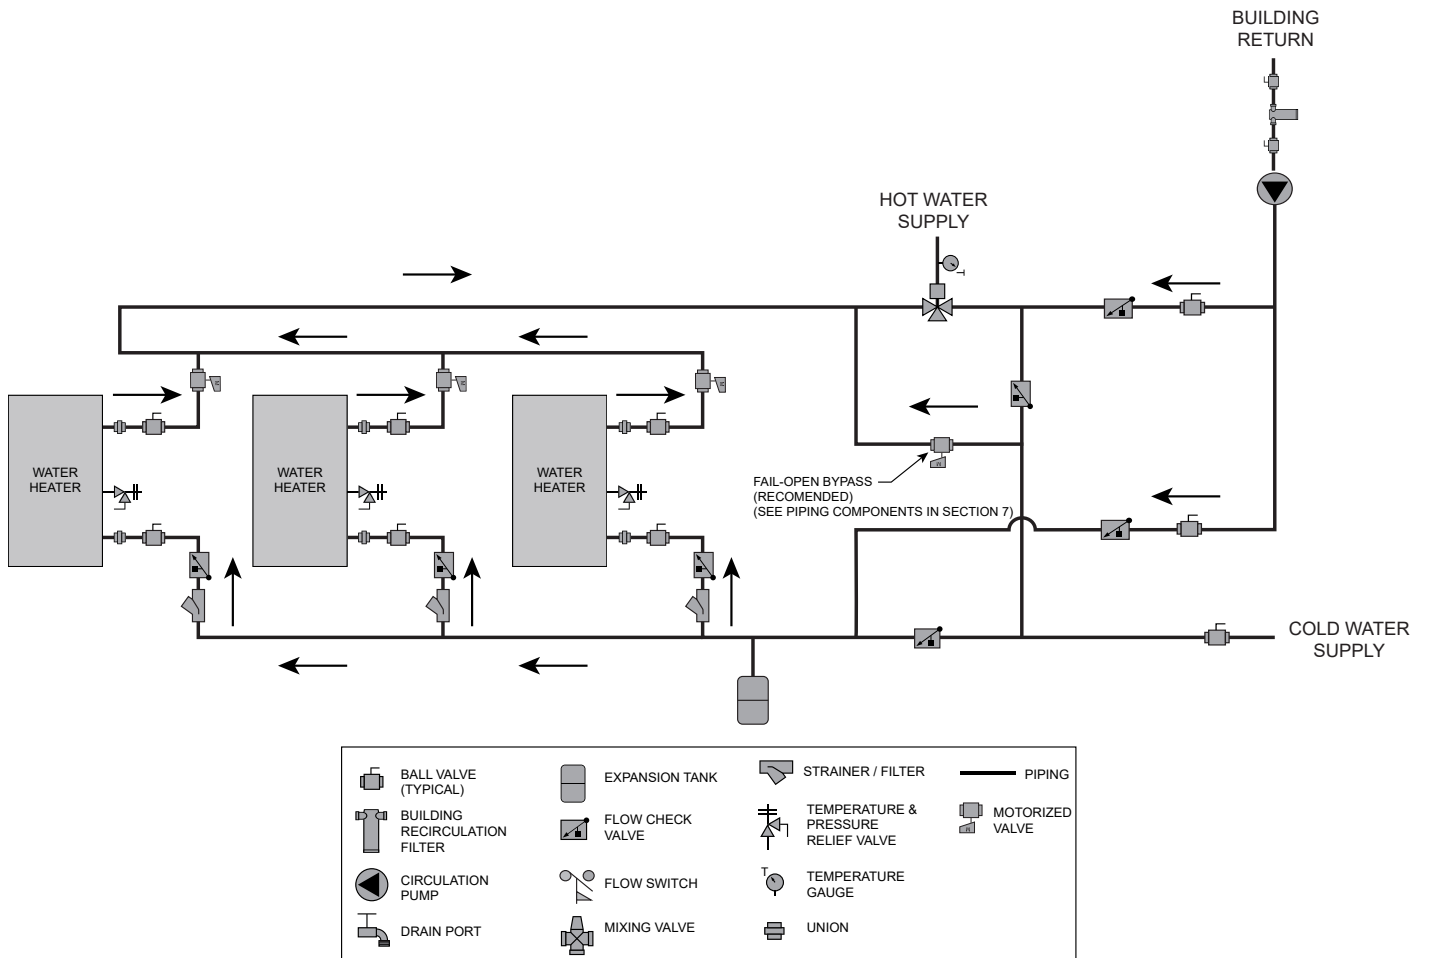

NOTICE


Please note that these illustrations are meant to show system piping concept only, the installer is responsible for all equipment. The installer must follow all manufacturer's instructions for each system component. The installer is responsible for compliance with local codes.

8 Gas connections

Connecting gas supply piping

1. Refer to FIG. 8-1 to pipe gas to the water heater.
 - a. Install ground joint union for servicing, when required.
 - b. Install the factory supplied manual shutoff valve in the gas supply piping.
 - c. In Canada – When using manual main shutoff valves, it must be identified by the installer.
2. Install sediment trap / drip leg.
3. Support piping with hangers, not by the water heater or its accessories.

 Figure 8-1 Gas Supply Piping

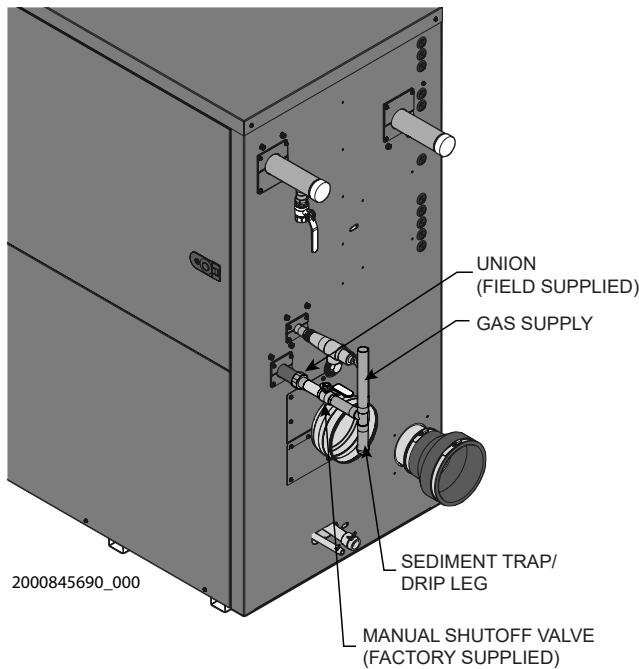

⚠ WARNING

The gas valve and blower will not support the weight of the piping. Do not attempt to support the weight of the piping with the water heater or its accessories. Failure to comply could result in severe personal injury, death, or substantial property damage.

4. Purge all air from the gas supply piping.
5. Before placing the water heater in operation, check the water heater and its gas connection for leaks.
 - a. The appliance must be disconnected from the gas supply piping system during any pressure testing of that system at a test pressure in excess of 1/2 PSIG (3.5 kPa).
 - b. The appliance and its gas connection must be leak tested before placing it in operation.

⚠ WARNING

Do not check for gas leaks with an open flame – use the bubble test. Failure to use the bubble test or check for gas leaks can cause severe personal injury, death, or substantial property damage.

6. Use pipe sealing compound compatible with propane gases. Apply sparingly only to male threads of the pipe joints so that pipe dope does not block gas flow.

⚠ WARNING

Failure to apply pipe sealing compound as detailed in this manual can result in severe personal injury, death, or substantial property damage.

⚠ WARNING

Regent water heaters are typically shipped ready to fire on natural gas. Check the water heater rating plate to determine which fuel the water heater is set for. If set to natural gas, Regent water heaters may be field converted to LP (see Section 8 for conversion instructions).


To operate on LP gas, the installer must select LP from the “Fuel type” screen and confirm the selection by agreeing to the pop-up message. The water heater MUST BE field commissioned on the new fuel type prior to placing in service. Failure to select the appropriate fuel type may result in severe personal injury, death, or substantial property damage.

⚠ WARNING

Use two wrenches when tightening gas piping at water heater (FIG. 8-2), using one wrench to prevent the water heater gas line connection from turning. Failure to support the water heater gas connection pipe to prevent it from turning could damage gas line components.

8 Gas connections

 Figure 8-2 Inlet Pipe with Backup Wrench

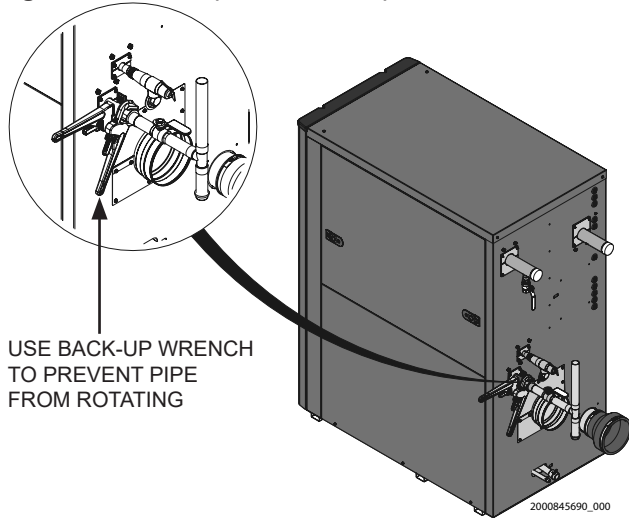

NOTICE

Maximum inlet gas pressure must not exceed the value specified. Minimum value listed is for the purposes of input adjustment.

Table 8A Inlet Pipe Connection Sizes

| Model | Pipe Connection Size |
|-------|----------------------|
| 500 | 1" |
| 750 | 1" |
| 1000 | 1-1/4" |

Natural gas:

Pipe sizing for natural gas

1. Refer to Table 8B for pipe length and diameter. Based on rated water heater input (divide by 1,000 to obtain cubic feet per hour).
 - a. Table 8B is only for natural gas with specific gravity 0.60 inches, with a pressure drop through the gas piping of 0.30 inches w.c.
 - b. For additional gas pipe sizing information, refer to ANSI Z223.1 (or B149.1 for Canadian installations).

Natural gas supply pressure requirements

1. Target a supply pressure of 7 inches w.c. (1.7 kPa) measured when the water heater is operating at minimum input rate. Gas pressure can be adjusted higher or lower than 7 inches w.c. as needed.
2. Pressure required at the gas valve inlet pressure port:
 - Maximum 14 inches w.c. with no flow (lockup) or with water heater on.
 - Minimum 2.5 inches w.c. with gas flowing (verify during water heater startup).
3. Install 100% lockup gas pressure regulator in supply line if inlet pressure can exceed 14 inches w.c. at any time. Adjust lockup regulator for 14 inches w.c. maximum.

Propane Gas:

⚠ WARNING

Check water heater rating plate to determine which fuel the water heater is set for. Regent water heaters may be field converted by following the instructions in this manual. Failure to comply could result in severe personal injury, death, or substantial property damage.

Pipe sizing for propane gas

1. Contact gas supplier to size pipes, tanks, and 100% lockup gas pressure regulator.

Propane Supply Pressure Requirements

1. Target a supply pressure of 11 inches w.c. (2.7 kPa) measured when the water heater is operating at minimum input rate. Gas pressure can be adjusted higher or lower than 11 inches w.c. as needed.
2. Adjust propane supply regulator provided by the gas supplier for 14 inches w.c. (3.5 kPa) maximum pressure.
3. Pressure required at gas valve inlet pressure port:
 - Maximum 14 inches w.c. (3.5 kPa) with water heater operating.
 - Minimum 8 inches w.c. (1.99 kPa) with water heater operating.

8 Gas connections

Gas Conversions

⚠ WARNING

For a water heater already installed, you must turn off gas supply, turn off power and allow the water heater to cool before proceeding. You must also perform the field commissioning sequence and completely test the water heater after conversion to verify performance as described under Start-up, Section 11 of this manual. Failure to comply could result in severe personal injury, death, or substantial property damage.

All Models


1. From home screen, turn the unit status to “OFF” by pressing the power button icon.
2. Navigate to the “Fuel Conversion” screen by selecting it from the “Settings” menu.
3. Select “LP” from the menu and confirm with the installer password. A message will pop up on the screen asking the installer to verify the fuel type selected. Verify the correct fuel type is selected and piped to the appliance prior to accepting the message.
4. Select “confirm” to verify the fuel type selection. Once confirmed, on the home screen, change the unit status back to “ON” by pressing the power button icon.
5. Navigate to the “Commissioning Sequence” screen from the main menu.
6. Perform the field commissioning sequence as described in the “Start-up” section of this manual.
7. After performing the field commissioning sequence, attach the provided propane conversion label to the appliance near the rating plate. Place the LP Warning label on the appliance on the front door.

Models 1000 Only

1. Turn OFF the gas supply to the product by closing the manual shutoff located on the gas supply to the appliance. Locate the air shutter and screws provided in the appliance installation kit or purchased separately (See Replacement Parts list).
2. Access the inside of the appliance by removing the left upper service panel and opening the front access door.
3. Remove the 7/16” nut securing the air box to the base of the appliance. Remove the two sheet metal screws and the air box hold-down bracket.
4. Loosen the band clamp from the air intake duct and remove the duct from the air intake connection.
5. Using a backing wrench on the gas inlet manifold, loosen the union and disconnect the gas manifold at the inlet of the gas valve assembly.
6. Remove the (4) bolts and nuts holding the combustion blower to the air manifold.
7. Gently slide the blower and air intake assembly away from the heat exchanger, toward the front of the appliance, approximately 2 inches.
8. Insert the air shutter into the opening of the air manifold with the brackets facing the heat exchanger. The shutter should rest inside the air manifold opening (FIG. 8-3).
9. Use the (2) supplied screws and a 3mm angled Allen wrench to secure the air shutter to the air manifold. Take care not to overtighten the screws or cross-thread them in the aluminum manifold.
10. Slide the blower and intake assembly back into place and reinstall the (4) bolts and nuts securing the blower to the air manifold. Ensure the air manifold to blower gasket is in place prior to tightening the bolts.
11. Reattach the air intake duct to the air intake and tighten the band clamp. Ensure the duct is securely connected to the air intake connection.
12. Reconnect the gas manifold to the inlet of the gas valve assembly and tighten the union. Use a backing wrench on the gas manifold when tightening the union connection.
13. Install the air box bracket to the air box and secure it to the unit base with the 7/16” nut.
14. Verify all electrical connections and pressure tubing are connected and secure.
15. Turn ON the gas to the appliance by opening the manual shutoff on the gas supply to the appliance.
16. Check for leaks using the procedure in the instruction manual.

8 Gas connections *(continued)*

 Figure 8-3 Insert air shutter into manifold

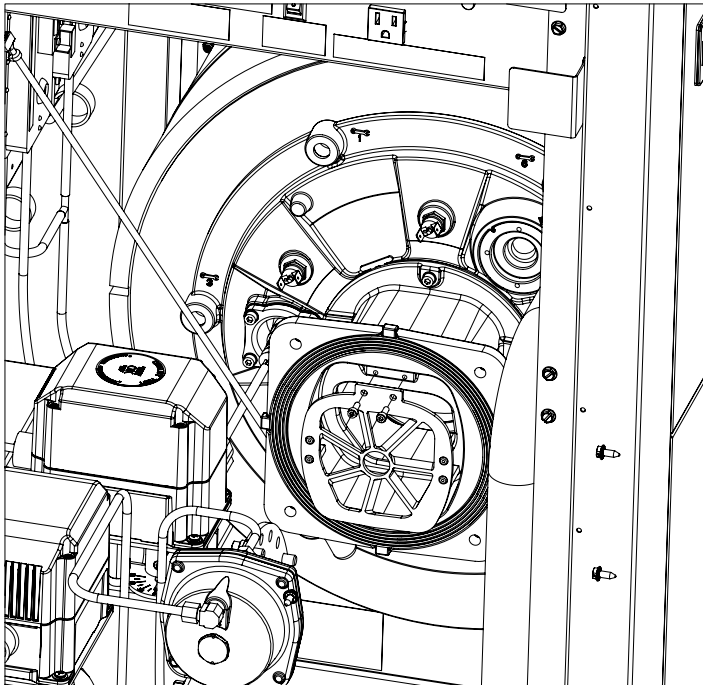

2000854936 00

Table 8B Natural Gas Pipe Size Chart

| Capacity of Schedule 40 Metallic Pipe in Cubic Feet of Natural Gas Per Hour (based on .60 specific gravity, 0.30" w.c. pressure drop) | | | | | | | | | | | | | | |
|--|---------------------------------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| Pipe Size (Inches) | Length of Pipe in Straight Feet | | | | | | | | | | | | | |
| | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 125 | 150 | 175 | 200 |
| 1/2 | 131 | 90 | 72 | 62 | 55 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| 3/4 | 273 | 188 | 151 | 129 | 114 | 104 | 95 | 89 | 83 | 79 | 70 | 63 | 58 | N/A |
| 1 | 514 | 353 | 284 | 243 | 215 | 195 | 179 | 167 | 157 | 148 | 131 | 119 | 109 | 102 |
| 1 1/4 | 1,060 | 726 | 583 | 499 | 442 | 400 | 368 | 343 | 322 | 304 | 269 | 244 | 224 | 209 |
| 1 1/2 | 1,580 | 1,090 | 873 | 747 | 662 | 600 | 552 | 514 | 482 | 455 | 403 | 366 | 336 | 313 |
| 2 | 3,050 | 2,090 | 1,680 | 1,440 | 1,280 | 1,160 | 1,060 | 989 | 928 | 877 | 777 | 704 | 648 | 602 |
| 2 1/2 | 4,860 | 3,340 | 2,680 | 2,290 | 2,030 | 1,840 | 1,690 | 1,580 | 1,480 | 1,400 | 1,240 | 1,120 | 1,030 | 960 |
| 3 | 8,580 | 5,900 | 4,740 | 4,050 | 3,590 | 3,260 | 3,000 | 2,790 | 2,610 | 2,470 | 2,190 | 1,980 | 1,820 | 1,700 |
| 4 | 17,500 | 12,000 | 9,660 | 8,270 | 7,330 | 6,640 | 6,110 | 5,680 | 5,330 | 5,040 | 4,460 | 4,050 | 3,720 | 3,460 |

Check inlet gas supply

NOTICE

CSA or UL listed flexible gas connections are acceptable, but you must exercise caution to ensure that the line has adequate capacity to allow your water heater to fire at full rate. Consult with local codes for proper installation or service procedures.

The gas piping must be sized for the proper flow and length of pipe, to avoid excessive pressure drop. Both the gas meter and the gas regulator must be properly sized for the total gas load.

Perform the steps below when checking inlet gas supply:

1. Turn the main power switch to the "OFF" position.
2. Shut off gas supply at the manual gas valve in the gas piping to the appliance.

3. Remove the 1/8" pipe plug on the flange to the factory supplied gas shutoff valve and install a suitable 1/8" fitting (field supplied) for the manometer tubing. Place the tubing of the manometer over the tap once the 1/8" fitting is installed as shown in FIG. 8-4.
4. Slowly turn on the gas supply at the factory installed manual gas valve.
5. Turn the power switch to the "ON" position.
6. Create a hot water demand by opening the commissioning drain valve located on the outlet of the water heater.

8 Gas connections


7. Observe the gas pressure with the burner operating at 100% of rated input. Without turning off the water heater, reduce the burner to the minimum input rate and observe the gas pressure with the burner at the minimum input rate. Percent of burner input will be displayed on the Modulation Screen.
 8. Ensure inlet pressure is within specified range. Minimum and maximum gas supply pressures are specified in this section of the manual.
 9. If gas supply pressure is within normal range and no adjustments are needed, proceed on to Step 11.
 10. If the gas pressure is out of range, contact the gas utility, gas supplier, qualified installer or service agency to determine the necessary steps to provide proper gas pressure to the control.
 11. Turn the power switch to the "OFF" position.
 12. Turn OFF the commissioning drain valve to stop the flow of water.
 13. Shut off the gas supply at the manual gas valve in the gas piping to the appliance.
 14. Remove the manometer from the pressure tap on top of the gas valve. Remove the 1/8" (3 mm) field supplied fitting and reinstall the pipe plug removed in Step 3.
- WARNING** When re-tightening the set screw, be sure to tighten securely to prevent gas leaks.
- Do not check for gas leaks with an open flame -- use the bubble test. Failure to use the bubble test or check for gas leaks can cause severe personal injury, death, or substantial property damage.
15. Turn on the gas supply at the manual gas valve.
 16. Turn the power switch to the "ON" position.
 17. Adjust the temperature set point on the control panel of the SMART TOUCH control module to the desired water temperature so the appliance will call for heat.

WARNING

Do not check for gas leaks with an open flame -- use the bubble test. Failure to use the bubble test or check for gas leaks can cause severe personal injury, death, or substantial property damage.

18. Check burner performance by cycling the system while you observe burner response. The burner should ignite promptly. Flame pattern should be stable. Turn system off and allow burner to cool, then cycle burner again to ensure proper ignition and flame characteristics.

 Figure 8-4 Inlet Gas Supply Check - Model 500-1000

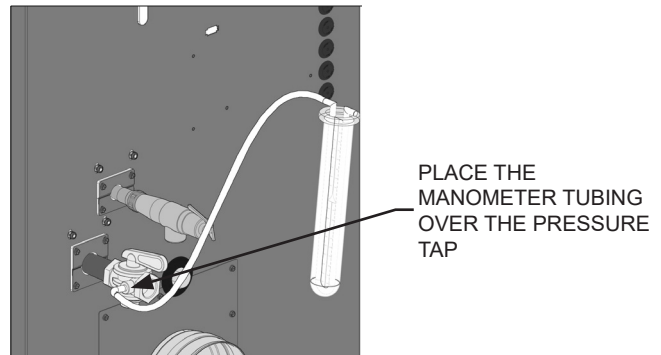

Gas pressure

The gas pressure must remain between 2.5 inches w.c. (natural), 8 inches w.c. (LP) minimum and 14 inches w.c. (natural and LP) maximum during stand-by (static) mode and while in operating (dynamic) mode. If an in-line regulator is used, it must be a minimum of 10 feet from the Regent water heater. It is very important that the gas line is properly purged by the gas supplier or utility company. Failure to properly purge the lines or improper line sizing, will result in ignition failure.

The problem is especially noticeable in NEW LP installations and also in empty tank situations. This can also occur when a utility company shuts off service to an area to provide maintenance to their lines.

Gas valve replacement

The gas valve **MUST NOT** be replaced with a conventional gas valve under any circumstances.

WARNING

Failure to follow all precautions could result in fire, explosion, or death!

9 Field wiring

WARNING ELECTRICAL SHOCK HAZARD – For your safety, turn off electrical power supply before making any electrical connections to avoid possible electric shock hazard. Failure to do so can cause severe personal injury or death.


CAUTION Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

NOTICE Wiring must be N.E.C. Class 1.

If original wiring as supplied with the water heater must be replaced, use only type 105°C wire or equivalent.

The water heater must be electrically grounded as required by National Electrical Code ANSI/NFPA 70 – latest edition.

 Figure 9-1 Regent Field Line Voltage Connections

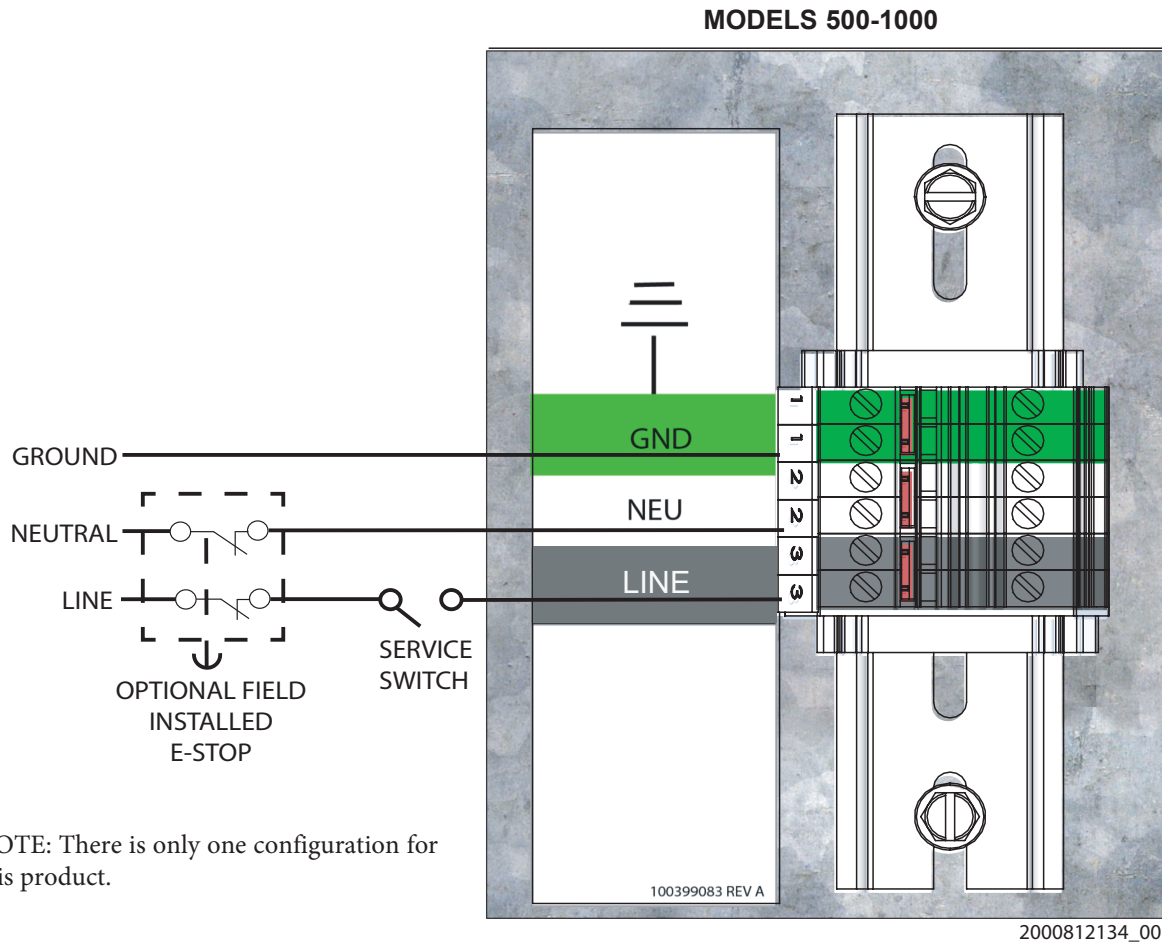

NOTE: There is only one configuration for this product.

9 Field wiring

Installation must comply with:

1. National Electrical Code and any other national, state, provincial, or local codes, or regulations.
2. In Canada, CSA C22.1 Canadian Electrical Code Part 1, and any local codes.


Line voltage connections

1. Connect 120VAC power wiring to the line voltage terminal block in the junction box as shown in FIG 9-1.
2. Provide and install a fused disconnect or service switch as required by code (see FIG. 9-1).

Low voltage connections

1. Route all low voltage wires through the knockouts in the rear of the water heater, as shown in FIG. 9-2.
2. Connect low voltage wiring to the comfort control board as shown in FIG. 9-3 and the water heater wiring diagram.

 Figure 9-2 Routing Field Wiring

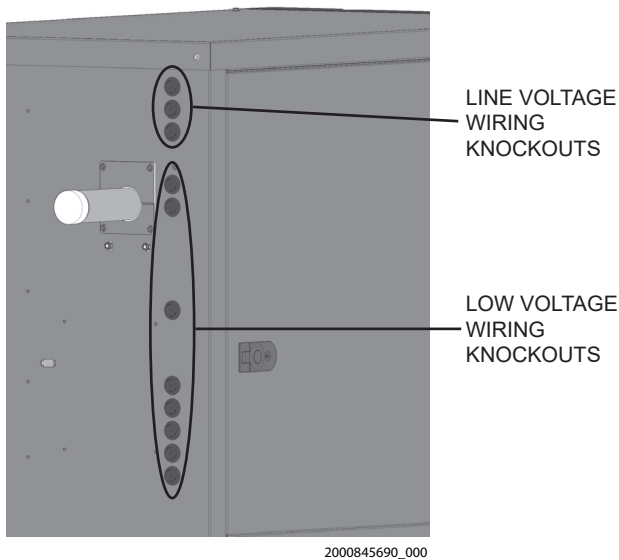

High and Low gas pressure switches

Switches to detect high and low gas pressure are available from the factory for field installation. Consult the instructions included in the kit for installation details.

System Supply Sensor

A system supply sensor may be connected to this input for monitoring the hot water temperature delivered to the system. For the correct sensor, refer to the Regent Replacement Parts List.

DHW Thermostat

If a thermostat is needed to enable the water heater to provide hot water, it must be wired to this input. The water heater will be enabled to provide hot water when these contacts are closed.

Building Recirculation Sensor

A building recirculation temperature sensor may be connected to this input for monitoring building recirculation temperature. For the correct sensor, refer to the Regent Replacement Parts List.

AUX Flow switch or LWCO

If an external flow switch or low-water cutoff device is required, connect it to this input. The water heater will not provide hot water unless these contacts are closed.

Rate output

This output provides a 0 - 10V signal that is proportional to the firing rate of the water heater. This may be used by a BMS system to monitor the actual rate of the water heater.

ModBus / BACnet


When the optional ModBus / BACnet interface module is installed, the RS-485 ModBus / BACnet cable is connected to these terminals. Use shielded, 2-wire twisted pair cable. If desired, the shield can be connected to ground by installing a jumper wire between terminals 1 and 3 on connector X5 on the optional ModBus / BACnet interface module.

Water heater Building Management System (BMS)

1. An external control may be connected to control the set point of the water heater. If the external control uses a set of contacts to enable the water heater, connect the contacts to the DHW Thermostat terminals. Otherwise, the SMART TOUCH control will be enabled by the 0-10V signal.
2. Make sure the (-) terminal is connected to the (-) or common output terminal of the external control, and the (+) terminal is connected to the (+) or 0 - 10 VDC terminal of the external control. Make sure the (-) voltage is not below ground.

9 Field wiring

 Figure 9-3 Low Voltage Field Wiring Connections

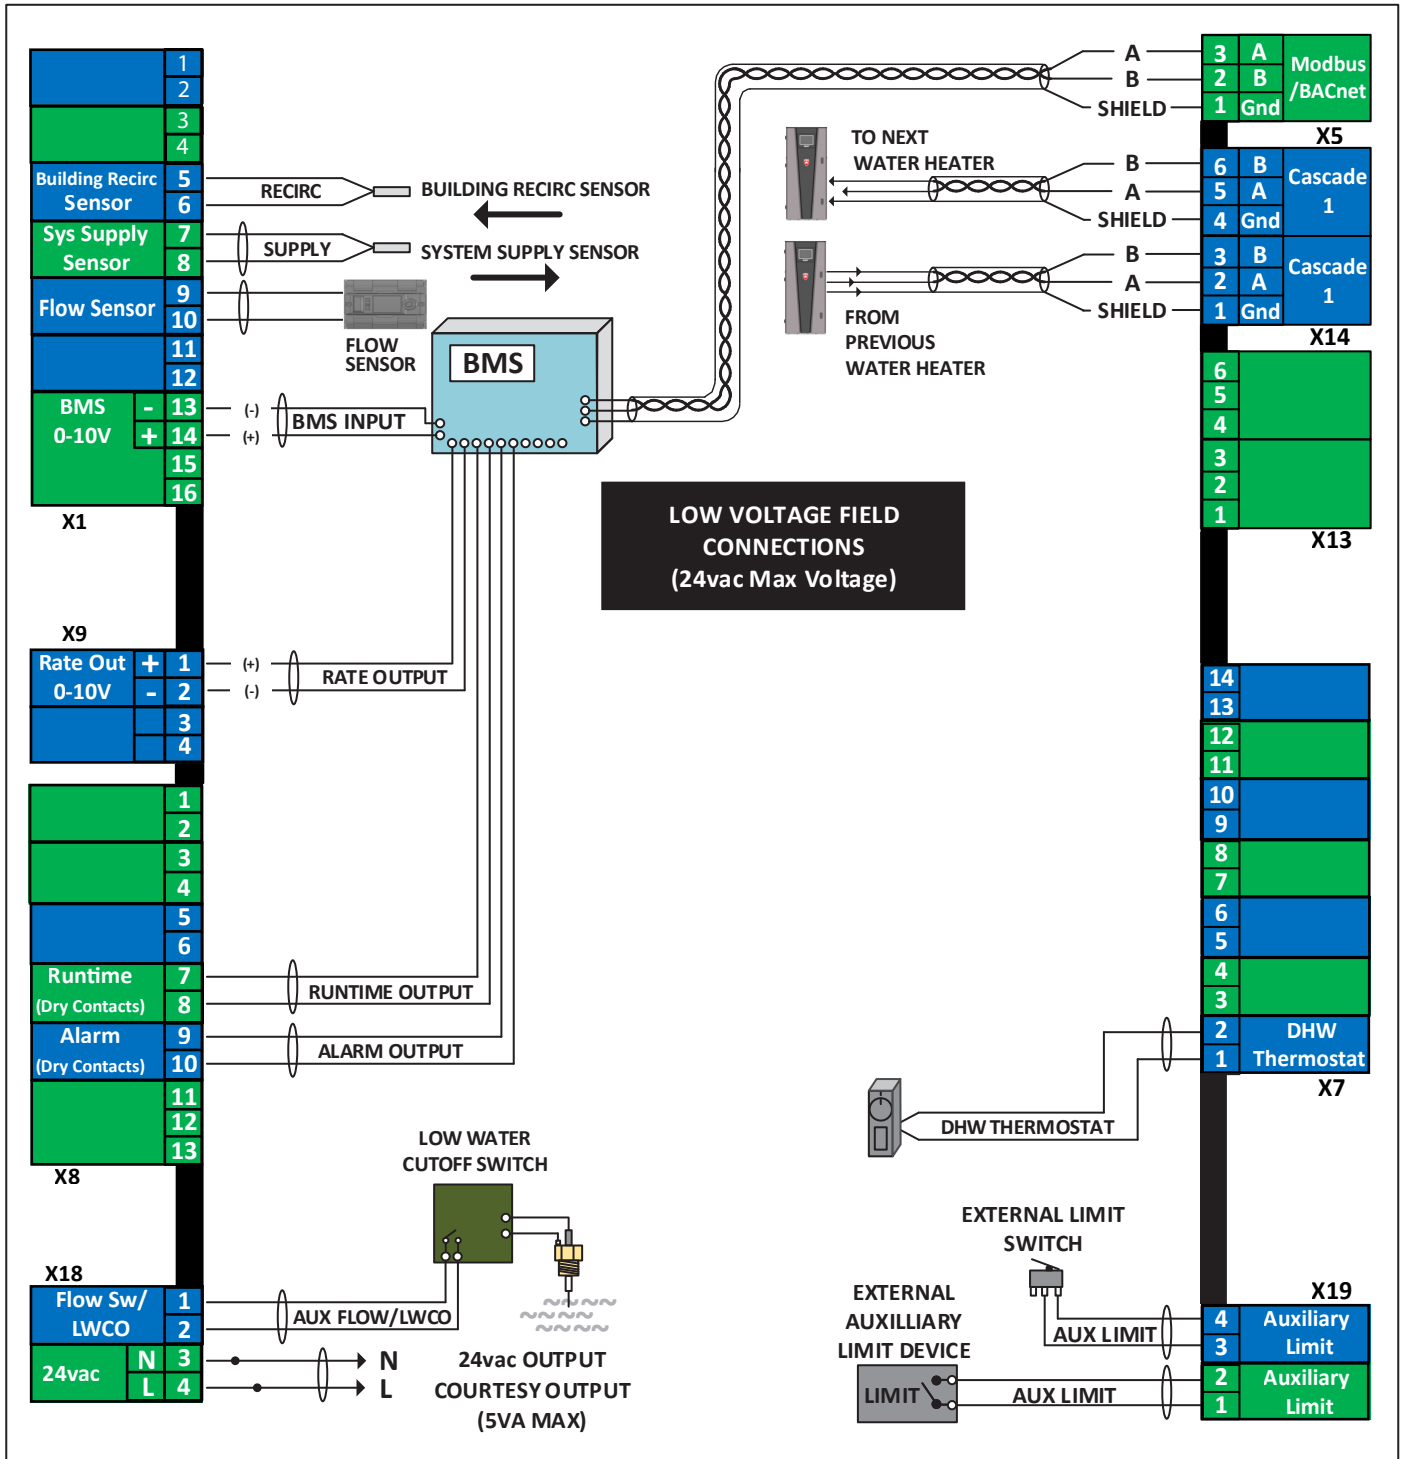

9 Field wiring *(continued)*

Runtime contacts

The SMART TOUCH control closes a set of dry contacts whenever the burner is running. This is typically used by Building Management Systems to verify that the water heater is responding to a call for heat.

Alarm contacts

The SMART TOUCH control closes another set of contacts whenever the water heater is locked out or the power is turned off. This can be used to turn on an alarm, or signal a Building Management System that the water heater is down.

Wiring of the cascade communication

When wiring the water heaters for Cascade operation, select one water heater as the Leader water heater. The remaining water heaters will be designated as Members. See “Configuration of the Cascade” for a detailed explanation of this procedure.


Communication between the Leader water heater and the Member water heaters is accomplished by using shielded, 2-wire twisted pair communication cable. Connect one of the twisted pair wires to Cascade terminal A on each of the low voltage connection boards, and the other wire of the twisted pair to Cascade terminal B on each of the low voltage connection boards. Connect the shield wires to one of the shield terminals on the low voltage connection boards (FIG. 9-3). If more than two water heaters are on the Cascade, daisy chain the wiring from the Cascade terminals on the second water heater to the Cascade terminals on the third water heater, then from the third to the fourth, and so on. The connections between heaters can be made in any order, regardless of the addresses of the water heaters. Try to keep each cable as short as possible.

WARNING Do not connect the sensors connected to the Leader heater to the Member 1 heater. The actual water temperatures will be higher than expected, which could lead to property damage, personal injury, or death.

Wiring of the Cascade Valve

Each water heater in a cascaded system must have its own cascade valve. The cascade valve must be wired to the water heater on which it is installed. Connect the two wires from the cascade valve to the terminals on the Cascade Valve and Pump Relay Output Board labeled CASC ISO VALVE. The water heater provides 24VAC power to open and close the cascade valve.

 Figure 9-4 Cascade Valve and Pump Relay Outputs

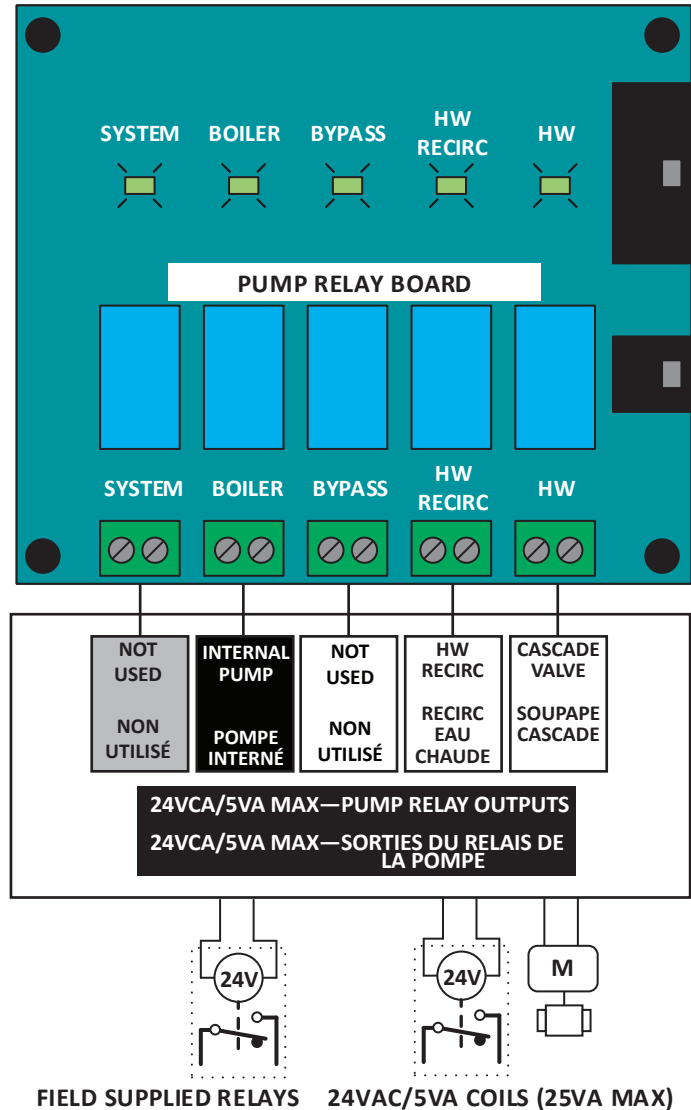

10 Condensate disposal

Condensate drain

1. This water heater is a high efficiency appliance that produces condensate.
2. See *Section 11 - Startup* for installation requirements of condensate trap and drain.

NOTICE

Use materials approved by the authority having jurisdiction. In the absence of other authority, PVC and CPVC pipe must comply with ASTM D1785 or D2845. Cement and primer must comply with ASME D2564 or F493. For Canada use CSA or ULC certified PVC or CPVC pipe, fittings, and cement.

NOTICE


To allow for proper drainage on large horizontal runs, a second line vent may be required and tubing size may need to increase to 1 inch.

The condensate line must remain unobstructed, allowing free flow of condensate. If condensate is allowed to freeze in the line or if the line is obstructed in any other manner, condensate can back up inside the heat exchanger resulting in potential water damage to property.

WARNING

This product contains a condensate management and disposal system that may be subject to freezing if exposed to sustained temperatures below 32°F. Precautions should be taken to protect the condensate trap and drain lines during extended periods of outdoor temperatures below 32°F.

 Figure 10-1 Condensate Disposal

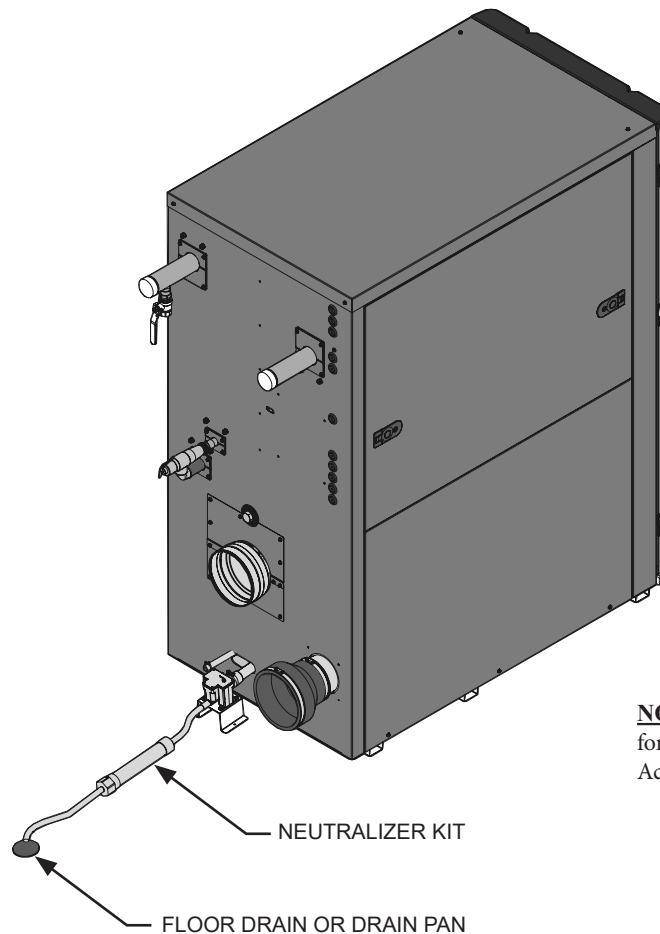

NOTE: Neutralizer shown for illustrative purposes only. Actual neutralizer may vary.

11 Start-up

Check/control water chemistry

NOTICE

Conduct water quality testing prior to installing the appliance. Various solutions are available to adjust water quality.

See the following table for properly operating the water heater with the appropriate water chemistry. Good water quality will help extend the life of the appliance by reducing the effects of scale buildup and corrosion.

Table 11A Water Chemistry

| WATER CHEMISTRY | | |
|------------------|-------------|--|
| Specification | Range | Requirement |
| Hardness | < 5 gpg | Follow recommendations detailed below (See Notice 3) |
| | 5 to 15 gpg | Acceptable range |
| | > 15 gpg | Water softening system required (See Notice 4) |
| Dissolved Solids | < 350 ppm | Hardness level must be met |
| pH Level | 6.5 to 8.5 | Acceptable range |
| Chloride | < 150 ppm | Acceptable range |

NOTICE

1. Do not use the water heater to directly heat swimming pool or spa water.
2. At initial fill and during water heater start-up and testing, check system thoroughly for any leaks. Repair all leaks before proceeding further.
3. When water hardness levels are less than 5 gpg or 85.5 mg/l, the following is recommended:
 - a. Flush and clean existing water heating system prior to installation.
 - b. Inspect and, if necessary, replace the anodes in any existing tanks.
 - c. Install a Y-strainer on the inlet of each water heater as detailed in Section 7.
 - d. Limit the run time of the hot water recirculation loop.
 - e. Filter the hot water recirculation loop to a level of 10 microns. CAUTION: Check recirculation pump size to verify it is sized for filter addition and upsize if necessary.
4. When water softener is required, a Template Assisted Crystallization system is recommended.

Check for gas leaks

⚠ WARNING

Before starting the water heater, and during initial operation, smell near the floor and around the water heater for gas odorant or any unusual odor. Remove the top access panel and smell the interior of the water heater enclosure. Do not proceed with startup if there is any indication of a gas leak. Use an approved leak detection solution. Repair any leaks at once.

⚠ WARNING

The gas valve outlet pressure on this appliance is controlled by the gas valve regulator based on the delta pressure. The gas valve is factory set for the correct delta pressure. This setting is suitable for natural gas and propane. Field adjustment of gas valve delta pressure shall only be made by qualified personnel following the procedure outlined in the Start-up section of this manual. Improper adjustment of the gas valve outlet pressure could result in damage to the valve, causing severe personal injury, death, or substantial property damage.

⚠ WARNING

Propane water heaters only – Your propane supplier mixes an odorant with the propane to make its presence detectable. In some instances, the odorant can fade, and the gas may no longer have an odor. Before startup (and periodically thereafter), have the propane supplier verify the correct odorant level in the gas.

11 Start-up *(continued)*

Condensate drain

1. This appliance is a high efficiency appliance that produces condensate.
2. The provided condensate trap is equipped with a ball that acts as a seal against harmful flue gases escaping in case there is no condensate in the trap. If this ball is not present, flue gases may be able to pass through the trap when there is no condensate present, resulting in an unsafe environment. It is important to check and make sure the ball is located in the trap, acting as a seal against flue gases.
3. Connect the condensate trap to the condensate hoses located on the back of the unit near the bottom. Use the hose clamps to secure the connection. Connect the two-pin moxex provided with the condensate trap to the mating connector on the rear of the appliance.
4. Slope condensate tubing down and away from the appliance into a drain or condensate neutralizing filter. Condensate from the Regent water heater will be slightly acidic (typically with a pH from 3 to 5). Install a neutralizing filter if required by local codes.

A Neutralizer Kit is available from the factory.

5. Do not expose condensate line to freezing temperatures.
6. Use only plastic tubing or piping as a condensate drain line (FIG. 11-1).
7. A condensate removal pump is required if the appliance is below the drain. When installing a condensate pump, select one approved for use with condensing water heaters and furnaces. The pump should have an overflow switch to prevent property damage from condensate spillage. The switch should be wired in series with the blocked flue switch inside the appliance.

NOTICE

Use materials approved by the authority having jurisdiction. In the absence of other authority, PVC and CPVC pipe must comply with ASTM D1785 or D2845. Cement and primer must comply with ASME D2564 or F493. For Canada use CSA or ULC certified PVC or CPVC pipe, fittings, and cement.

NOTICE

To allow for proper drainage on large horizontal runs, a second line vent may be required and tubing size may need to increase to 1 inch.

The condensate line must remain unobstructed, allowing free flow of condensate. If condensate is allowed to freeze in the line or if the line is obstructed in any other manner, condensate can exit from the condensate trap vent opening, resulting in potential water damage to property.


WARNING

The condensate trap must have the float ball (FIG. 11-1) in place during all times of appliance operation to avoid flue gas emission from the condensate drain line. Failure to ensure the float ball is in place could result in severe personal injury or death.

Final checks before starting the water heater

- Read the Regent Water Heater Service Manual to familiarize yourself with SMART TOUCH control module operation. Read the preceding Start-up sections in this manual, for proper steps to start the appliance.
- Verify the preparation procedures have been completed.
- Verify the appliance and system are full of water and all system components are correctly set for operation.
- Verify electrical connections are correct and securely attached.
- Inspect vent piping and air piping for signs of deterioration from corrosion, physical damage, or sagging. Verify air piping and vent piping are intact and correctly installed per this manual.

 Figure 11-1 Condensate Trap

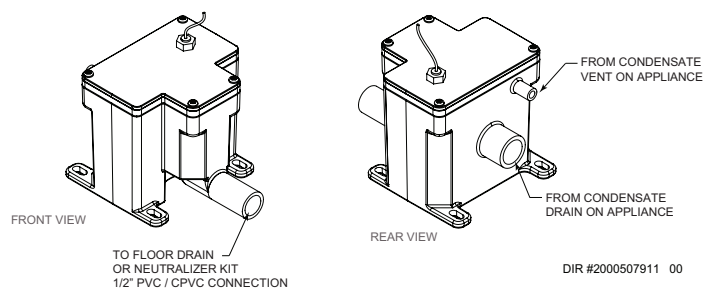

DIR #2000507911 00

11 Start-up

Start (commission) the water heater

NOTICE

The Regent water heater requires a hot water demand load to perform the commissioning sequence. A water valve is provided on the product outlet to allow a load to be generated when otherwise not possible.

WARNING

The Regent water heater may supply hot water to the system at temperatures higher than the setpoint when in either Service Mode or Commissioning Mode. Ensure mixing valves are installed per manufacturer instructions prior to initiation of the commissioning sequence. Failure to ensure adequate scald protection is in place prior to commissioning may result in severe personal injury or death.

WARNING

The commissioning drain valve may produce water at temperatures capable of scalding. Ensure the commissioning valve is piped to a suitable drain prior to beginning the commissioning sequence. Failure to do so may result in severe personal injury, property damage, or death.

1. Create a hot water demand. If fixtures are not available to create the needed hot water demand, the commissioning valve located on the hot water outlet may be used.
2. Once a suitable hot water demand is created, read and follow the Operating instructions in FIG 11-3.
3. Select the Start Commissioning Sequence from the Commissioning Menu.
4. The unit will go through its purge and ignition sequence.
5. The ignition sequence includes a free air calibration and diagnostic of the O2 sensor. Respond to any error codes related to the O2 sensor as needed (FIG. 11-2).


6. Once the unit has fired and established a flame signal, it will modulate to low fire.
7. Check the manifold pressure from the test port as shown in FIG. 11-3. Adjust the regulator as necessary using the target manifold pressure in Table 11B.
8. Once set, press NEXT (FIG. 11-2).
9. The unit will move to low fire and will self-tune to correct combustions based off the O2 sensor.
10. Once the unit corrects to the center of the indicator, press NEXT.
11. Continue through all nine points of adjustment.
12. After the calibration of the modulation curve, the program will move to the ignition point P0.
13. At P0 the unit will self-tune.
14. Once completed, press CONFIRM.
15. Exit the commissioning sequence by pressing CONFIRM.
16. Return the commissioning valve to the closed position.
17. The water heater can be set into normal operations.

If water heater does not start correctly

1. Check for loose connections, blown fuse, or service switch off?
2. Is water heater water temperature above 200°F?
3. Is gas turned on at meter or water heater?
4. Is incoming gas pressure less than 2.5 inches w.c.?

If none of the above corrects the problem, refer to the Troubleshooting Section of the Regent Water Heater Service Manual.

 Figure 11-2 Commissioning Screen

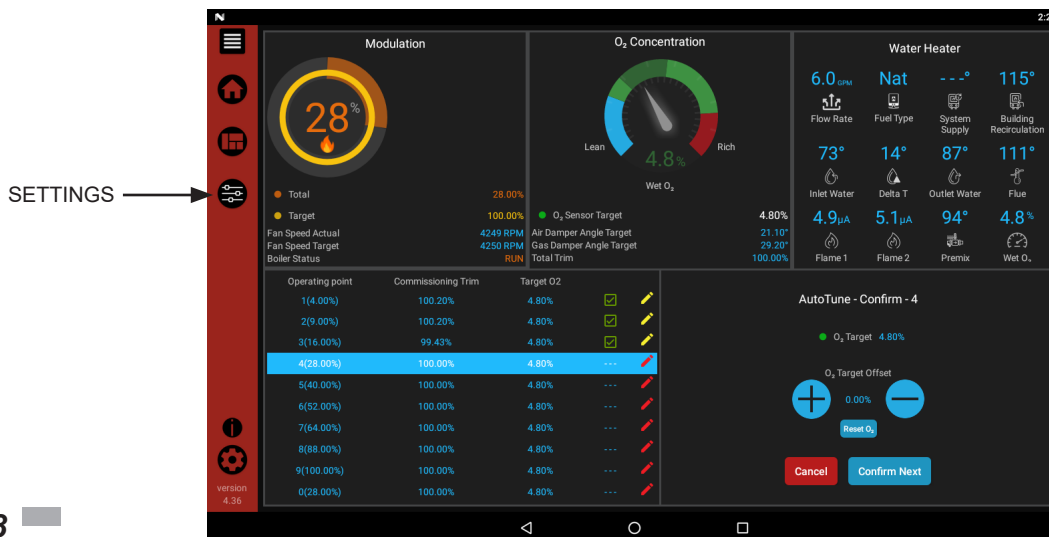

11 Start-up *(continued)*

Figure 11-3 Check Manifold Pressure

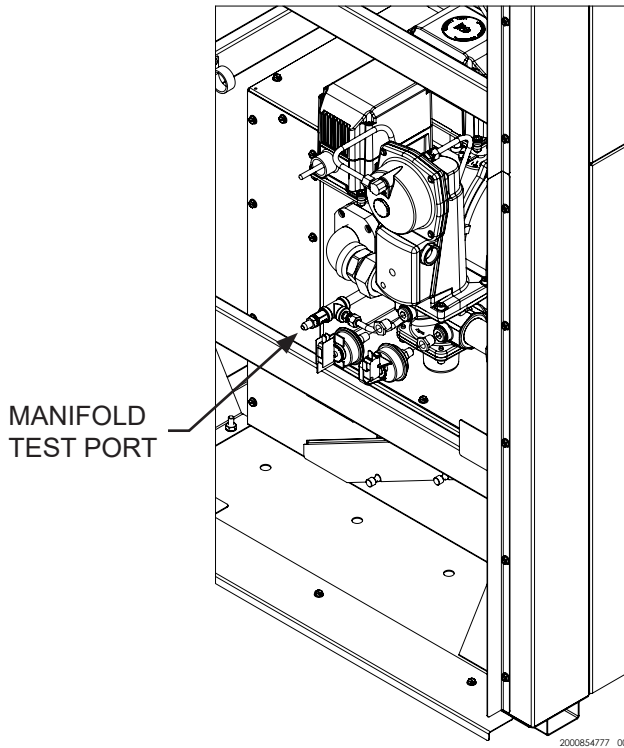 


Table 11B Manifold Pressure Chart

| Units | Manifold Pressure w.c. (Sea level to 500ft) | *Additional Manifold Pressure w.c. (for every 1000ft above 500ft) | |
|---------|--|--|---------|
| | Natural / Propane | Natural | Propane |
| IWH0500 | 1.5 | 0.11 | 0.02 |
| IWH0750 | 1.5 | 0.11 | 0.02 |
| IWH1000 | 2 | 0.13 | 0.04 |

Check system and water heater

Check water piping

1. Check system piping for leaks. If found, shut down the water heater and repair immediately

CAUTION

Failure to repair leaks in water piping may result in damage to property.

2. Vent any remaining air from the system using manual vents. Air in the system will interfere with circulation and cause heat distribution problems and noise.

Check vent piping and air piping

1. Check for gastight seal at every connection, seam of air piping, and vent piping.

WARNING

Venting system must be sealed gastight to prevent flue gas spillage and carbon monoxide emissions, which will result in severe personal injury or death.

11 Start-up *(continued)*

□ Check gas piping

1. Check around the water heater for gas odor following the procedure on Section 8 of this manual (*Connecting Gas Supply Piping*).

⚠ WARNING If you discover evidence of any gas leak, shut down the water heater at once. Find the leak source with a bubble test and repair immediately. Do not start the water heater again until corrected. Failure to comply could result in severe personal injury, death, or substantial property damage.

⚠ WARNING The gas valve outlet pressure on this appliance is controlled by the gas valve regulator based on the delta pressure. The gas valve is factory set for the correct delta pressure. This setting is suitable for natural gas and propane. Field adjustment of gas valve delta pressure shall only be made by qualified personnel following the procedure outlined in the Start-up section of this manual. Improper adjustment of the gas valve outlet pressure could result in damage to the valve, causing severe personal injury, death, or substantial property damage.

Check flame and combustion

1. Turn the main power off to the water heater by placing the “On/Off” switch in the OFF position.
2. Remove the flue sensor and rubber grommet from the flue collector. **Note:** Combustion measurements will be made at this point.
3. Insert the probe from a combustion analyzer into the hole left by the removal of the flue sensor and rubber grommet.
4. Turn the main power on to the water heater by placing the “On/Off” switch in the ON position.
5. Navigate to the Setup Screen from the Home Screen by pressing the SETUP button along the left side of the screen. Enter the installer password.
6. Select the Service Maintenance Screen. The tabs will scroll (up and down) to reveal more options. See the Regent Service Manual for more detailed information.
7. Once the water heater has modulated up to rate, measure the combustion. The values should be in the range listed in Table 11C (this page). CO levels should be less than 200 ppm for a properly installed unit. If the combustion is not within range reference the *Troubleshooting* Section in the Regent Service Manual for possible causes and corrective actions.
8. Once the combustion analysis is complete, test the safety shutoff device by turning the manual gas shutoff valve to the OFF position and ensuring the heater shuts down and registers an alarm. Open the manual shutoff valve and reset the control.
9. Turn the main power off to the water heater and replace the flue sensor and rubber grommet into the flue pipe connection.
10. Ensure the water heater is placed back into normal operation.

Table 11C Flue Products Chart

| Natural Gas | | |
|--|------------------------------|--------------------------|
| Units | *CO ₂ (Flue Port) | *O ₂ (Sensor) |
| ALL | 8.0 - 9.5 | 3.9 - 6.5 |
| Propane | | |
| Units | *CO ₂ (Flue Port) | *O ₂ (Sensor) |
| ALL | 8.6 - 10.5 | 3.9 - 6.5 |
| <p>*NOTE: The Regent Combustion System is designed to maintain constant combustion. CO₂ is the target combustion measured from the flue measurement port. O₂ is the target measurement of the active O₂ sensor in the combustion chamber. An O₂ measurement from the flue will vary from the O₂ measured in the combustion chamber.</p> | | |

O₂ sensor

1. The water heater is equipped with a factory supplied O₂ sensor.
2. No setup or extra checks for the O₂ sensor are required until used for commissioning during initial start-up.
3. The sensor performs routine self-diagnostics and free air calibrations. If an error occurs, the appropriate error codes will be displayed.
4. Should the O₂ sensor break or malfunction, the water heater is designed to fully function safely without the O₂ sensor.

11 Start-up *(continued)*

Figure 11-4 Operating Instructions

FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

 
- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C. Use only your hand to turn the gas control knob. Never use tools. If the handle will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.

D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
5. Remove front cover.
6. Turn gas shutoff valve counterclockwise to "OFF". Handle will be perpendicular to pipe. Do not force.
7. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "B" in the safety information above this label. If you don't smell gas, go to next step.
8. Turn gas shutoff valve clockwise to "ON". Handle will be parallel to pipe.
9. Install front cover.
10. Turn on all electric power to appliance.
11. Set thermostat to desired setting.
12. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

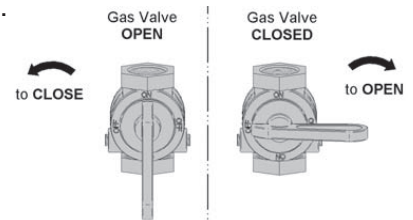

TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove front cover
4. Turn gas shut off valve counterclockwise to "OFF". Handle will be perpendicular to pipe. Do not force
5. Install front cover

11 Start-up

Figure 11-5 Service Maintenance Screen



Adjust set point temperature(s)

During normal operation, set point temperatures can be adjusted from the Home Screen by pressing the DETAILS button on the screen (see FIG. 11-6).

1. To change a set point, use the set point slider feature or the PLUS (+) and MINUS (-) buttons to adjust the set points as shown in FIG. 11-6.
2. Once the set point has been adjusted to the desired setting, press the SAVE button.

NOTE: The APPLY CHANGES button must be pressed to complete programming of the controls when changes are made in the SETUP menu. Failure to press the APPLY CHANGES button will result in an unprogrammed control. The Door Menu button will become highlighted when there are changes that can be applied.

Set clock

The SMART TOUCH control has a built-in clock that it uses for logging events. This clock must be set when the appliance is installed and anytime the appliance has been powered off for more than one day. Use the following procedure to set the clock:

1. Press the SETTINGS button in the bottom left corner of the Home Screen (see Figure 11-7).
2. Press the SET button across from the date and time.
3. Proceed to set the date, time, and time zone.

NOTE: Automatic Time Zone will not work.
4. Temperature units and Wi-Fi may also be set here. These items may be used to automatically sync the time.
5. Press the Home, View, or Back button to exit.

11 Start-up *(continued)*

Figure 11-6 User Set Point Screen


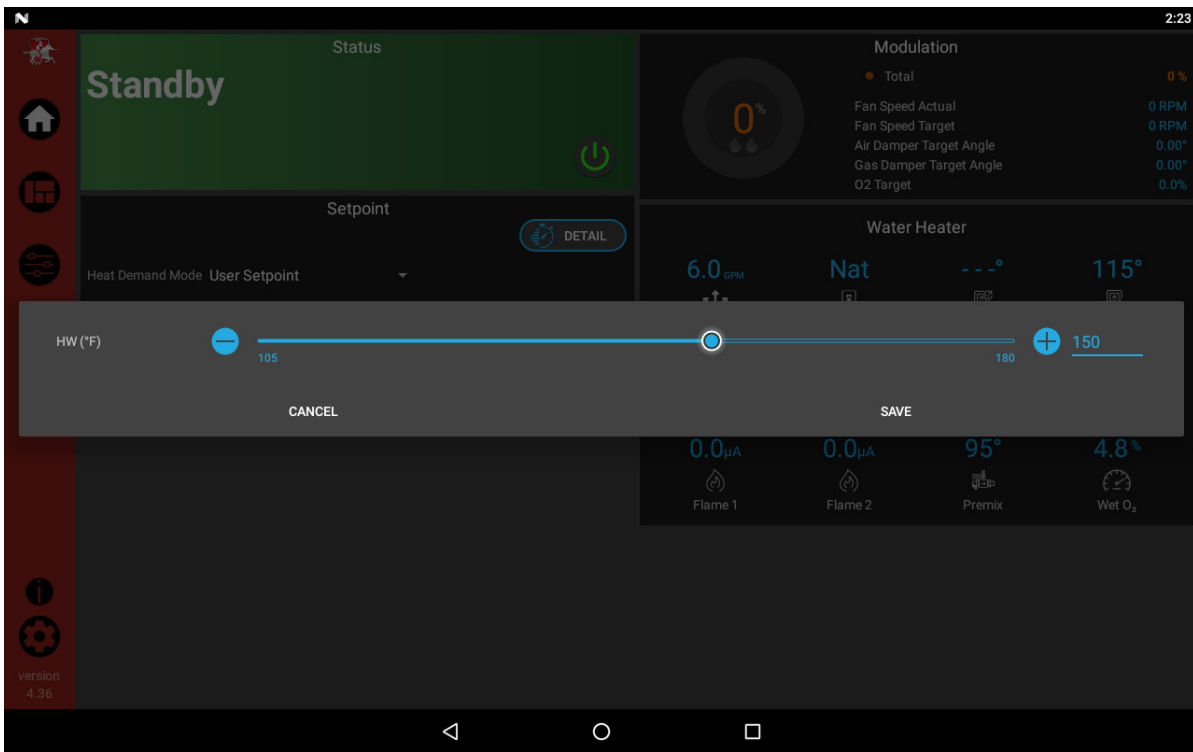 


Figure 11-7 Settings Location on Screen

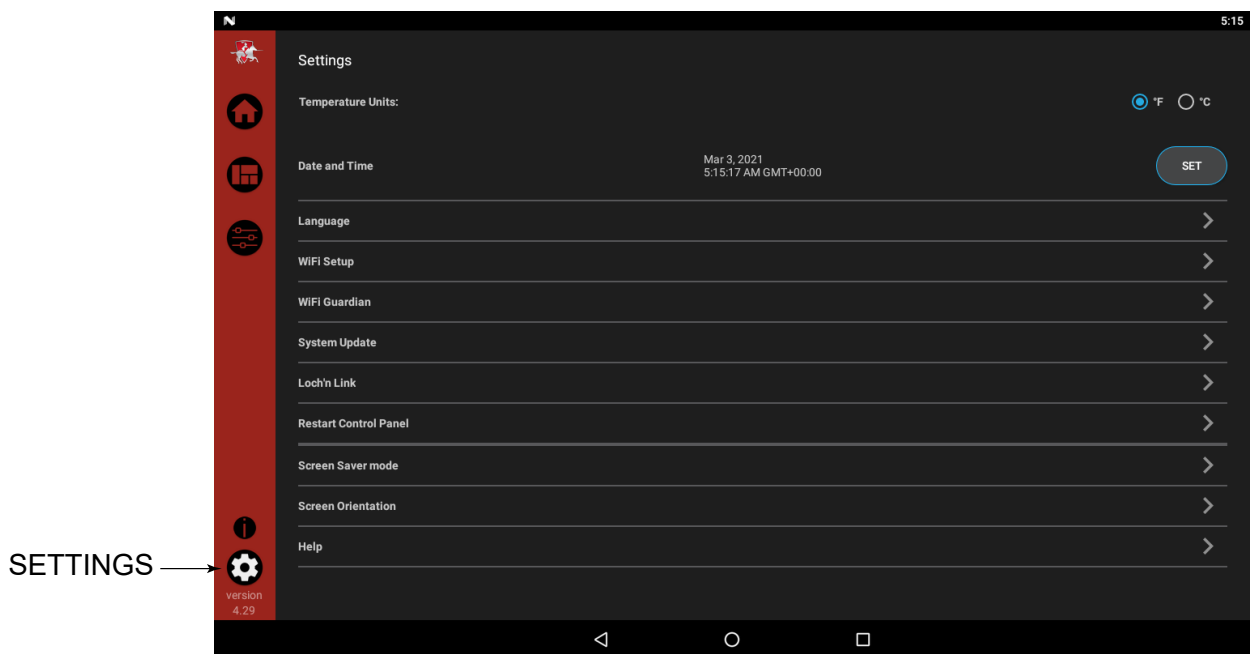 

11 Start-up

Configuration of the cascade

NOTICE

For more detailed instructions, please refer to the Regent Service Manual.

NOTICE

All units in the Regent cascade must be of the same size.


When installing a Cascade system, all units must be programmed for Cascade to operate. Access the Cascade Setup options as follows:

1. Press the SETUP button on the left side of the display screen.
2. Enter the installer password.
3. Select the Cascade option as shown in FIG. 11-8.
4. Each unit must have a unique address set.
5. Once all the updates are complete, press the Menu button (top left) or the Setup button.
6. Press the APPLY CHANGES button on the top of the screen.

NOTICE

The APPLY CHANGES button must be pressed to complete programming of the controls. Failure to press the APPLY CHANGES button will result in an unprogrammed control. The Menu button will become highlighted when there are changes that can be applied.

 Figure 11-8 Cascade Screen

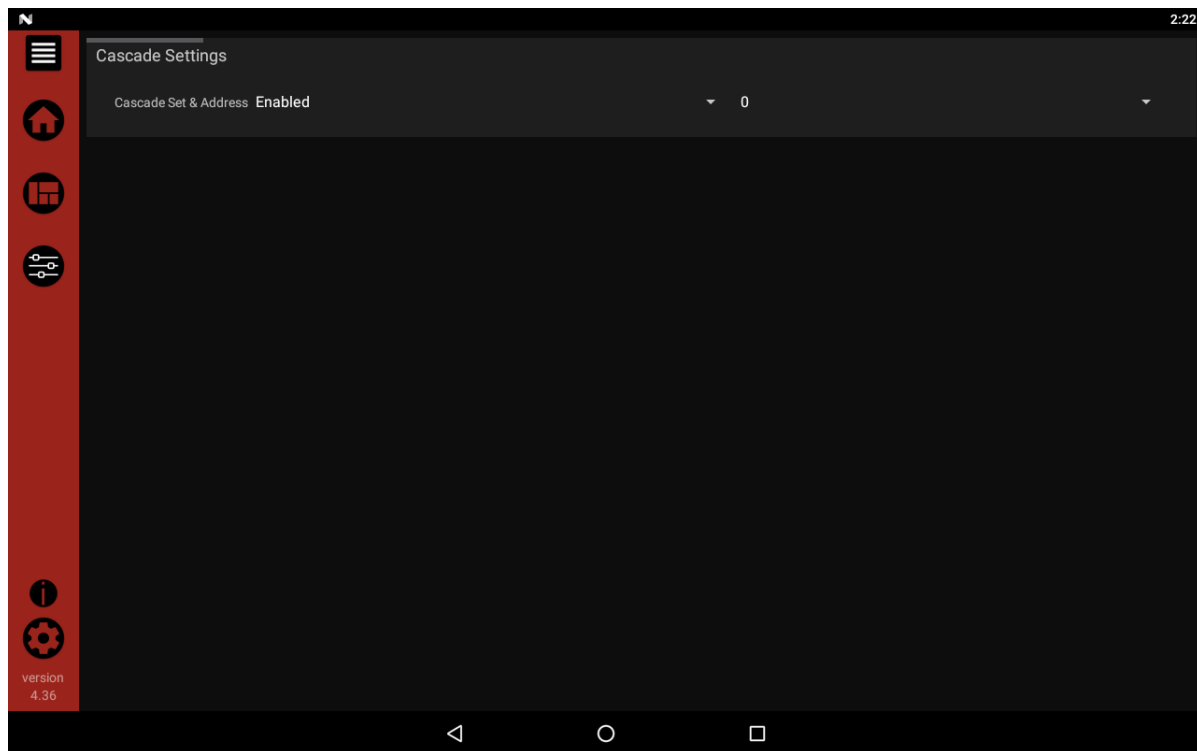

12 Operating information

General

How the water heater operates

The Regent water heater uses an advanced stainless steel heat exchanger and electronic control system that allows fully condensing operation. The blower pulls in fresh air and pushes flue products through the heat exchanger and out of the flue piping. The control system senses the oxygen content of the combustion products using a sensor mounted to the combustion chamber and actively controls the blower speed to maintain the correct products of combustion. The control system regulates the gas and air flow into the burner to control the firing rate. The control system measures the flow rate and temperature of water entering the water heater and controls the firing rate to achieve the target hot water setpoint.

Control inputs and outputs

DHW Thermostat

This input enables the water heater to provide hot water.

0 - 10VDC input (set point)

The Regent water heater can be controlled by a Building Management System (BMS) using a 0 - 10 VDC signal. The control can be configured by the installer to use this signal to control set point. This signal can be sent to the heater through ModBus as well.

Temperature control

Modulation

The Regent water heater is capable of modulating its firing rate from a minimum of 4-8% (depending on model size) to a maximum of 100%. The firing rate is dictated by the hot water draw and various other temperature limitations.

Flame current support

To prevent nuisance shutdowns when the water heater is firing at minimum rates, the control will increase fan speed when the flame signal drops below 2.3 microamps.

Protection features

Outlet temperature, flue temperature, and temperature rise limiting

The outlet temperature is monitored by the water heater outlet temperature sensor. When the outlet temperature exceeds 182°F, the unit will reduce the fan speed. If the outlet water temperature exceeds 195°F the control will shut the unit down until it cools to 185°F.

The control module monitors the flue temperature by a sensor located in the flue exhaust. If the flue temperature exceeds 215°F the control will reduce the maximum fan speed. If the flue temperature exceeds 225°F (107°C) the control will shut the unit down. The unit will restart automatically once the flue temperature drops 10°F (6°C) and the minimum off time has expired.

The control monitors the temperature difference between the inlet and the outlet sensor. If the control determines the temperature rise is too high, it will either reduce the firing rate or shut down the unit as appropriate.

The unit will restart automatically once the temperature difference has dropped below the allowable rise and the minimum off time has expired.

12 Operating information

Monitor external limits

Connections are provided on the connection board for auxiliary external limits. The SMART TOUCH Control will shut off the burner and inhibit relighting whenever any of these external limits open.

Runtime and alarm outputs

The water heater provides dry contacts for indicating when the water heater is running, and when it is unable to operate.

Runtime and cycle counting

The control uses a timer to monitor the total hours of burner operation. The timer monitors the time the water heater is firing.

The control uses two (2) ignition counters to monitor the amount of water heater cycles. The first counter counts all ignitions of the control. The second counter counts only successful ignitions.

Error logging

The control will hold in memory the last 10 lockouts. The date and time of the occurrence will be recorded as well. Only the 10 most current occurrences of each will be held in memory.

Water heater temperature regulation

Operating temperature (target)

The SMART TOUCH control module senses water temperature and regulates water heater firing and firing rate to achieve a target temperature. The target temperature can be set between 80°F and 180°F. The target temperature range may be adjusted by the installer. Consult the Regent Service Manual for instructions to adjust the target temperature range.

High limit operations

The Regent water heater is equipped with a fixed automatic reset high limit and an adjustable manual reset high limit. The automatic reset high limit has a set point of 200°F and the manual reset high limit has a maximum set point of 210°F.

When the outlet temperature exceeds 200°F, the automatic high limit action occurs. The water heater shuts down until the outlet water temperature cools below 190°F, and a 60 second timer has expired. If the outlet temperature continues to increase, the manual reset high limit action will occur at 210°F.

High limit test procedure

1. Turn ON the main power to the appliance by placing the ON/OFF switch in the ON position.
2. Navigate to the Setpoints Screen.
3. Use the slide bar to decrease the MRHL temperature below the current outlet temperature or to its minimum setting, whichever is higher.
4. Press the APPLY CHANGES button to save the setting.
5. If the current outlet temperature is above the MRHL setting then the MRHL will function, causing a appliance lockout. If the outlet temperature is below the MRHL setting, navigate to the Service Screen and place the appliance in service mode at full fire.
6. Once the outlet temperature rises above the MRHL setting, the MRHL will function causing a appliance lockout.
7. Repeat steps 2-4 to set the MRHL to the desired setting for normal operation.

12 Operating information *(continued)*

Cascade

When multiple water heaters are installed, they can be wired together in a cascade sequence. A maximum of eight water heaters can be controlled from a single control. In this application one water heater would be designated as the Leader control and all others would be designated as Member controls.

The leader water heater will share its setpoint with all other members of the cascade. The members, however, will control their modulation individually to maintain the setpoint at their individual outlet temperature sensor. The leader will control the cascade valve of each member of the cascade to control the water flow to the units and deliver hot water based on the load. As the demand of the system increases and decreases, the leader will open and close additional valves to meet the load. At least one cascade valve will always be open. For a new startup the leader's cascade valve will be open at all times.

Sequence of the cascade

The cascade valve opening/closing sequence will automatically be changed at set intervals.

For the first 24 hours after initializing the Cascade, the sequence will be changed every hour. After that the sequence will be changed once every 24 hours. The switching on/off sequence will be as follows:

| TIME | SWITCHING ON SEQUENCE |
|-----------|------------------------|
| Start | L-M1-M2-M3-M4-M5-M6-M7 |
| + 1 hour | M1-M2-M3-M4-M5-M6-M7-L |
| + 2 hours | M2-M3-M4-M5-M6-M7-L-M1 |

If a water heater locks out, it will automatically be given the lowest priority for the rest of that 24 hour period.

Access modes

User

The USER can set the set point, turn the unit OFF and ON, and set up Wi-Fi.

Installer

Most parameters are available only to the installer, accessible by entering the installer password, see the Regent Water Heater Service Manual.

NOTE: The password will timeout after an hour from entry.

12 Operating information

Sequence of operation


| | |
|----|---|
| 1. | Upon a call for heat, the water heater control initiates a pre-purge and confirms that all safeties are in their correct state. During the initial sequence of pre-purge, the air damper is open to its purge position, and the blower forced to its purge speed. The air damper APS is checked to be open, the flow switch contacts are checked to be closed, and the proof of closure input is checked to be closed during this time. |
| 2. | Once the air damper APS and proof of closure switches are confirmed, the safeties are checked in the correct state. The water heater control will then progress to the second part of pre-purge. During this phase the dampers and fan are forced into the ignition state. Once in the ignition state, the air damper APS must become closed. |
| 3. | The water heater control then proceeds to trial for ignition. First, the control initiates sparking, then opens the gas valve. After sparking is completed, the control checks for the presence of flame. If the flame is not detected, the control will recycle or lockout on an Ignition Flame Failure. If the flame is present, the control proceeds to the flame stabilization period. During the flame stabilization period, the signal must not drop below the detection threshold and further must rise to a sufficiently high level for a stable flame. If the flame does not reach the higher threshold during flame stabilization, the unit will recycle or lockout on Flame Loss While Running. During the flame stabilization period and any running state thereafter, the controls will check that the proof of closure input is open. |
| 4. | Upon successful completion of the flame stabilization period, the control will proceed to the running state and attempt to operate at the required modulation point. During operation, the damper positions and fan speeds MUST always remain within tolerance. Further, if an O ₂ sensor is present and functioning properly, the unit must operate within an expected range of O ₂ (see Section 11 of the Regent Installation and Operation Manual). |
| 5. | The water heater control will modulate as needed to reach the desired setpoint. |
| 6. | Once the DHW call for heat has been satisfied, the control will turn OFF the gas valve and begin the post-purge cycle. The free air calibration of the O ₂ sensor is completed. |
| 7. | At the end of the post-purge cycle, the control will allow the fan speed to fall. Once at 3000 rpm, the air damper will be closed. The controls will check that the blower stops running and the dampers are in their expected positions. The control will check that the air damper APS reaches the open state. |
| 8. | After one minute in standby, the O ₂ sensor will go into a standby state. The internal pump will continuously operate, even in standby state. |

12 Operating information *(continued)*



The Home Screen displays basic information on how the unit is running. It is divided into the following sections: Status, Demand, Modulation, Sensors, and Navigation.

 Figure 12-1 Home Screen

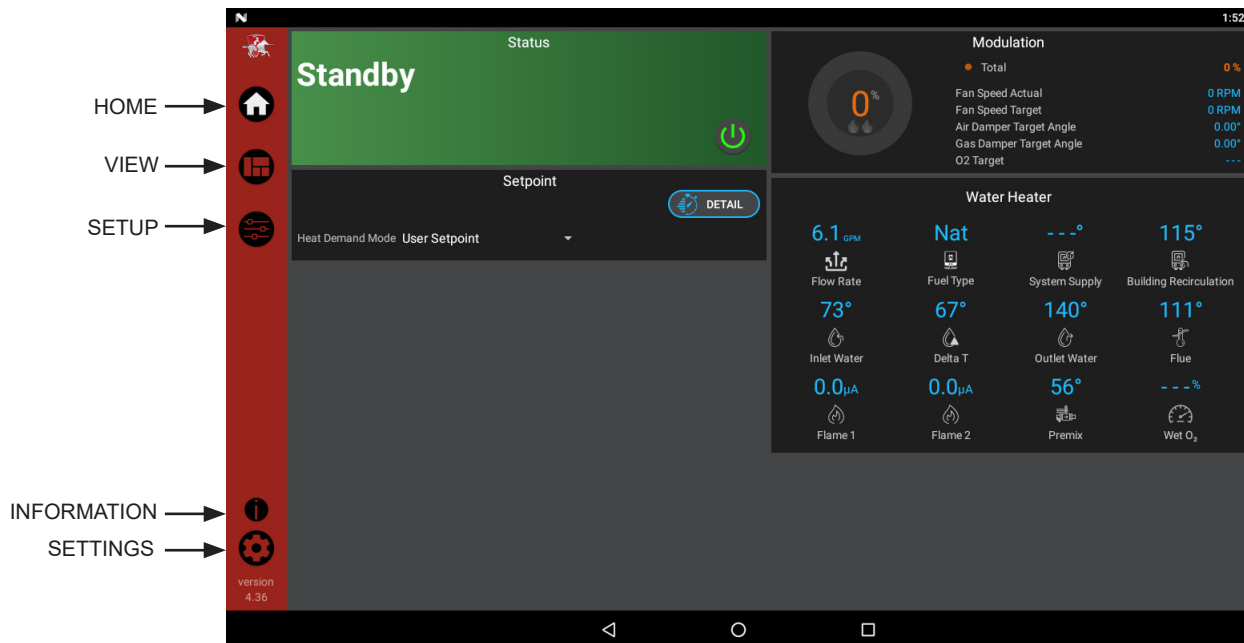

- The **Status** Section is located on the top left of the screen and displays how the unit is currently running (i.e. Off, Stand-by, Blocking, and Lockout) including: current driving demand, the reason for any blocking or lockout, and a power button.
- The **Demand** Section is located on the bottom left of the screen and displays information about the targets and limits of the current demand being serviced.
- The **Modulation** Section is located on the top right of the screen and displays the target modulation of the unit. This section also includes target and actual fan speeds.
- The **Sensor** Section is located on the bottom right of the screen and displays both factory installed and field installed sensor including: Inlet Water Temperature, Delta T Water Temperature, Outlet Water Temperature, Flue Temperature, and Inlet Water Flow Rate.
- The **Navigation** Section is located down the left side of the screen. There are five (5) sections located below the Lochinvar icon: Home, View, Setup, Information (About), and Settings. The Home Section is the screen shown above. The View Section provides more detailed information including subsections for: History, Cascade, Graphing, and a complete list of current Sensor Values. The Setup Section has several screens to aid in setting up the appliance. The Setup Section includes screens for adjusting: Set Points, Cascade, and BMS. The Information Section provides information about the hardware and software including the current software version of the interface and the version of the appliance control. The Setting Section enables several interface setup features including: Time Setup, Temperature Unit Select, System Update, and Wi-Fi Setup.

13 Maintenance

Maintenance and annual startup

Table 13A Service and Maintenance Schedules

| Service technician (see the following pages for instructions) | | Owner maintenance | |
|---|--|---|--|
| ANNUAL START-UP | General: | | Daily |
| | <ul style="list-style-type: none"> • Address reported problems • Inspect interior; clean and vacuum if necessary; • Clean condensate trap and fill with fresh water • Check for leaks (water, gas, flue, condensate) • Verify flue and air lines in good condition and sealed tight • Check system water pressure/system piping/expansion tank • Check control settings • Check ignition and flame sense electrodes (sand off any deposits; clean and reposition) • Check wiring and connections • Perform combustion start-up checkout and performance verification per Section 11 of this manual. • Flame inspection (stable, uniform) • Flame signal (at least 10 microamps at high fire) • Clean the heat exchanger if flue temperature is more than 54°F above return water temperature. | | <ul style="list-style-type: none"> • Check water heater area |
| | If combustion or performance indicate need: | | Monthly |
| <ul style="list-style-type: none"> • Clean heat exchanger • Remove and clean burner using compressed air only • Clean the blower wheel | | <ul style="list-style-type: none"> • Check vent piping • Check air piping • Check air and vent termination screens • Check relief valve • Check condensate drain system • Check automatic air vents • Remove debris from Y-strainer per manufacturer's instructions • Check building recirculation filter (if filter required) • Check for and clean any debris or obstruction from bird screens (if equipped) | |
| | | Every 6 months | |
| | | | <ul style="list-style-type: none"> • Check water heater piping (gas and water) for leaks • Operate relief valve • Check water chemistry |

13 Maintenance *(continued)*

WARNING Follow the service and maintenance procedures given throughout this manual and in component literature shipped with the water heater. Failure to perform the service and maintenance could result in damage to the water heater or system. Failure to follow the directions in this manual and component literature could result in severe personal injury, death, or substantial property damage.

WARNING The water heater should be inspected annually only by a qualified service technician. In addition, the maintenance and care of the water heater designated in Table 13A and explained on the following pages must be performed to assure maximum water heater efficiency and reliability. Failure to service and maintain the water heater and system could result in equipment failure.

WARNING Electrical shock hazard – Turn off power to the water heater before any service operation on the water heater except as noted otherwise in this instruction manual. Failure to turn off electrical power could result in electrical shock, causing severe personal injury or death.

Address reported problems

1. Inspect any problems reported by the owner and correct before proceeding.

Inspect water heater area

1. Verify that water heater area is free of any combustible materials, gasoline and other flammable vapors and liquids.
2. Verify that air intake area is free of any of the contaminants listed in Section 1 - Determine Water Heater Location. If any of these are present in the water heater intake air vicinity, they must be removed. If they cannot be removed, reinstall the air and vent lines per this manual and the Regent Water Heater Service Manual.

Inspect water heater interior

1. Open the front door and inspect the interior of the water heater.
2. Vacuum any sediment from inside the water heater and components. Remove any obstructions.

Clean condensate trap

1. Inspect the condensate drain line, condensate PVC fittings, and condensate trap.


Monthly inspection:

1. The condensate trap should be inspected monthly to ensure the trap is properly installed and connected to the condensate pipe under the appliance, see FIG. 13-1.
2. The condensate line should be inspected monthly for obstructions, making sure it allows free flow for condensate to drain.
3. Inspect the neutralizing kit (if installed) monthly to ensure the condensate is draining properly, and there is still an adequate amount of neutralizing agent available.

Annual cleaning:

1. The condensate trap should be cleaned at least once annually, or at the end of each heating season, by removing the bottom cap and cleaning out any sediment that exists.
2. The provided condensate trap is equipped with a ball that acts as a seal against harmful flue gases escaping in case there is no condensate in the trap. If this ball is not present, flue gases may be able to pass through the trap when there is no condensate present, resulting in an unsafe environment. It is important to check and make sure the ball is still located in the trap, acting as a seal against flue gases at least once annually and after every cleaning.
3. After the condensate trap is cleaned or serviced, it must be checked to ensure that it is installed and draining properly. Reference Section 10 - Condensate Disposal for installation instructions.

 Figure 13-1 Condensate Trap

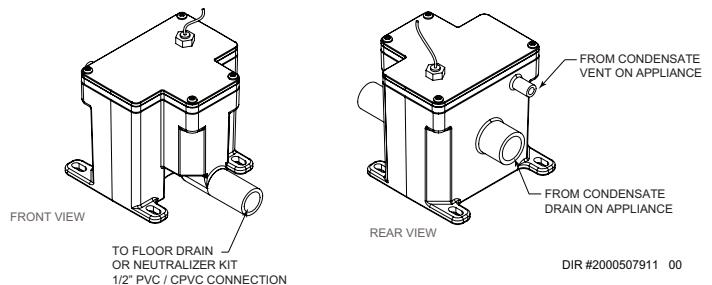

WARNING

The condensate trap must be filled with water during all times of water heater operation to avoid flue gas emission from the condensate drain line. Failure to fill the trap could result in severe personal injury or death.

13 Maintenance

Check all piping for leaks



Eliminate all system or water heater leaks. Leaking water may cause severe property damage.

1. Inspect all water and gas piping and verify to be leak free.
2. Look for signs of leaking lines and correct any problems found.
3. Check gas line using the procedure found in Section 8 - Gas Connections.

Flue vent system and air piping

1. Visually inspect the entire flue gas venting system and air piping for blockage, deterioration or leakage. Repair any joints that show signs of leakage. Verify that air inlet pipe is connected and properly sealed.
2. Verify that water heater vent discharge and air intake are clean and free of obstructions.
3. Verify that bird screens are clean and free of debris or obstruction.



Failure to inspect for the above conditions and have them repaired can result in severe personal injury or death.

Check water system

1. Verify all system components are correctly installed and operational.
2. Check the cold fill pressure for the system. Verify it is correct (must be a minimum of 30 PSI).
3. Watch the system pressure as the water heater heats up (during testing) to ensure pressure does not rise too high. Excessive pressure rise indicates expansion tank sizing or performance problem.
4. Inspect automatic air vents and air separators. Remove air vent caps and briefly push valve to flush vent. Replace caps. Make sure vents do not leak. Replace any leaking vents.

Check expansion tank

1. Expansion tanks provide space for water to move in and out as the heating system water expands due to temperature increase or contracts as the water cools. Tanks may be open, closed or diaphragm or bladder type. See Section 7 - System Piping for suggested best location of expansion tanks and air eliminators.

Check water heater relief valve

1. Inspect the relief valve and lift the lever to verify flow. Before operating any relief valve, ensure that it is piped with its discharge in a safe area to avoid severe scald potential. Read Section 7 - System Piping before proceeding further.



Safety relief valves should be re-inspected AT LEAST ONCE EVERY THREE YEARS, by a licensed plumbing contractor or authorized inspection agency, to ensure that the product has not been affected by corrosive water conditions and to ensure that the valve and discharge line have not been altered or tampered with illegally. Certain naturally occurring conditions may corrode the valve or its components over time, rendering the valve inoperative. Such conditions are not detectable unless the valve and its components are physically removed and inspected. This inspection must only be conducted by a plumbing contractor or authorized inspection agency – not by the owner. Failure to re-inspect the water heater relief valve as directed could result in unsafe pressure buildup, which can result in severe personal injury, death, or substantial property damage.



Following installation, the valve lever must be operated AT LEAST ONCE A YEAR to ensure that waterways are clear. Certain naturally occurring mineral deposits may adhere to the valve, rendering it inoperative. When manually operating the lever, water will discharge and precautions must be taken to avoid contact with hot water and to avoid water damage. Before operating lever, check to see that a discharge line is connected to this valve directing the flow of hot water from the valve to a proper place of disposal. Otherwise severe personal injury may result. If no water flows, valve is inoperative. Shut down the water heater until a new relief valve has been installed.

2. After following the above warning directions, if the relief valve weeps or will not seat properly, replace the relief valve. Ensure that the reason for relief valve weeping is the valve and not over-pressurization of the system due to expansion tank waterlogging or undersizing.

Inspect ignition and flame sense electrodes

1. Remove the ignition and flame sense electrodes from the water heater heat exchanger access cover.
2. Remove any deposits accumulated on the ignition/flame sense electrode using sandpaper. If the electrodes cannot be cleaned satisfactorily, replace with new ones.
3. Replace ignition/flame sense electrode, making sure gasket is in good condition and correctly positioned.

13 Maintenance *(continued)*

Check ignition ground wiring

1. Inspect water heater ground wire from the heat exchanger access cover to ground terminal strip.
2. Verify all wiring is in good condition and securely attached.
3. Check ground continuity of wiring using continuity meter.
4. Replace ground wires if ground continuity is not satisfactory.

Check all water heater wiring

1. Inspect all water heater wiring, making sure wires are in good condition and securely attached.

Check control settings

1. Set the SMART TOUCH control module display to Parameter Mode and check all settings. See Section 1 of the Regent Service Manual. Adjust settings if necessary. See Section 1 of the Regent Service Manual for adjustment procedures.
2. Check settings of external limit controls (if any) and adjust if necessary.


Perform start-up and checks

1. Start water heater and perform checks and tests specified in Section 11 - Start-up.
2. Verify cold fill pressure is correct and that operating pressure does not go too high.

Check burner flame

1. Inspect flame through observation window.
2. If the flame is unsatisfactory at either high fire or low fire, turn off water heater and allow water heater to cool down. Remove the burner and clean it thoroughly using a vacuum cleaner or compressed air. Do not use compressed air to clean burner if performed inside a building.
3. Remove the burner, reference FIG. 13-2.
4. When replacing the burner, ensure gasket is in good condition and positioned correctly (FIG. 13-2).

 Figure 13-2 Burner Assembly

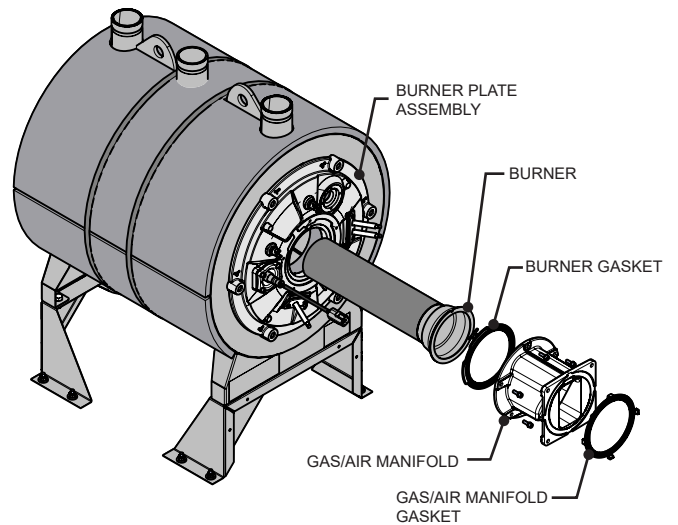

Check flame signal

1. The Regent water heater is equipped with two flame sense electrodes. At high fire, the flame signal shown on the display, labeled "Flame 2", should be at least 10 microamps. As the water heater modulation decreases to low fire, the value shown on the display, labeled "Flame 1", should increase.
2. A lower flame signal may indicate a fouled or damaged flame sense electrode. If cleaning the flame sense electrode does not improve, ground wiring is in good condition, and ground continuity is satisfactory, replace the flame sense electrode.
3. See Section 3 - Troubleshooting in the Regent Service Manual for other procedures to deal with low flame signal.

Check O2 sensor

1. A self-diagnosis feature is programmed into the O2 sensor control. If there is a problem with the O2 sensor, the appropriate error will be displayed. The unit will continue to operate on the last known combustion curve. Contact a qualified service technician to inspect and replace the O2 sensor as needed.

Review with owner

1. Emphasize the need to perform the maintenance schedule specified in this manual.
2. Remind the owner of the need to call a licensed contractor should the water heater or system exhibit any unusual behavior.
3. Remind the owner to follow the proper shutdown procedure and to schedule an annual start-up.

13 Maintenance

Cleaning heat exchanger

For recommended materials; including brush, appropriate extension(s), refractory cover, and detailed instructions see Table 13B - Heat Exchanger Cleaning Kits.

1. Shut down water heater:
 - Follow the "To Turn Off Gas to Appliance" instructions for the water heater in Section 11 - Startup.
 - Do not drain the water heater unless it will be exposed to freezing temperatures. If using freeze protection fluids in the system, do not drain.
2. Allow time for the water heater to cool to room temperature if it has been firing.
3. Remove the nuts securing the heat exchanger access cover to the heat exchanger and set aside.
4. Remove the heat exchanger access cover, burner, and gas/air arm assembly.

WARNING The water heater contains ceramic fiber materials. Use care when handling these materials per instructions in the Service Manual. Failure to comply could result in severe personal injury.


5. Remove the condensate hose from the heat exchanger end. Connect a field supplied 3/4" diameter hose to a drain pan. Using field supplied means, cover the refractory in the back of the combustion chamber of the heat exchanger.
6. Use a vacuum cleaner to remove any accumulation on the water heater heating surfaces. Do not use any solvent.
7. Brush the heat exchanger while dry using a nylon bristle brush. **Caution:** DO NOT use a metal brush. Re-vacuum the heat exchanger.
8. Finish cleaning using a clean cloth dampened with warm water. Rinse out debris with a low pressure water supply.
9. Allow the heat exchanger to thoroughly dry.
10. Remove the field supplied rear refractory cover from the back of the combustion chamber of the heat exchanger and reassemble.
11. Close isolation valves on piping to isolate water heater from system. Attach a hose to the water heater drain and flush water heater thoroughly with clean water by using purging valves to allow water to flow through the water makeup line to the water heater.
12. Perform start-up and check-out procedures in the Check Flame and Combustion - Section 11 - Startup on page 60 of this manual.
13. Replace the access cover and restore water heater to operation.

Table 13B Heat Exchanger Cleaning Kit

| Model | Kit Number | Part Number | Component Description |
|------------|------------|-------------|--|
| 500 - 1000 | 100157628 | 100333410 | Rear Refractory Cover, 10.75" Diameter |
| | | 100208804 | Rear Refractory Cover, 7.25" Diameter |
| | | 100208309* | Nylon 4" Wheel Brush* |
| | | 100208310 | 1/4" x 12" Drill Extension |
| | | 100208311 | 1/4" x 24" Drill Extension |

CAUTION * Do NOT use a metal brush. Only use the kit provided brush or an equivalent replacement nylon brush.

 
Figure 13-3 Rope Gasket - Heat Exchanger Door

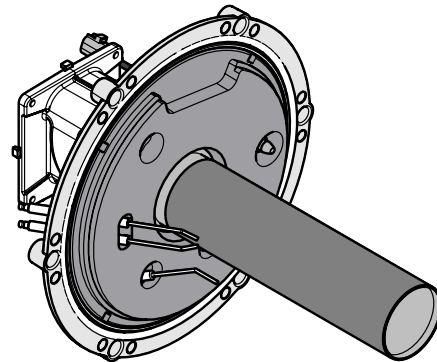

NOTICE Rope gasket is intended for sealing combustion (see FIG. 13-3). If gasket is damaged DO NOT reuse, the rope gasket must be replaced. See the Regent Replacement Parts List for replacement rope gasket.

14 Diagrams

 Figure 14-1 Ladder Diagram

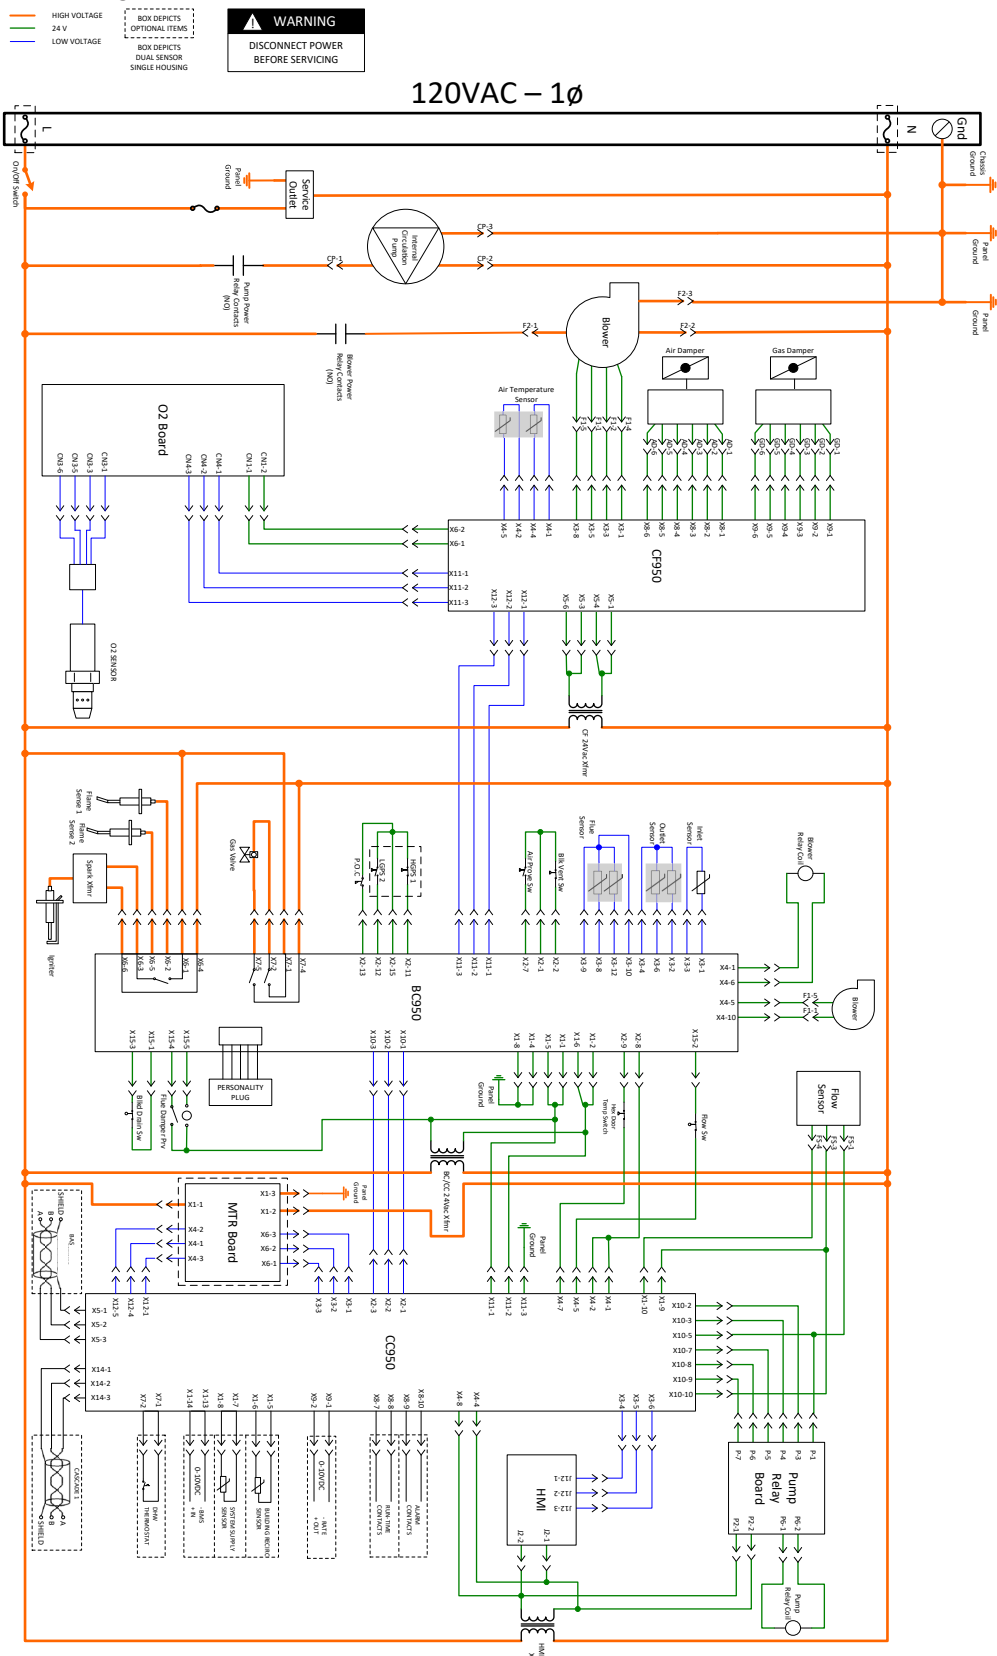

NOTES:
 1. All wiring must be installed in accordance with local, state, provincial and national code requirements per either N.E.C. in USA or C.S.A. in Canada.
 2. If any original equipment wire as supplied with the appliance must be replaced, it must be replaced with wire having same wire gauge (AWG) and rated for a minimum of 95°C. Exceptions: Replacement high voltage spark lead and shielded cables must be purchased from the factory. Use of a non-approved spark lead or shielded cables can lead to operational problems which could result in non-repairable damage to the integrated controller or other components.
 3. Actual connector block locations may vary from those shown on diagrams. Refer to actual components for proper connector block locations when using diagrams to troubleshoot unit.

LADDER DIAGRAM
 100398746 REV A

Notes

Revision Notes: *Revision A (PCP #3000070982 / CN #500056370) initial release.*

Revision B (PCP 3000071383 / CN #500056726) reflects updates to figure 9-4.