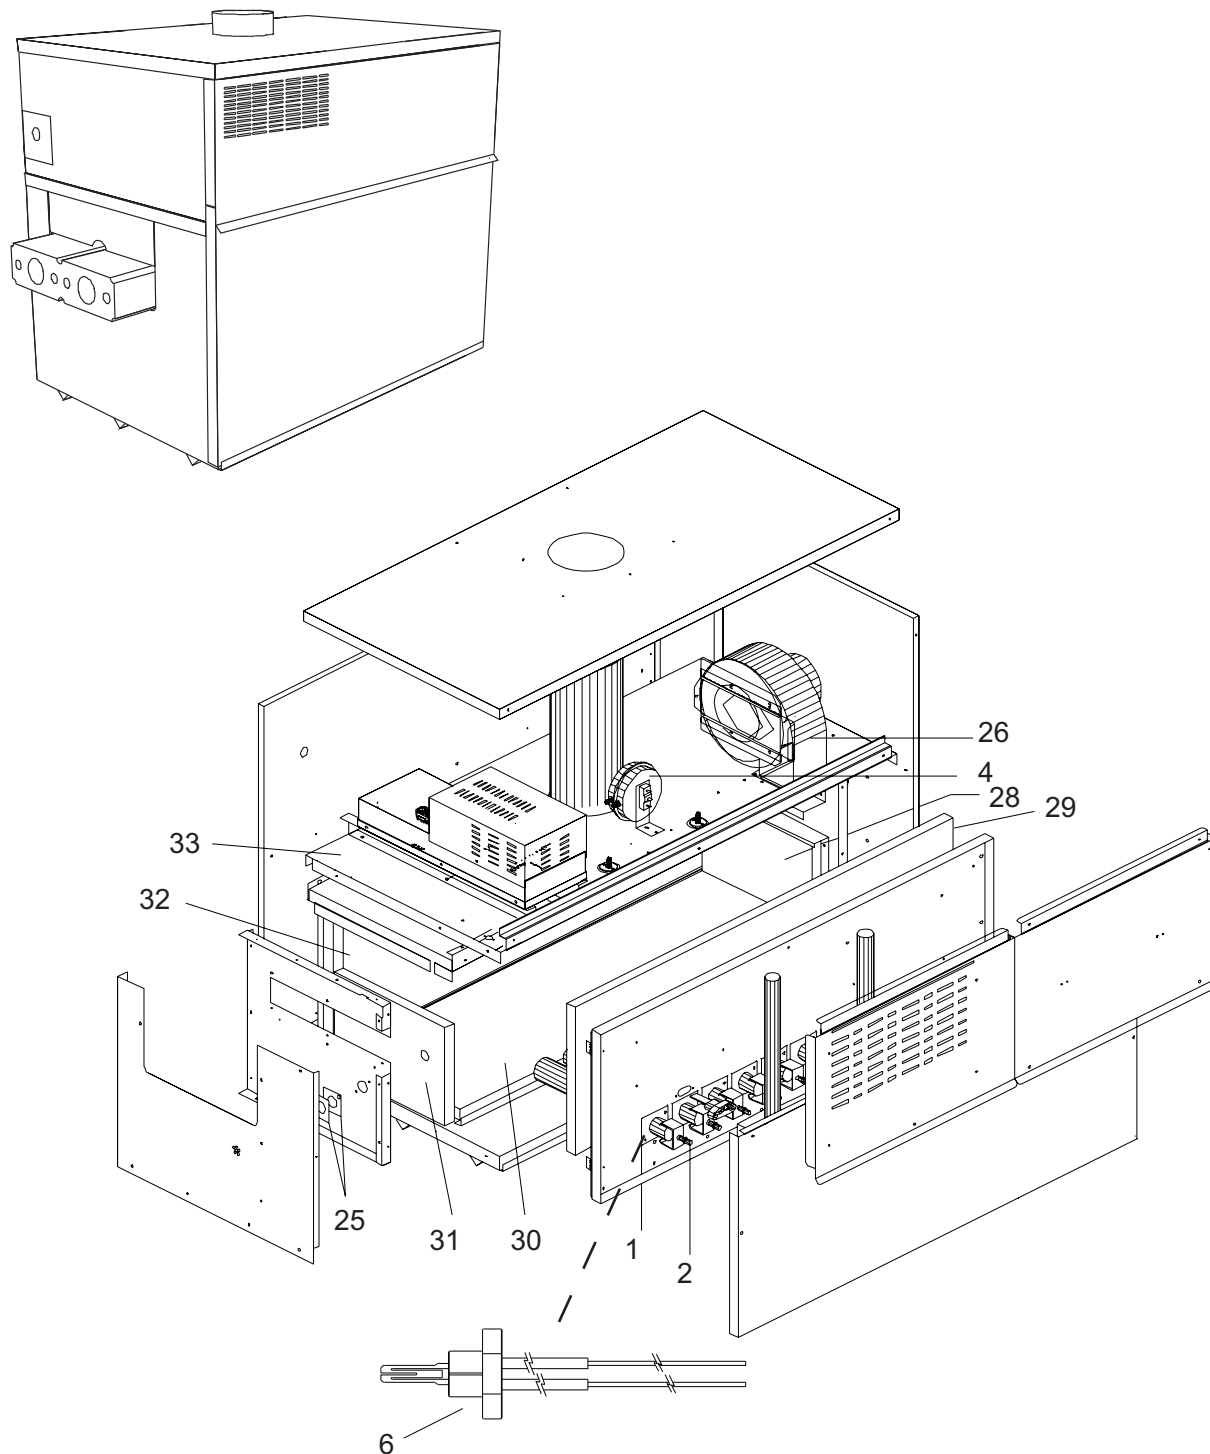




**PARTS & SERVICE DEPARTMENT**

Nashville, Tennessee


615-889-8900 • Fax: 615-547-1000

www.Lochinvar.com**Replacement Parts List****Copper-Fin®****Boilers — Water Heaters &
Pool Heaters****CB—CW—CS 495 -745****Prior to Serial #G04H00166418**


CONTROL PANEL

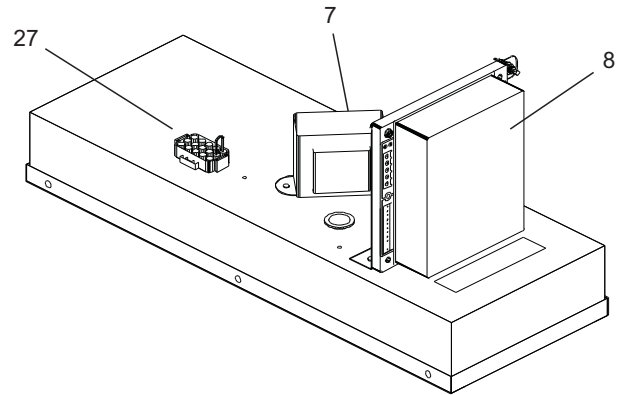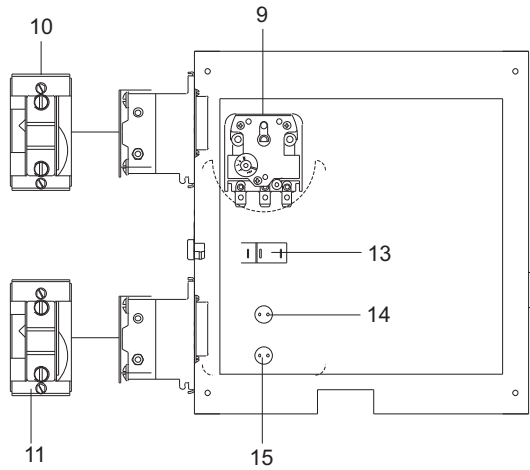

HEAT EXCHANGER ASSEMBLY

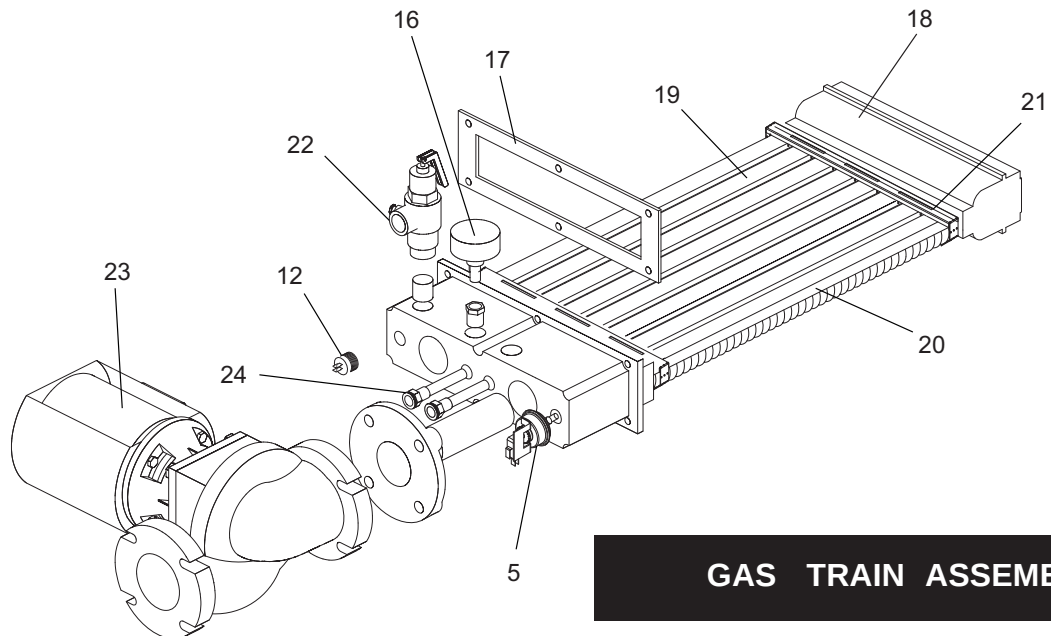

GAS TRAIN ASSEMBLY

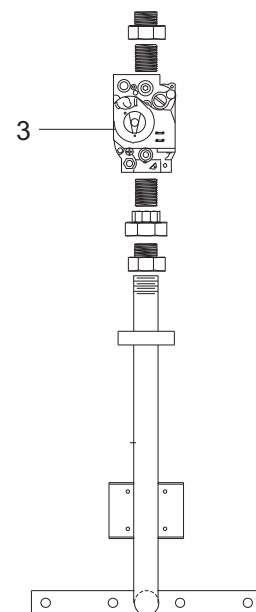

ITEM NO.	PART	NO.	DESCRIPTION	MODEL NO.
BURNERS				
1		Model	BNR2400	BNR3400
BNR2400 Main burner		495 NAT	9 ea	1ea
		495 LP	8 ea	1ea
BNR3400 Main Burner w/ Barb Pressure Tap.		645 NAT	12 ea	1ea
		645 LP	11 ea	1ea
BNR2401 Main Burner LP only* *Located under the Hot Surface Ignitor.		745 NAT	14 ea	1ea
		745 LP	13 ea	1ea
GAS TRAIN ASSEMBLIES				
2	ORF2401	ORIFICE, NAT.		ALL
2	ORF2402	ORIFICE, LPG.		ALL
3	VAL3403	GAS VALVE, NAT		ALL
3	VAL3404	GAS VALVE, LPG		ALL
CONTROLS & GAUGES				
4	PRS30023	LOW AIR PRESSURE SWITCH		ALL
5	PRS2406	WATER PRESSURE SWITCH		CS
6	PLT3400	HOT SURFACE IGNITOR		ALL
7	TRF2005	TRANSFORMER 75 VA		ALL
8	RLY3428	IGNITION MODULE		ALL
9	TST2701	THERMOSTAT, OPERATOR		ALL
10	TST2900	THERMOSTAT, HIGH LIMIT		CB/CS
10	TST30010	THERMOSTAT HIGH LIMT		CW
11	TST30009	THERMOSTAT LIMIT		CW
-	TST2403	THERMOSTAT CONTROL BOARD		CS
-	TST2404	POTENTIOMETER		CS
-	TST3015	TEMPERATURE SENSOR		CS
12	HLC2510	HIGH LIMIT 200°		CS
-	HLC2503	HIGH LIMIT 110°		CS
-	TST20027	THERMOSTAT, OPERATOR - HIGH LIMIT (BYPASS LOOP) PRIOR TO L974110		CS
13	MSC2426	ROCKER SWITCH		ALL
-	MSC2023	TRIAL LIGHT, AMBER 120V (BEGINNING SERIAL # G96741)		ALL
-	MSC2424	LOW AIR LIGHT, AMBER 28V		ALL
14	MSC2028	HEATING LIGHT, GREEN		ALL
15	MSC2026	FLAME FAILURE LIGHT, RED 24V		ALL
16	GTP2900	TEMPERATURE AND PRESSURE GAUGE		CB
16	GTP3000	TEMPERATURE GAUGE 2"		CW/CS
HEAT EXCHANGERS				
17	GKT2400	GASKET HEAT SHIELD		ALL
18	HEX3402	HEAT EXCHANGER (CW/CS-BEFORE SERIAL #F00 & ALL CB)		CB/CW/CS 495
18	HEX3403	HEAT EXCHANGER (CW/CS-BEFORE SERIAL #F00 & ALL CB)		CB/CW/CS 645
18	HEX3404	HEAT EXCHANGER (CW/CS-BEFORE SERIAL #F00 & ALL CB)		CB/CW/CS 745
18	HEX3012	HEAT EXCHANGER (AFTER SERIAL # F00)		CW/CS 495
18	HEX3013	HEAT EXCHANGER (AFTER SERIAL # F00)		CW/CS 645
18	HEX3014	HEAT EXCHANGER (AFTER SERIAL # F00)		CW/CS 745
19	JKD2252	V-BAFFLE		495
19	JKD2253	V-BAFFLE		645
19	JKD2254	V-BAFFLE		745
20	JKD6450	FRAME RUNNER V-BAFFLE		495
20	JKD6451	FRAME RUNNER V-BAFFLE		645
20	JKD6452	FRAME RUNNER V-BAFFLE		745
21	JKD6186	FRAME END		ALL
22	RLV2017	RELIEF VALVE, TEMPERATURE AND PRESSURE		CW/CS
22	RLV2001	RELIEF VALVE, PRESSURE ONLY		ALL CB
PUMPS				
23	ARM3044PBF	PUMP (BEFORE SERIAL # L01)		CW
23	ARM3044PAB	PUMP (AFTER SERIAL # L01)		CW
23	ARM3044PABTE	PUMP		CS
PLEASE HAVE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS. NOTE: CB = Boiler CW = Water Heater				

